

ENGINE MECHANICAL

SECTION **EM**

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

CONTENTS

	QG	
PRECAUTIONS	4	
Parts Requiring Angular Tightening.....	4	
Liquid Gasket Application Procedure	4	
PREPARATION	5	
Special Service Tools	5	
Commercial Service Tools	7	
NOISE, VIBRATION AND HARSHNESS (NVH)		
TROUBLESHOOTING	9	
NVH Troubleshooting - Engine Noise	9	
OUTER COMPONENT PARTS	11	
Removal and Installation	11	
MEASUREMENT OF COMPRESSION PRESSURE	14	
DRIVE BELTS	15	
Checking	15	
AIR CLEANER	17	
Cleaning and Changing	17	
VISCOUS PAPER TYPE	17	
DRY PAPER TYPE	17	
SPARK PLUG	18	
Checking and Changing	18	
OIL PAN	19	
Components	19	
Removal	19	
Installation	20	
TIMING CHAIN	22	
Components	22	
Removal	23	
Inspection	26	
Installation	27	
OIL SEAL	31	
Replacement	31	
VALVE OIL SEAL	31	
FRONT OIL SEAL	31	
REAR OIL SEAL	32	
CYLINDER HEAD	33	
Components	33	
Removal	34	
Disassembly	36	

Inspection	36	
CYLINDER HEAD DISTORTION	36	
CAMSHAFT VISUAL CHECK	36	
CAMSHAFT RUNOUT	37	
CAMSHAFT CAM HEIGHT	37	
CAMSHAFT JOURNAL CLEARANCE	37	
CAMSHAFT END PLAY	38	
CAMSHAFT SPROCKET RUNOUT	38	
VALVE GUIDE CLEARANCE	38	
VALVE GUIDE REPLACEMENT	39	
VALVE SEATS	40	
REPLACING VALVE SEAT FOR SERVICE PARTS	40	
VALVE DIMENSIONS	41	
VALVE SPRING	41	
VALVE LIFTER AND VALVE SHIM	42	
Valve Clearance	42	
CHECKING	42	
ADJUSTING	43	
Assembly	45	
Installation	45	
ENGINE ASSEMBLY	50	
Removal and Installation	50	
REMOVAL	51	
INSTALLATION	52	
CYLINDER BLOCK	53	
Components	53	
Removal and Installation	54	
Disassembly	54	
PISTON AND CRANKSHAFT	54	
Inspection	55	
PISTON AND PISTON PIN CLEARANCE	55	
PISTON RING SIDE CLEARANCE	55	
PISTON RING END GAP	56	
CONNECTING ROD BEND AND TORSION	56	
CYLINDER BLOCK DISTORTION AND WEAR	57	
PISTON-TO-BORE CLEARANCE	57	
CRANKSHAFT	58	
BEARING CLEARANCE	59	
CONNECTING ROD BUSHING CLEARANCE (SMALL END)	61	

CONTENTS (Cont'd)

REPLACEMENT OF CONNECTING ROD		ALTERNATOR & WATER PUMP BELT	87
BUSHING (SMALL END)	61	Removal	87
FLYWHEEL/DRIVE PLATE RUNOUT	61	Installation	88
Assembly	62	AIR CLEANER	89
PISTON	62	Changing Air Cleaner Filter	89
CRANKSHAFT	63	VISCOUS PAPER TYPE	89
SERVICE DATA AND SPECIFICATIONS (SDS)	66	OIL PAN	90
General Specifications	66	Components	90
Compression Pressure	66	Removal	90
Belt Deflection	67	Installation	92
Spark Plug	67	TIMING CHAIN	95
Cylinder Head	67	Secondary Timing Chain	95
Valve	68	REMOVAL	95
VALVE	68	INSPECTION	97
VALVE SPRING	68	INSTALLATION	97
VALVE LIFTER	68	Primary Timing Chain	100
VALVE CLEARANCE	69	REMOVAL	101
VALVE GUIDE	69	INSPECTION	103
AVAILABLE SHIMS	69	INSTALLATION	103
VALVE SEAT	72	INTAKE MANIFOLD	108
VALVE SEAT RESURFACE LIMIT	73	Removal and Installation	108
Camshaft and Camshaft Bearing	73	PREPARATIVE WORK	108
Cylinder Block	74	FUEL PIPING	109
Piston, Piston Ring and Piston Pin	74	INTAKE MANIFOLD	109
PISTON	74	EGR VOLUME CONTROL VALVE	109
PISTON RING	75	WATER HOSE	109
PISTON PIN	75	Inspection	110
Connecting Rod	75	INTAKE MANIFOLD	110
Crankshaft	76	SWIRL CONTROL VALVE	110
Main Bearing	76	EXHAUST MANIFOLD	111
STANDARD	76	Removal and Installation	111
UNDERSIZE	76	PREPARATIVE WORK	111
Connecting Rod Bearing	76	EXHAUST MANIFOLD	111
STANDARD SIZE	76	EXHAUST MANIFOLD GASKET	112
UNDERSIZE	77	Inspection	112
Bearing Clearance	77	EXHAUST MANIFOLD	112
Miscellaneous Components	77	ROCKER COVER	113
		Removal and Installation	113
		PREPARATIVE WORK	113
		ROCKER COVER	113
		CYLINDER HEAD	115
		Components	115
		Removal	116
		PREPARATIVE WORK	116
		CAMSHAFT	116
		CYLINDER HEAD	117
		Disassembly	117
		Inspection	118
		CYLINDER HEAD DISTORTION	118
		CAMSHAFT VISUAL CHECK	119
		CAMSHAFT RUNOUT	119
		CAMSHAFT CAM HEIGHT	119
		CAMSHAFT JOURNAL CLEARANCE	119
		CAMSHAFT END PLAY	120
		CAMSHAFT SPROCKET RUNOUT	120

YD

PRECAUTIONS	78
Parts Requiring Angular Tightening	78
Liquid Gasket Application Procedure	78
PREPARATION	79
Special Service Tools	79
Commercial Service Tools	81
NOISE, VIBRATION AND HARSHNESS (NVH)	
TROUBLESHOOTING	83
NVH Troubleshooting - Engine Noise	83
MEASUREMENT OF COMPRESSION PRESSURE	84
DRIVE BELTS	86
Inspection	86
Adjustment	86
AIR CONDITIONER COMPRESSOR BELT	87



CONTENTS (Cont'd)

VALVE GUIDE CLEARANCE	120	
VALVE GUIDE REPLACEMENT	121	
VALVE SEATS	122	
REPLACING VALVE SEAT FOR SERVICE PARTS ..	122	
VALVE DIMENSIONS	124	
VALVE SPRING	124	
VALVE LIFTER	124	
Assembly	125	
Installation	125	
CYLINDER HEAD GASKET SELECTION	125	
CYLINDER HEAD BOLT DEFORMATION CHECK ..	126	
CYLINDER HEAD-TO-BLOCK DIFFERENCE		
CHECK	127	
LIQUID GASKET APPLICATION ON REAR CHAIN		
CASE	127	
CYLINDER HEAD INSTALLATION	127	
GLOW PLUG INSTALLATION	127	
CAMSHAFT INSTALLATION	128	
Valve Clearance	129	
CHECKING	129	
ADJUSTING	130	
ENGINE ASSEMBLY	133	
Removal and Installation	133	
REMOVAL	134	
INSTALLATION	135	
CYLINDER BLOCK	136	
Components	136	
Removal and Installation	137	
Disassembly	137	
PISTON AND CRANKSHAFT	137	
Inspection	140	
CRANKSHAFT END PLAY	140	
CONNECTING ROD SIDE CLEARANCE	140	
PISTON AND PISTON PIN CLEARANCE	140	
PISTON RING SIDE CLEARANCE	140	
PISTON RING END GAP	141	
CONNECTING ROD BEND AND TORSION	142	
CYLINDER BLOCK DISTORTION AND WEAR	142	
PISTON-TO-BORE CLEARANCE	143	
CRANKSHAFT	144	
MAIN BEARING HOUSING INNER DIAMETER	145	
BEARING CLEARANCE	145	
MAIN BEARING CRASH HEIGHT	149	
MAIN BEARING CAP BOLT DEFORMATION	149	GI
CONNECTING ROD BUSHING CLEARANCE		
(SMALL END)	149	MA
REPLACEMENT OF CONNECTING ROD		
BUSHING (SMALL END)	150	EM
CONNECTING ROD BOLT DEFORMATION	150	
FLYWHEEL RUNOUT	150	
OIL JET	151	
OIL JET RELIEF VALVE	151	
Assembly	151	LC
PISTON	151	
CRANKSHAFT	152	EC
REPLACEMENT OF PILOT BUSHING	155	
SERVICE DATA AND SPECIFICATIONS (SDS)	156	
General Specifications	156	FE
Compression Pressure	156	
Belt Deflection	156	CL
Cylinder Head	156	
Valve	157	MT
VALVE	157	
VALVE CLEARANCE	157	AT
AVAILABLE SHIMS	157	
VALVE SPRING	158	AX
VALVE LIFTER	158	
VALVE GUIDE	159	SU
Valve Seat	160	BR
Camshaft and Camshaft Bearing	162	
Cylinder Block	163	ST
Piston, Piston Ring and Piston Pin	163	
AVAILABLE PISTON	163	RS
PISTON RING	164	
PISTON PIN	164	BT
Connecting Rod	164	HA
Crankshaft	164	SC
Available Main Bearing	165	EL
UNDERSIZE	165	
Available Connecting Rod Bearing	165	IDX
CONNECTING ROD BEARING	165	
UNDERSIZE	166	
Miscellaneous Components	166	
BEARING CLEARANCE	166	

Parts Requiring Angular Tightening

NJEM0001

- Use an angle wrench for the final tightening of the following engine parts:
 - a) Cylinder head bolts
 - b) Main bearing cap bolts
 - c) Connecting rod cap nuts
- Do not use a torque value for final tightening.
- The torque value for these parts are for a preliminary step.
- Ensure thread and seat surfaces are clean and coated with engine oil.

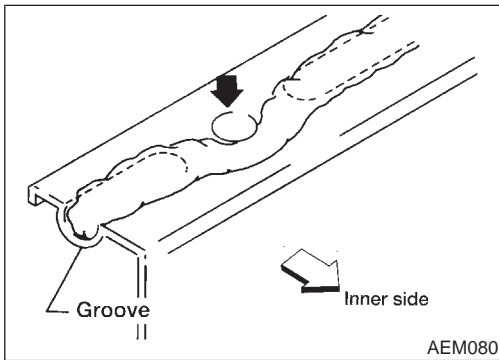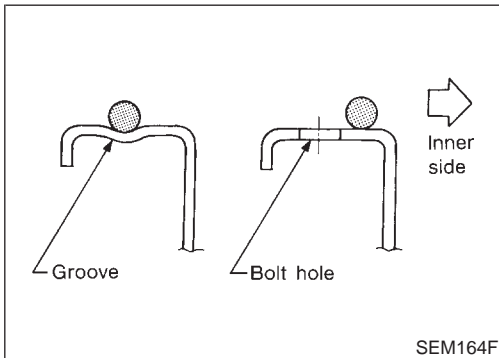







Liquid Gasket Application Procedure

NJEM0002








1. Use a scraper to remove old liquid gasket from mating surfaces and grooves. Also, completely clean any oil from these areas.
2. Apply a continuous bead of liquid gasket to mating surfaces. (Use Genuine Liquid Gasket or equivalent.)
 - For oil pan, be sure liquid gasket diameter is 3.5 to 4.5 mm (0.138 to 0.177 in).
 - For areas except oil pan, be sure liquid gasket diameter is 2.0 to 3.0 mm (0.079 to 0.118 in).
3. Apply liquid gasket around the inner side of bolt holes (unless otherwise specified).
4. Assembly should be done within 5 minutes after coating.
5. Wait at least 30 minutes before refilling engine oil and engine coolant.

Special Service Tools

NJEM0003

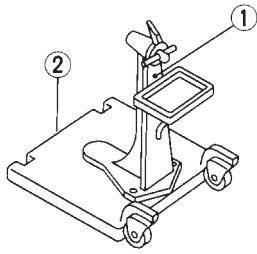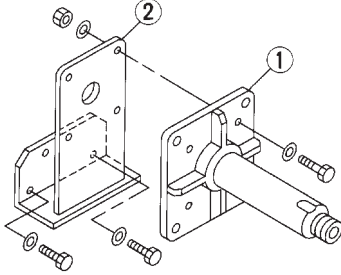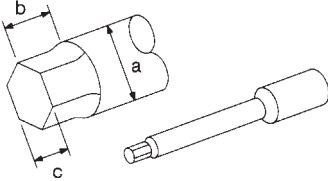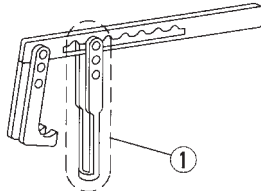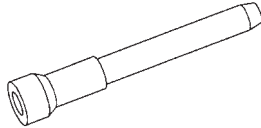
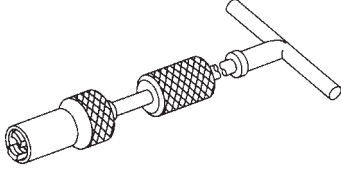
Tool number Tool name	Description	
ST0501S000 Engine stand assembly 1 ST05011000 Engine stand 2 ST05012000 Base	Disassembling and assembling 	GI MA EM LC EC FE CL MT
Engine attachment assembly 1 KV10106500 Engine attachment 2 KV10113300 Sub-attachment	Overhauling engine 	AT AX SU
ST10120000 Cylinder head bolt wrench	Loosening and tightening cylinder head bolt a: 13 mm (0.51 in) dia. b: 12 mm (0.47 in) c: 10 mm (0.39 in) 	BR ST RS
KV10116200 Valve spring compres- sor 1 KV10115900 Attachment	Disassembling valve mechanism 	BT HA SC EL IDX
KV10115600 Valve oil seal drift	Installing valve oil seal 	
KV10107902 Valve oil seal puller	Displacement valve lip seal 	

Special Service Tools (Cont'd)

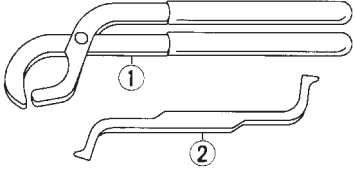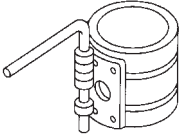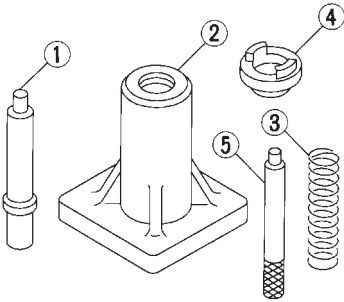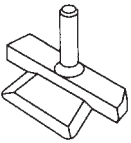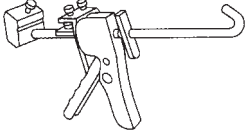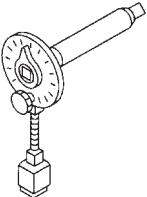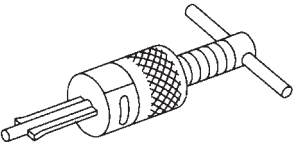Tool number Tool name	Description
KV101151S0 Lifter stopper set 1 KV10115110 Camshaft pliers 2 KV10115120 Lifter stopper	 Changing shims NT041
EM03470000 Piston ring compressor	 Installing piston assembly into cylinder bore NT044
KV10107400 Piston pin press stand 1 KV10107310 Center shaft 2 ST13040020 Stand 3 ST13040030 Spring 4 KV10107320 Cap 5 ST13040050 Drift	 Disassembling and assembling piston pin NT013
KV10111100 Seal cutter	 Removing oil pan NT046
WS39930000 Tube presser	 Pressing the tube of liquid gasket NT052
KV10112100 Angle wrench	 Tightening bolts for bearing cap, cylinder head, etc. NT014
ST16610001 Pilot bushing puller	 Removing pilot bushing NT045





PREPARATION

QG
Special Service Tools (Cont'd)




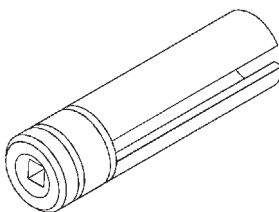
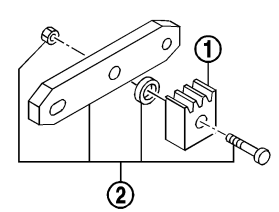
Tool number Tool name	Description	
Front (heated) oxygen sensor wrench	Loosening or tightening heated oxygen sensor with 22 m (0.87 in) hexagon nut	GI MA EM
	 NT379	
KV101056S0* Rear gear stopper 1 KV10105620 Adapter 2 KV10105610 Plate assembly	Preventing crankshaft from rotating	LC EC FE CL MT AT
	 NT773	

Commercial Service Tools

NJEM0004

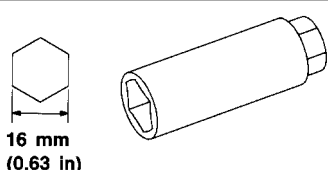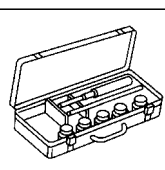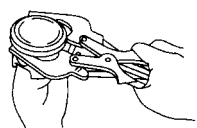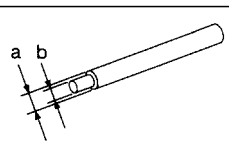Tool name	Description	
Spark plug wrench	Removing and installing spark plug	AX SU BR
	 NT047	
Valve seat cutter set	Finishing valve seat dimensions	ST RS
	 NT048	
Piston ring expander	Removing and installing piston ring	BT HA
	 NT030	
Valve guide drift	Removing and installing valve guide Intake & Exhaust: a: 9.5 mm (0.374 in) dia. b: 5.5 mm (0.217 in) dia.	SC EL IDX
	 NT015	

Commercial Service Tools (Cont'd)

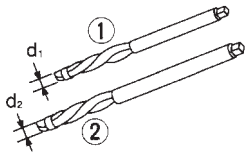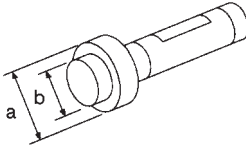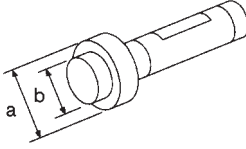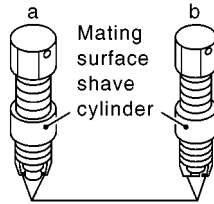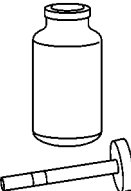Tool name	Description
Valve guide reamer	 <p>Reaming valve guide 1 or hole for oversize valve guide 2 Intake & Exhaust: d₁: 5.5 mm (0.217 in) dia. d₂: 9.685 mm (0.3813 in) dia.</p> <p>NT016</p>
Front oil seal drift	 <p>Installing front oil seal a: 52 mm (2.05 in) dia. b: 40 mm (1.57 in) dia.</p> <p>NT049</p>
Rear oil seal drift	 <p>Installing rear oil seal a: 103 mm (4.06 in) dia. b: 84 mm (3.31 in) dia.</p> <p>NT049</p>
Oxygen sensor thread cleaner	 <p>Reconditioning the exhaust system threads before installing a new oxygen sensor. Use with anti-seize lubricant shown below. a: 18 mm dia. with a pitch of 1.5 mm for Zirconia Oxygen Sensor b: 12 mm dia. with a pitch of 1.25 mm for Titania Oxygen Sensor</p> <p>NT778</p>
Anti-seize lubricant (Permatex™ 133AR or equivalent meeting MIL specification MIL-A-907)	 <p>Lubricating oxygen sensor thread cleaning tool when reconditioning exhaust system threads</p> <p>NT779</p>

NVH Troubleshooting — Engine Noise

NJEM0005S01


Use the chart below to help you find the cause of the symptom.

1. Locate the area where noise occurs.
2. Confirm the type of noise.
3. Specify the operating condition of engine.
4. Check specified noise source.

If necessary, repair or replace these parts.

Location of noise	Type of noise	Operating condition of engine						Source of noise	Check item	Reference page
		Before warm-up	After warm-up	When starting	When idling	When racing	While driving			
Top of Engine Rocket Cover Cylinder Head	Ticking or click	C	A	—	A	B	—	Tappet noise	Valve clearance	EM-42
	Rattle	C	A	—	A	B	C	Camshaft bearing noise	Camshaft journal clearance Camshaft runout	EM-37
Crankshaft Pulley Cylinder block (Side of Engine) Oil pan	Slap or knock	—	A	—	B	B	—	Piston pin noise	Piston and piston pin clearance Connecting rod bushing clearance	EM-55, 61
	Slap or rap	A	—	—	B	B	A	Piston slap noise	Piston-to-bore clearance Piston ring side clearance Piston ring end gap Connecting rod bend and torsion	EM-56, 56, 57
	Knock	A	B	C	B	B	B	Connecting rod-bearing noise	Connecting rod bearing clearance (Big end) Connecting rod bushing clearance (Small end)	EM-60, 61
	Knock	A	B	—	A	B	C	Main bearing noise	Main bearing oil clearance Crankshaft runout	EM-58
Front of Engine Timing Chain Cover	Tapping or ticking	A	A	—	B	B	B	Timing chain and chain tensioner noise	Timing chain cracks and wear Timing chain tensioner operation	EM-26
Front of Engine	Squeak or fizzing	A	B	—	B	—	C	Other drive belts (sticking or slipping)	Drive belts deflection	EM-15
	Creaking	A	B	A	B	A	B	Other drive belts (slipping)	Idler pulley bearing operation	
	Squall or creak	A	B	—	B	A	B	Water pump noise	Water pump operation	LC-14


A: Closely related B: Related C: Sometimes related —: Not related

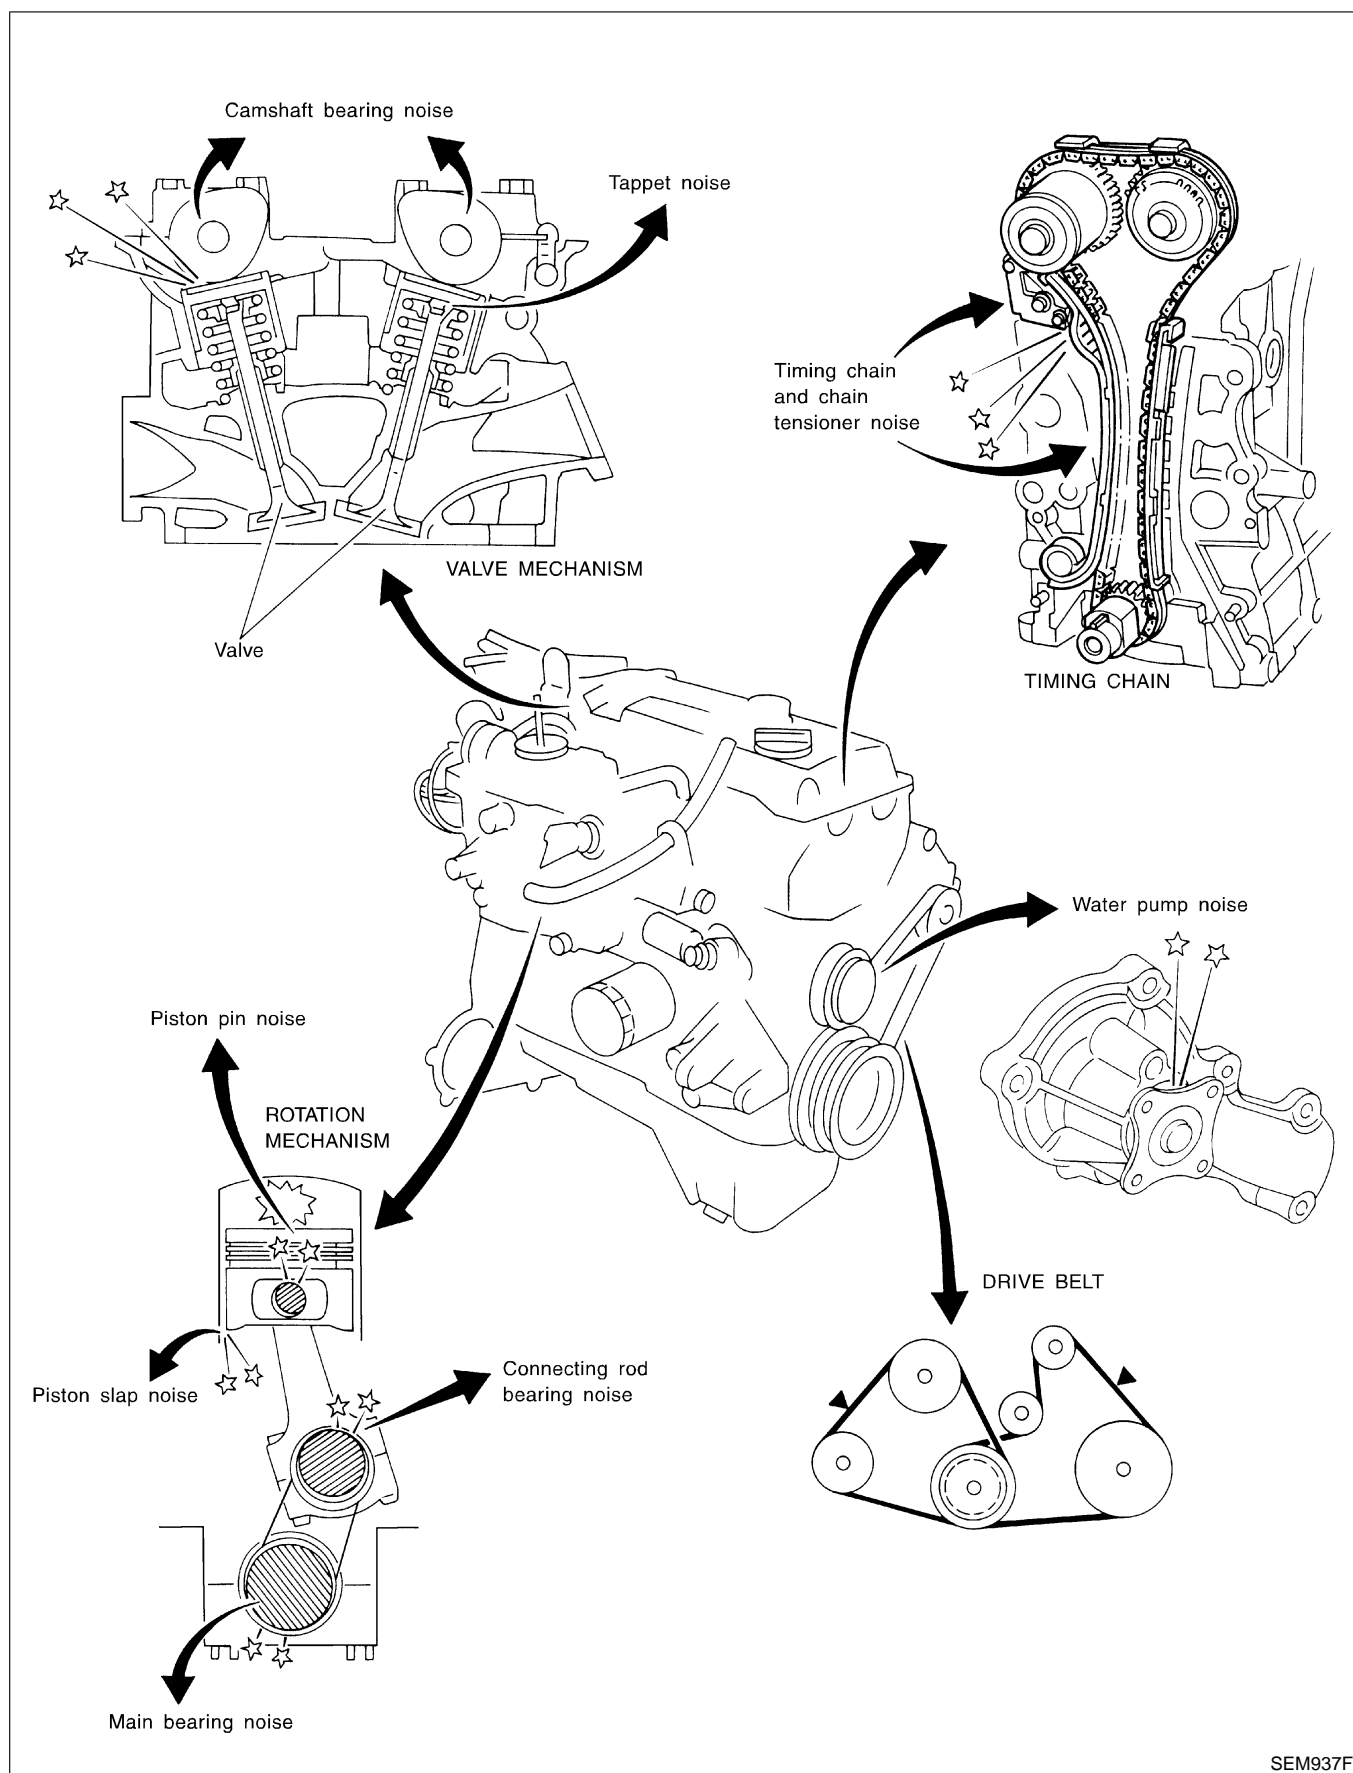

SEM937F

Removal and Installation

NJEM0006

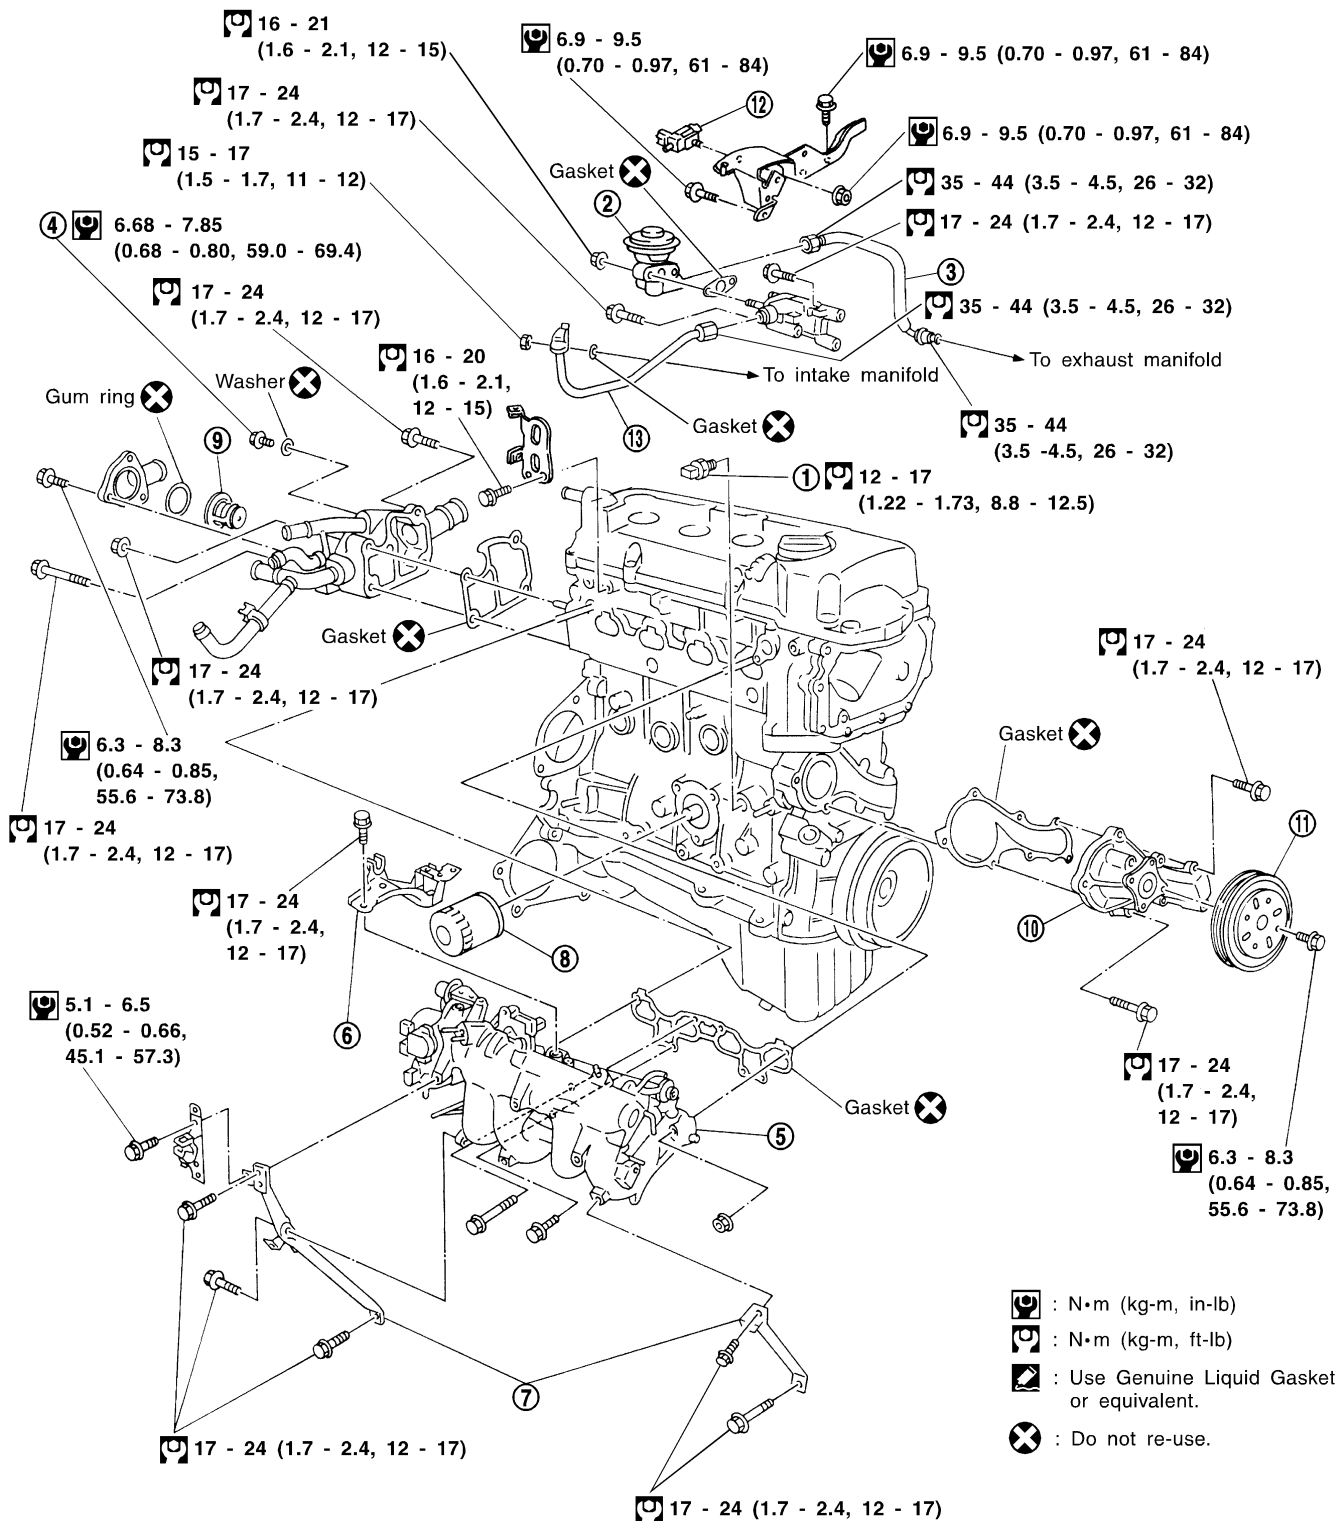
SEC. 140•147•150•210


1. Oil pressure switch
2. EGR valve
3. EGR tube
4. Air relief plug
5. Intake manifold


6. Intake manifold upper support
7. Intake manifold rear supports
8. Oil filter
9. Thermostat

10. Water pump
11. Water pump pulley
12. EGR solenoid valve
13. EGR guide tube

SEC. 140•163•164•223

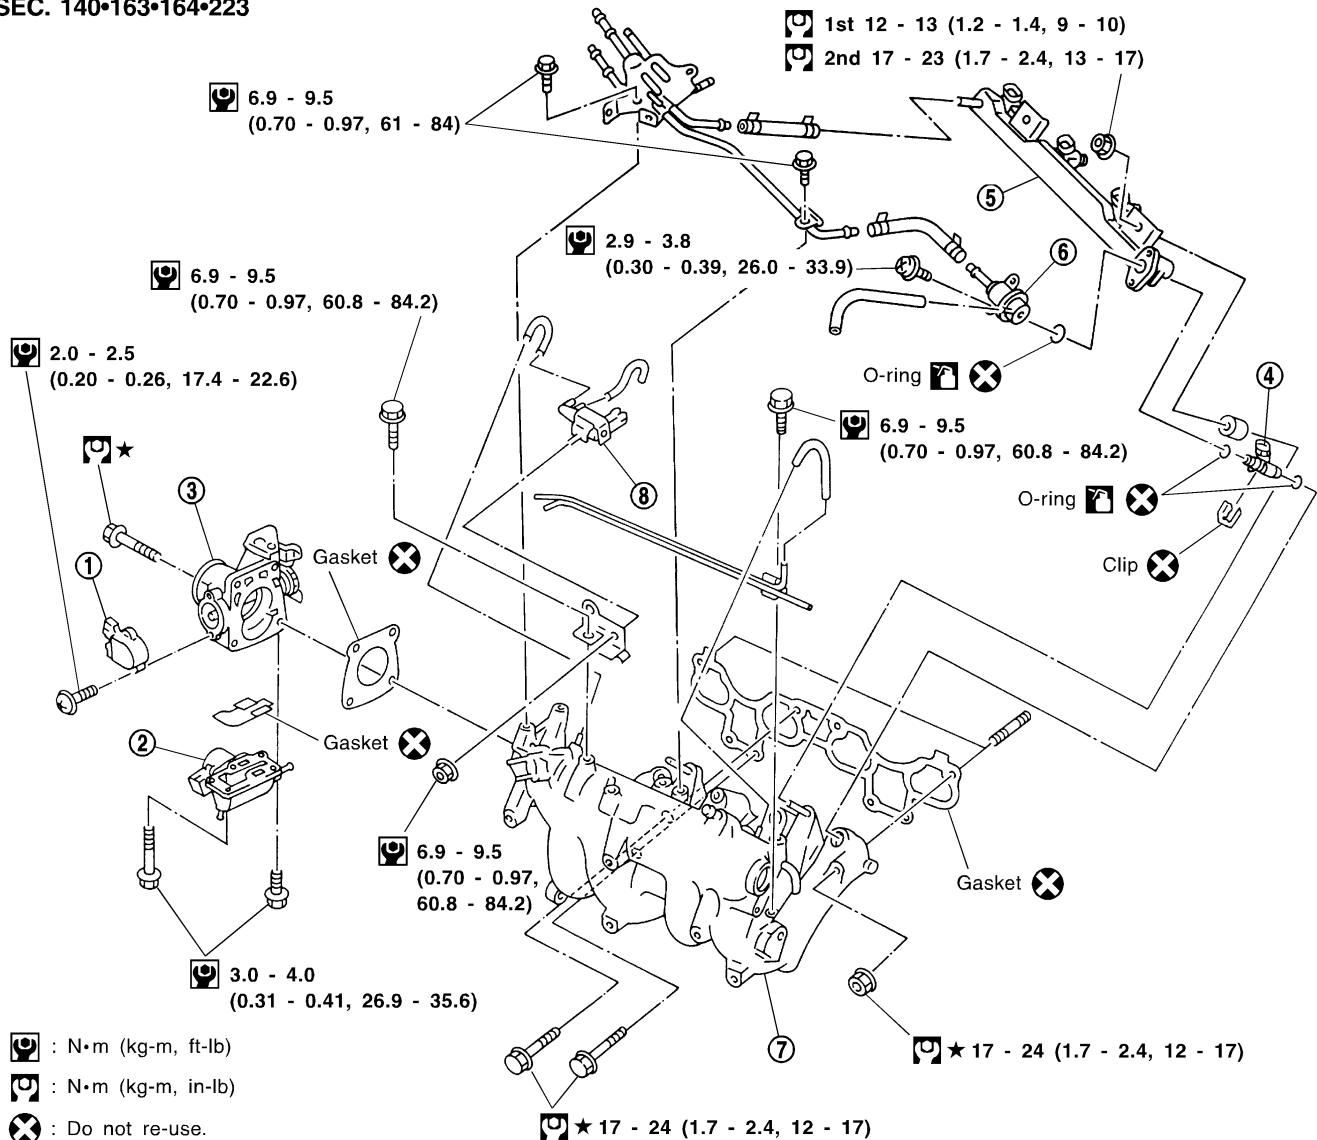


★ Intake manifold bolts and nuts tightening order

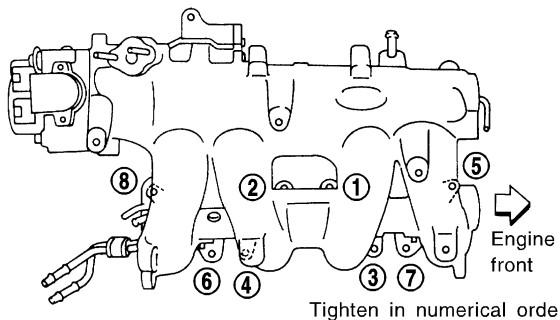

★ Throttle body bolts tightening procedure

- 1) Tighten all bolts to 9 to 11 N•m (0.9 to 1.1 kg-m, 6.5 to 8.0 ft-lb)
- 2) Tighten all bolts to 18 to 22 N•m (1.8 to 2.2 kg-m, 13 to 16 ft-lb)

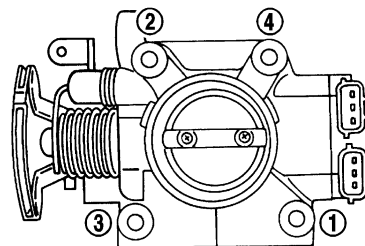

SEM098G

- | | | |
|-----------------------------|-----------------------|---------------------------------|
| 1. Throttle position sensor | 4. Injector | 7. Intake manifold |
| 2. IACV-AAC valve | 5. Injector tube | 8. Canister purge control valve |
| 3. Throttle body | 6. Pressure regulator | |

SEC. 140•208•210•220•226•253
With warm-up three way catalyst

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS


BT

HA

SC

EL

IDX

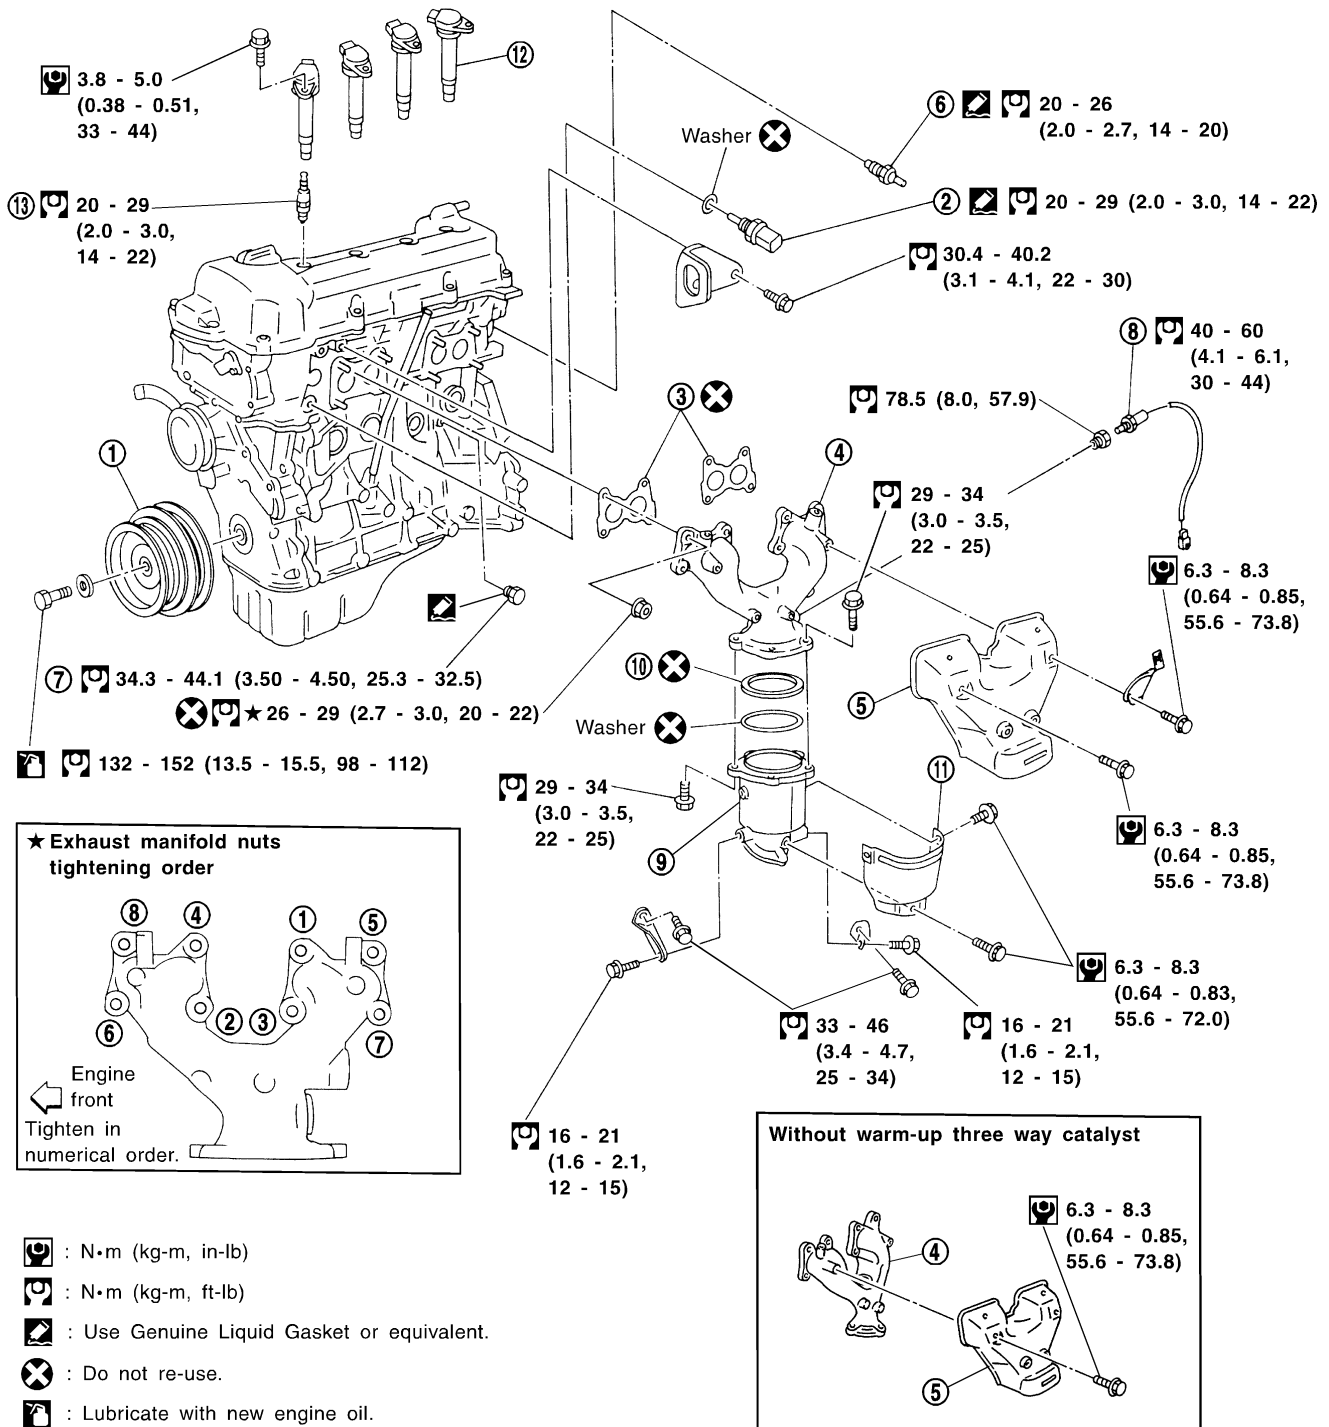



SEM099G

1. Crankshaft pulley
2. Engine coolant temperature
3. Gasket
4. Exhaust manifold
5. Exhaust manifold cover

6. Thermal transmitter
7. Water drain plug
8. Heated oxygen sensor
9. Warm-up three way catalyst

10. Converter cap
11. Converter cover
12. Ignition coil
13. Spark plug

1. Warm up engine.
2. Turn ignition switch OFF.
3. Release fuel pressure.
Refer to EC-31, "Releasing Fuel Pressure".
4. Remove ignition coils.
5. Remove spark plugs.
- Clean area around plug with compressed air before removing the spark plug.

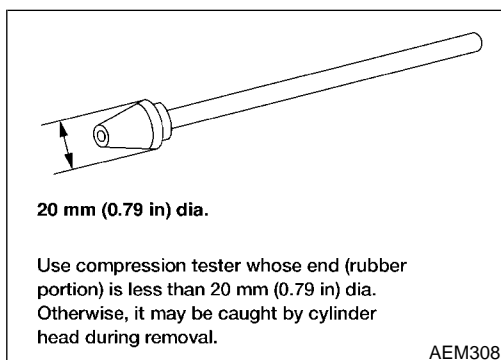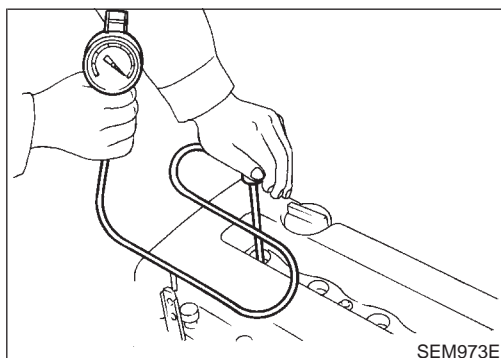

6. Attach a compression tester to No. 1 cylinder.
7. Depress accelerator pedal fully to keep throttle valve wide open.
8. Crank engine and record highest gauge indication.
9. Repeat the measurement on each cylinder as shown above.
- **Always use a fully-charged battery to obtain specified engine speed.**

Compression pressure: kPa (bar, kg/cm², psi)/rpm

Standard

1,324 (13.24, 13.5, 192)/350

Minimum

1,128 (11.28, 11.5, 164)/350


Maximum allowable difference between cylinders

98 (0.98, 1.0, 14)/350

10. If cylinder compression in one or more cylinders is low, pour a small amount of engine oil into the cylinder through the spark plug hole and retest compression.
- **If adding oil improves cylinder compression, piston rings may be worn or damaged. If so, replace piston rings after checking piston.**
- **If pressure stays low, a valve may be sticking or seating improperly. Inspect and repair valve and valve seat. Refer to SDS, EM-72. If valve or valve seat is damaged excessively, replace them.**
- If compression in any two adjacent cylinders is low and if adding oil does not improve compression, there is leakage past the gasket surface. If so, replace cylinder head gasket.
11. Reinstall spark plugs, ignition coils and fuel pump fuse.
12. Perform "Self-diagnosis Procedure" referring to EC-38, "How to Erase DTC" if any DTC appears.

Checking

NJEM0042

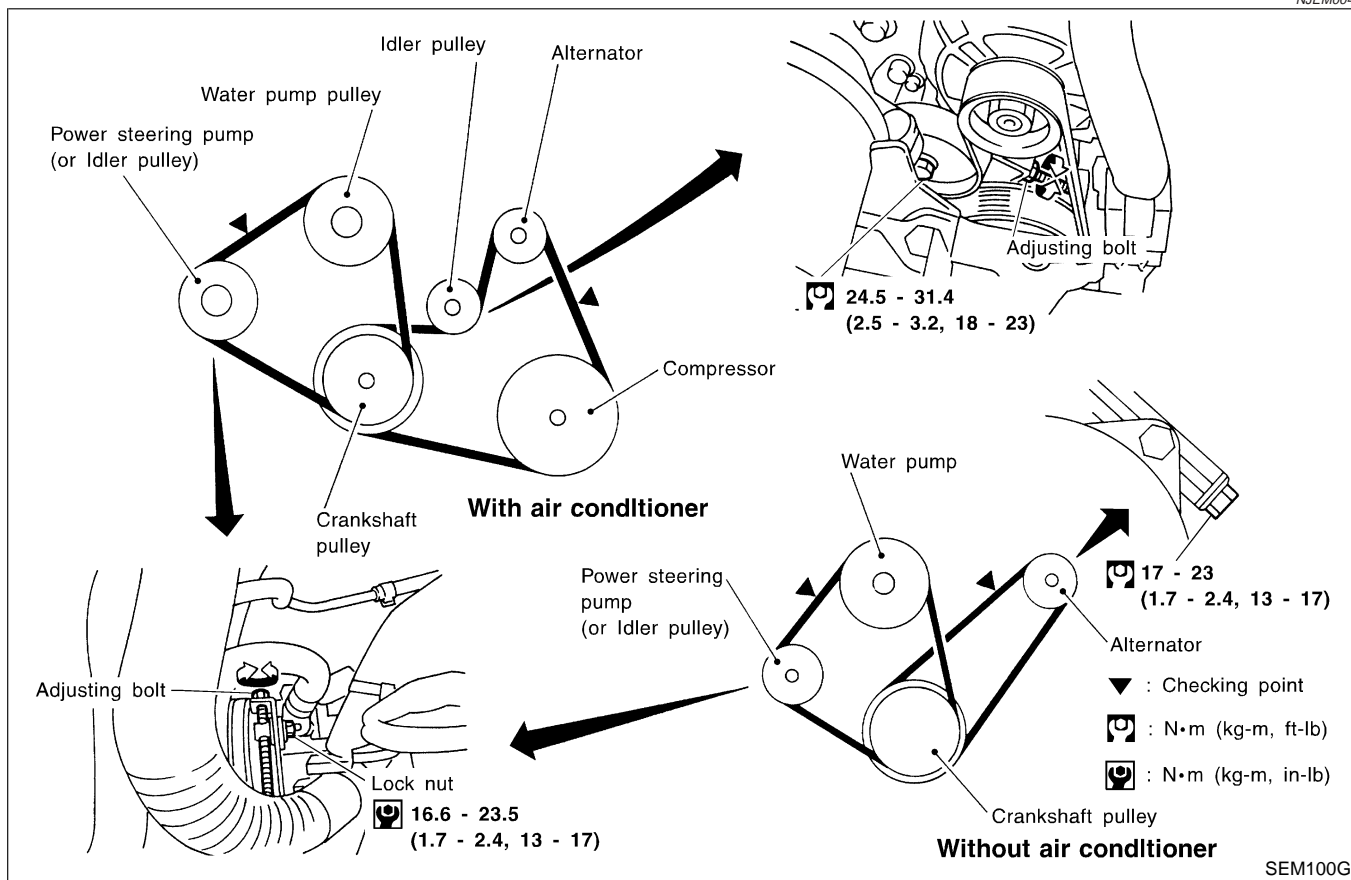

1. Inspect for cracks, fraying, wear or oil adhesion. If necessary, replace with a new one.
2. Inspect drive belt deflections by pushing on the belt midway between pulleys.
Adjust if belt deflections exceed the limit.

Belt deflection:

Unit: mm (in)

		Applied engine	Used belt deflection		Deflection of new belt
			Limit	Deflection after adjustment	
Alternator	With air conditioner compressor	QG13DE	10 (0.39)	6 - 7 (0.24 - 0.28)	5.5 - 6.5 (0.217 - 0.256)
		QG15-16-18DE	8.1 (0.319)	5.3 - 5.7 (0.209 - 0.224)	4.5 - 5.0 (0.177 - 0.197)
	Without air conditioner compressor	QG13DE	11 (0.43)	7 - 9 (0.28 - 0.35)	6 - 8 (0.236 - 0.315)
		QG15-16-18DE	10.2 (0.402)	6.5 - 7.0 (0.256 - 0.276)	5.5 - 6.1 (0.217 - 0.240)


DRIVE BELTS

QG

Checking (Cont'd)

	Applied engine	Used belt deflection		Deflection of new belt
		Limit	Deflection after adjustment	
Power steering oil pump	QG13-15DE	8.5 (0.335)	5.2 - 5.8 (0.205 - 0.228)	4.6 - 5.2 (0.181 - 0.205)
	QG16-18DE	7.1 (0.280)	4.4 - 4.9 (0.173 - 0.193)	3.9 - 4.4 (0.154 - 0.173)
Applied pushing force		98 N (10 kg, 22 lb)		

Inspect drive belt deflections when engine is cold.

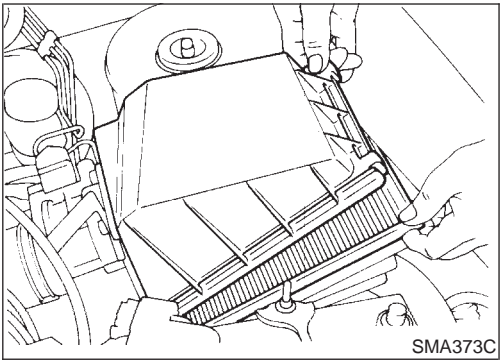


**Cleaning and Changing
VISCOUS PAPER TYPE**

NJEM0043

NJEM0043S01

The viscous paper type filter does not need cleaning **between** renewals.

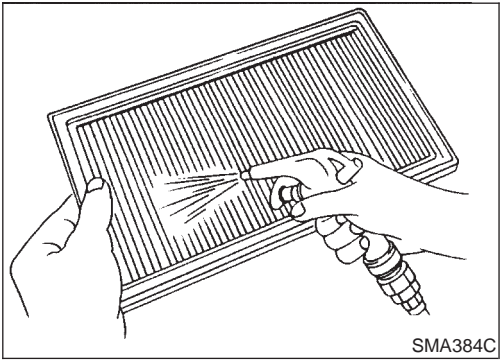

DRY PAPER TYPE

NJEM0043S02

Clean or replace element more often under dusty driving **con-**
ditions.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS



BT

HA

SC

EL

IDX

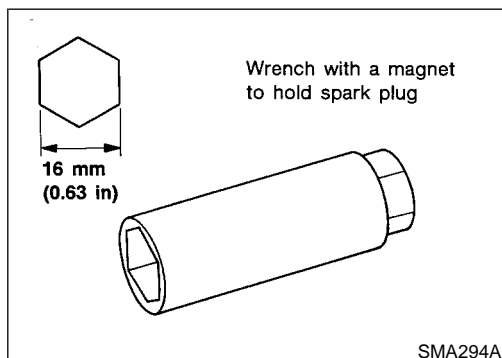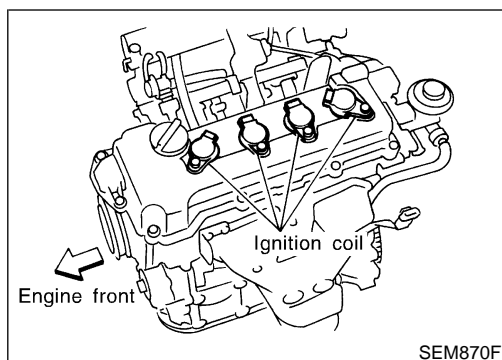


Checking and Changing

1. Disconnect ignition coil harness connectors.
2. Remove ignition coils.
3. Remove spark plugs with spark plug wrench.
4. Clean plugs in sand blast cleaner.
5. Check insulator for cracks or chips, gasket for damage or deterioration and electrode for wear and burning. If they are excessively worn away, replace with new spark plugs.
6. Check spark plug gap.

Spark plug:



Type	Standard	BKR5E
	Cold	BKR6E, BKR7E
Plug gap mm (in)		0.8 - 0.9 (0.031 - 0.035)

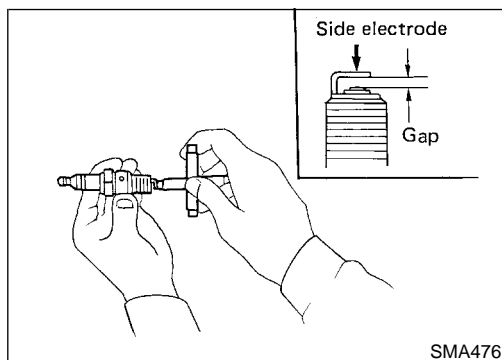

7. Install spark plugs.
Spark plug:
⚙️ : 20 - 29 N·m (2.0 - 3.0 kg-m, 14 - 22 ft-lb)
8. Install ignition coils.
9. Connect ignition coil harness connectors.

Components

NJEM0008




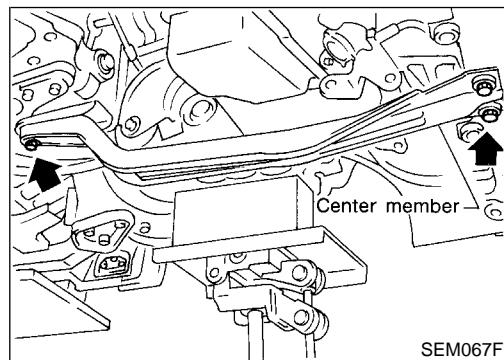
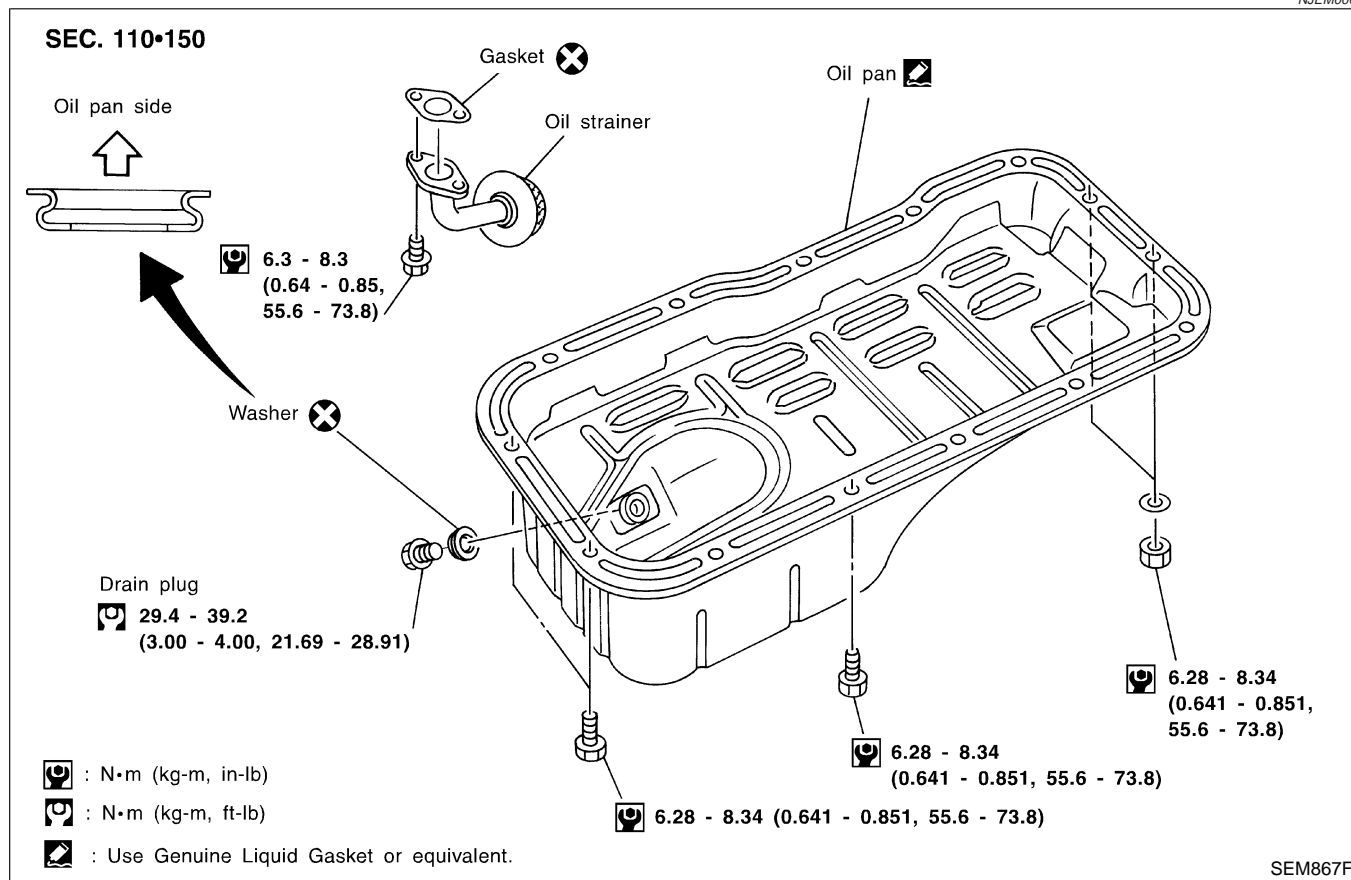


Removal

NJEM0009

1. Remove front RH side cover.
2. Drain engine oil.
3. Remove front exhaust tube.
Refer to FE-10, "EXHAUST SYSTEM".
4. Set a suitable transmission jack under transaxle and lift engine with engine slinger.
5. Remove center member.

Removal (Cont'd)

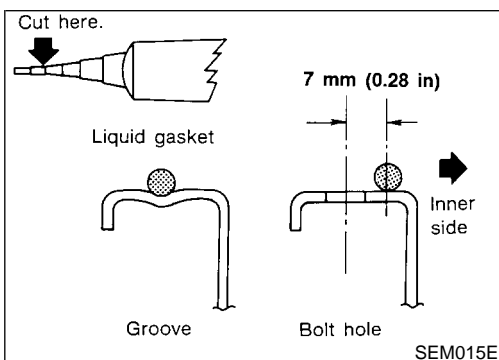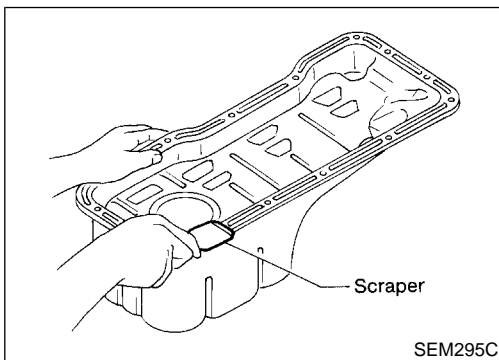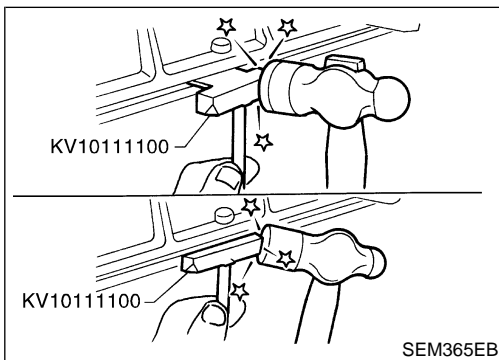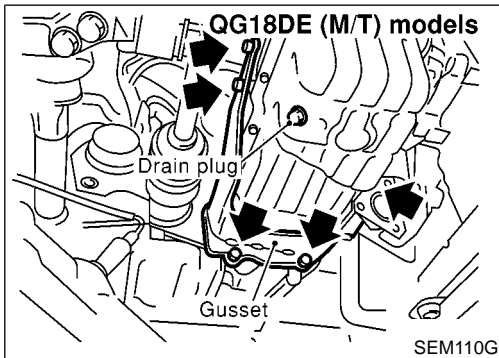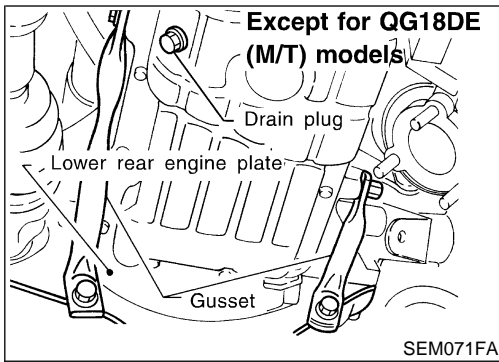

6. Remove engine gussets.
Refer to MT-24 or AT-215, "Installation".
7. Remove rear plate cover (A/T models).



8. Remove oil pan.
 - a. Insert Tool between cylinder block and oil pan.
 - 1) **Be careful not to damage aluminum mating face.**
Do not insert screwdriver, or oil pan flange will be damaged.
 - b. Slide Tool by tapping on the side of the Tool with a hammer.

Installation

NJEM0010

1. Use a scraper to remove old liquid gasket from mating surface of oil pan.
 - **Also remove old liquid gasket from mating surface of cylinder block.**
2. Apply a continuous bead of liquid gasket to mating surface of oil pan.
 - **Use Genuine Liquid Gasket or equivalent.**
 - **Apply to groove on mating surface.**
 - **Allow 7 mm (0.28 in) clearance around bolt holes.**

OIL PAN

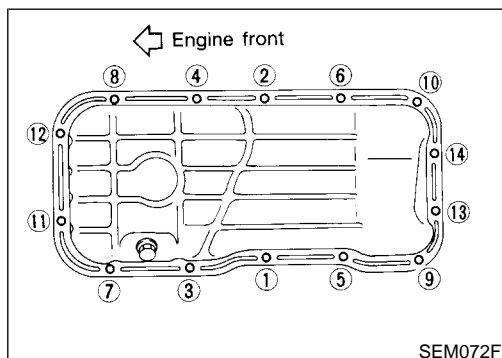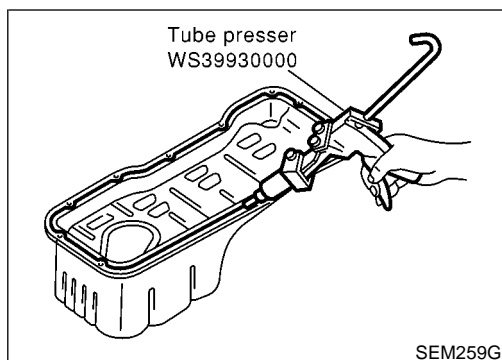QG*Installation (Cont'd)*

- Be sure liquid gasket diameter is 3.5 to 4.5 mm (0.138 to 0.177 in).
- Attaching should be done within 5 minutes after coating.

3. Install oil pan.
 - **Tighten oil pan nuts and bolts in the numerical order.**
 - **Wait at least 30 minutes before refilling engine oil.**
4. Install parts in reverse order of removal.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL


IDX

Components

NJEM0011

SEC. 120•130•135

With intake valve timing control

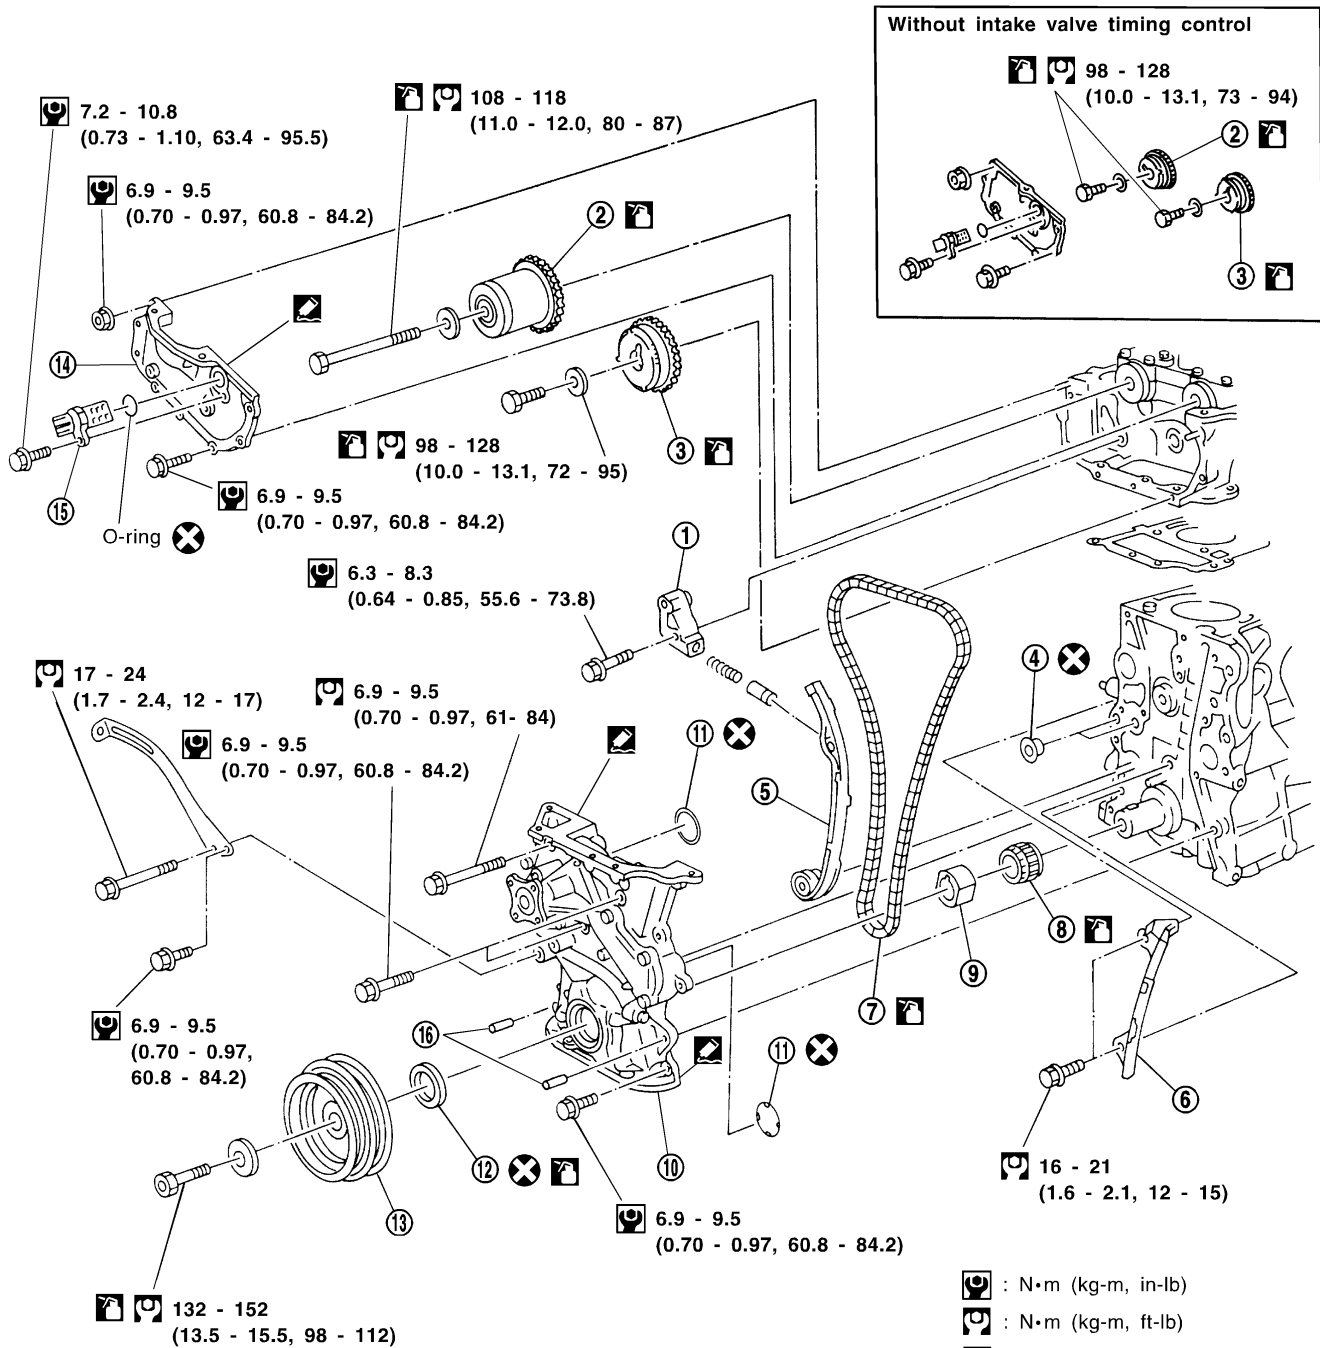

SEM101G


1. Chain tensioner
2. Camshaft sprocket (Intake)
3. Camshaft sprocket (Exhaust)
4. O-ring
5. Slack side timing chain guide
6. Timing chain tension guide

7. Timing chain
8. Crankshaft sprocket
9. Oil pump drive spacer
10. Front cover
11. O-ring
12. Oil seal

13. Crankshaft pulley
14. Cylinder head front cover
15. Camshaft position sensor (PHASE)
16. Cylinder block dowels


CAUTION:

- After removing timing chain, do not turn crankshaft and camshaft separately, or valves will strike piston heads.
- When installing chain tensioner, oil seals, or other sliding parts, lubricate contacting surfaces with new engine oil.
- Apply new engine oil to bolt threads and seat surfaces when installing camshaft sprocket and crankshaft pulley.
- When removing oil pump assembly, remove camshaft position sensor (PHASE), then remove timing chain from engine.
- Be careful not to damage sensor edges.

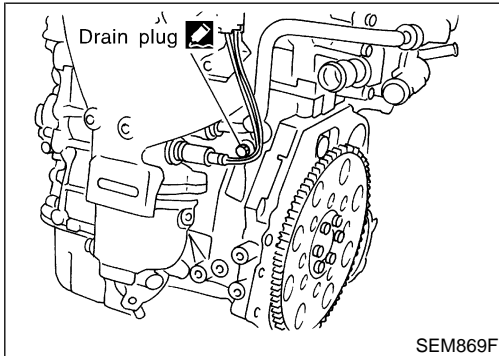
**Removal**

1. Drain engine coolant from radiator and cylinder block. Be careful not to spill coolant on drive belts.
2. Remove reservoir tank.
3. Release fuel pressure. Refer to EC-31, "Fuel Pressure Release".
4. Remove the following belts.
 - Power steering pump drive belt
 - Alternator drive belt
5. Remove front right-side wheel.
6. Remove front/right splash undercover.
7. Remove front exhaust tube.

NJEM0012

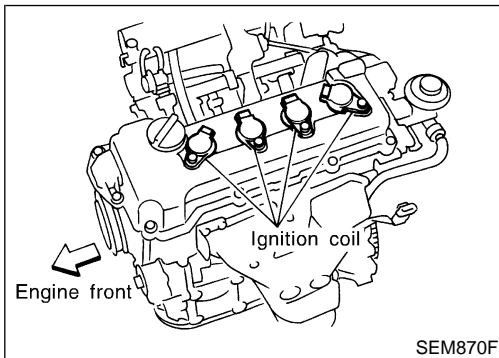


8. Remove vacuum hoses, fuel hoses, and so on.
9. Remove ignition coils.
10. Remove spark plugs.

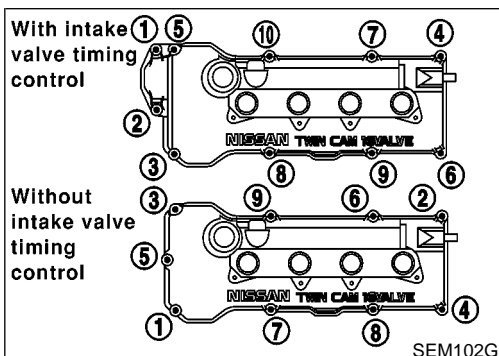


11. Remove rocker cover bolts in numerical order as shown in the figure.


Removal (Cont'd)

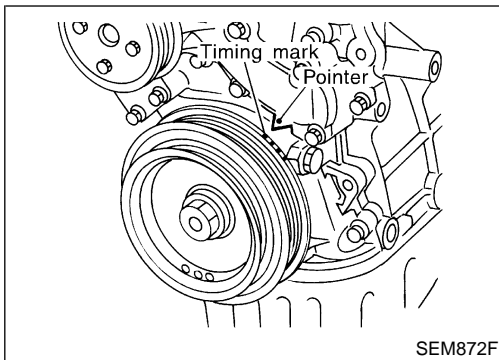

12. Set No. 1 piston at TDC on its compression stroke.

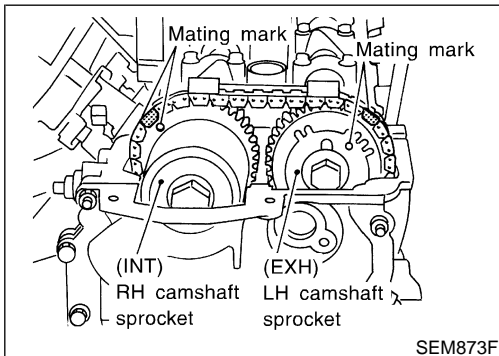


- Rotate crankshaft until mating mark on camshaft sprocket is set at position indicated in figure at left.

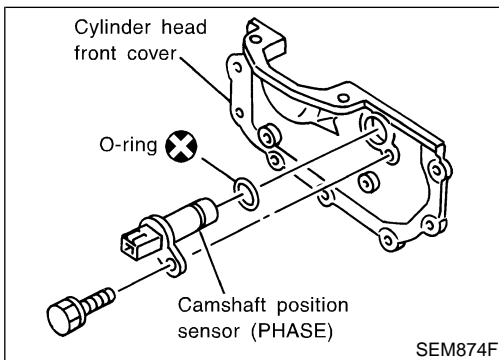

13. Remove camshaft position sensor (PHASE).

- Do not allow any magnetic materials to contact the camshaft position sensor (PHASE).
- Be careful not to damage sensor.


14. Remove cylinder head front cover.

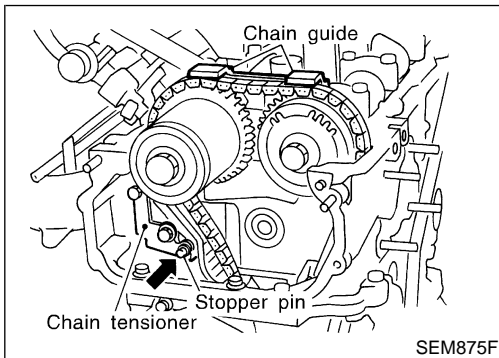

15. Remove timing chain guide from camshaft bracket.

16. Attach a suitable stopper pin to chain tensioner.


17. Remove chain tensioner.

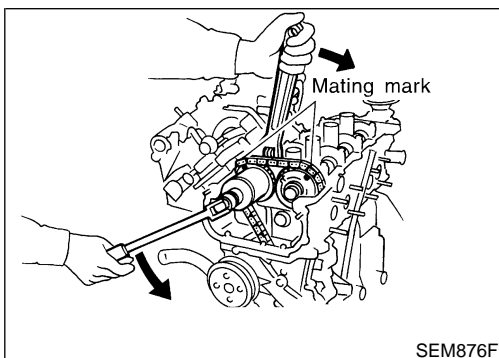


18. Remove camshaft sprocket bolts.

- Apply paint to timing chain and cam sprockets for alignment during installation.

19. Remove camshaft sprockets.

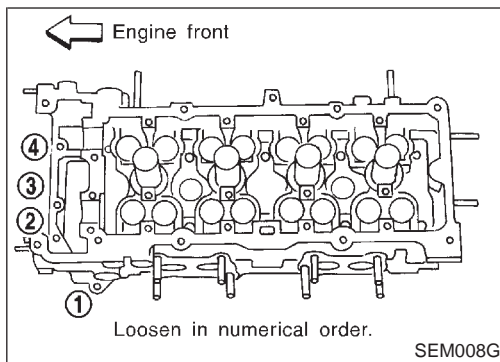


20. Remove cylinder head bolts at engine front side.

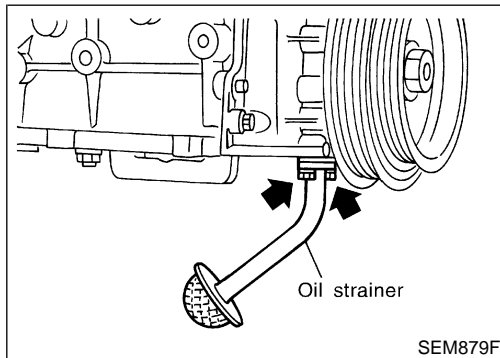


21. Remove oil pan. Refer to EM-19, "Removal".

22. Remove oil strainer.

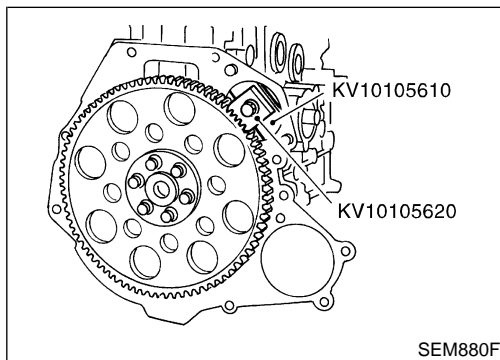


23. Remove starter motor, and set ring gear stopper using mounting bolt holes.

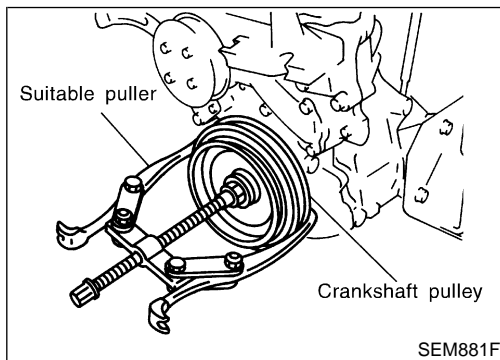

24. Loosen crankshaft pulley bolt.

25. Remove crankshaft pulley with a suitable puller.

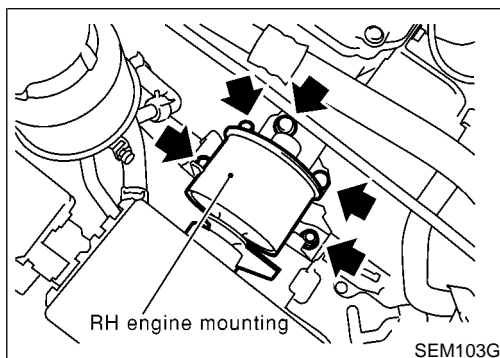

26. Remove RH engine mounting.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT


HA

SC


EL

IDX


Removal (Cont'd)

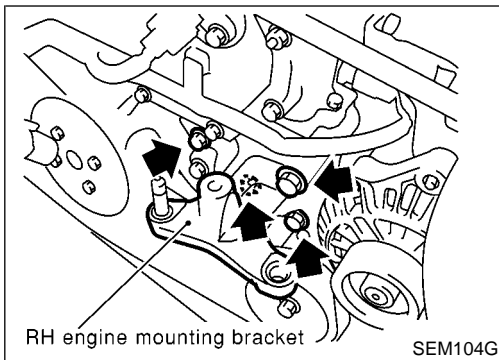



27. Remove RH engine mounting bracket.
28. Remove idler pulley and bracket.

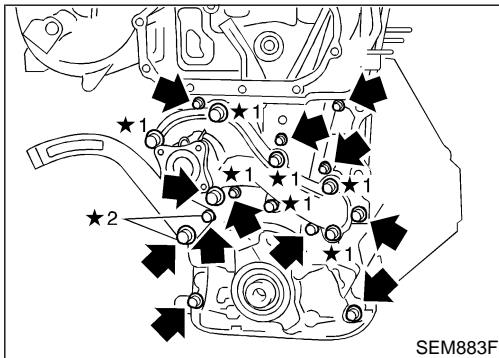

29. Remove water pump pulley and water pump.
30. Remove front cover bolts and front cover as shown.
 - ★1: Located on water pump
 - ★2: Located on power steering pump adjusting bar
- Inspect for oil leakage at front oil seal. Replace seal if oil leak is present.

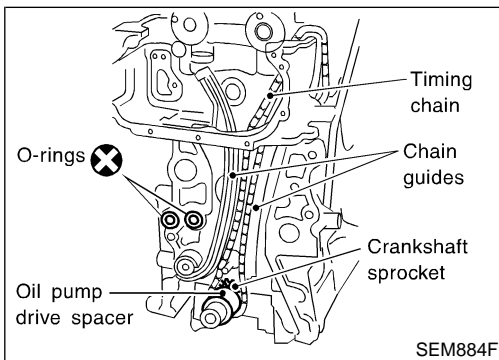

31. Remove timing chain.
32. Remove oil pump drive spacer.
33. Remove chain guides.
34. Remove crankshaft sprocket.
35. Remove O-rings from cylinder block and front cover.




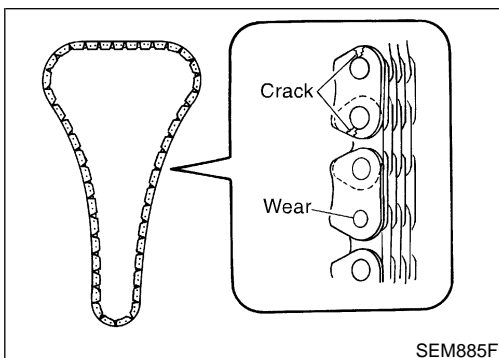
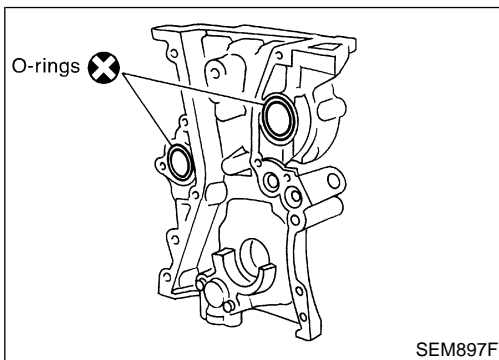


Inspection

Check for cracks and excessive wear at roller links. Replace if necessary.

NJEM0013

NJEM0014

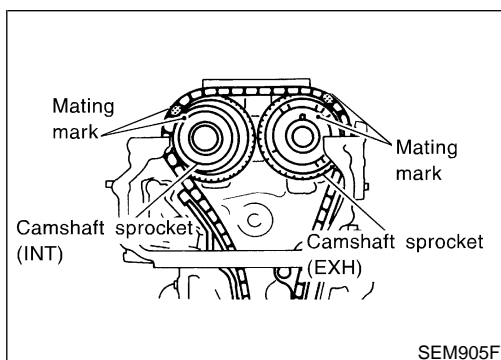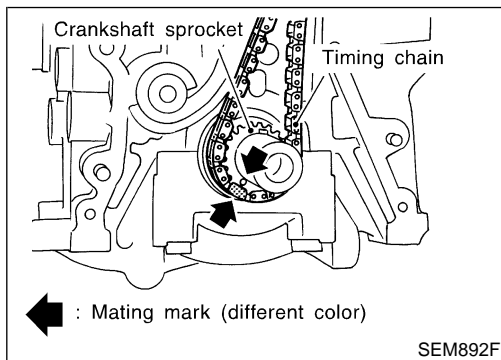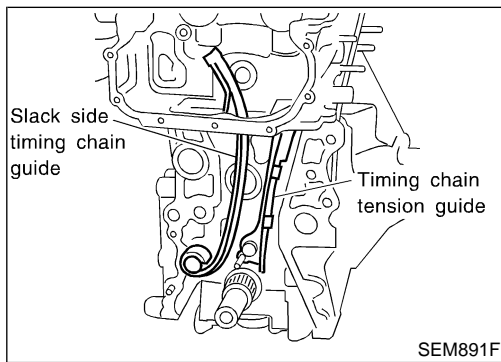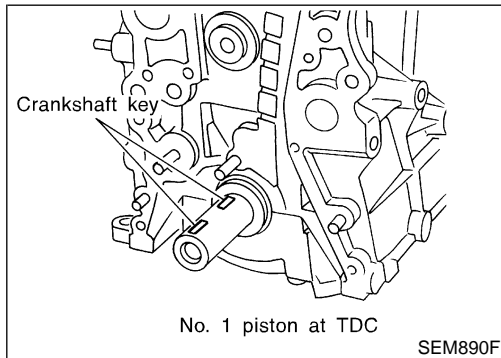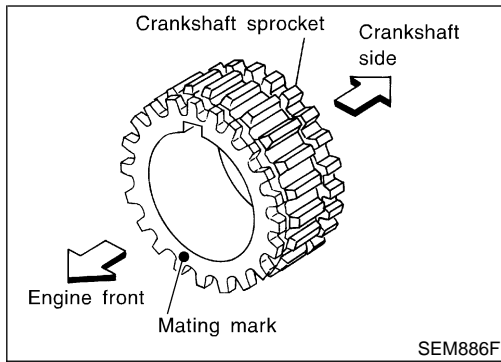

Installation

1. Install crankshaft sprocket on crankshaft.
 - **Make sure mating marks on crankshaft sprocket face front of engine.**
2. Position crankshaft so that No. 1 piston is at TDC and key way is at 12 o'clock.
3. Install slack side timing chain guide and timing chain tension guide.
4. Install timing chain on crankshaft sprocket.
 - **Support chain with a suitable tool to keep the mating mark aligned.**
 - **Set timing chain by aligning its mating mark with that on the crankshaft sprocket.**
 - **Make sure sprocket's mating mark faces engine front.**
5. Install camshaft sprocket.
 - **Set timing chain by aligning mating marks with those of camshaft sprockets.**

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT


HA

SC


EL

IDX


Installation (Cont'd)

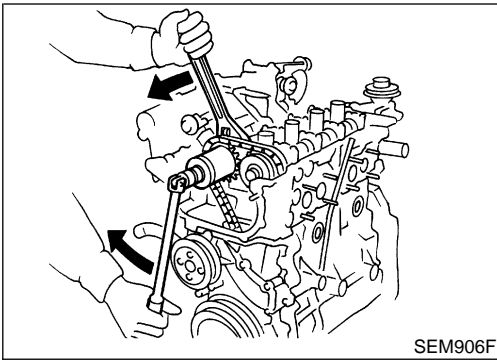


6. Install camshaft sprocket bolts and tighten them to correct torque.
 - **Apply new engine oil to bolt threads and seat surface.**

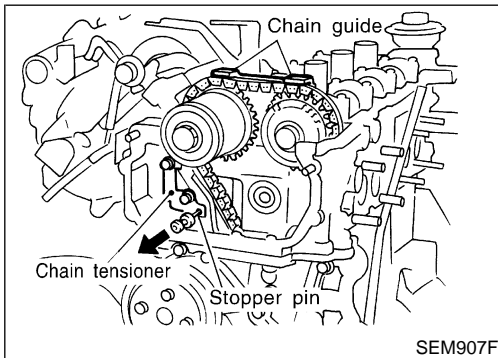


7. Install chain tensioner.
 - **Before installing chain tensioner, insert a suitable pin into pin hole of chain tensioner.**
 - **After installing chain tensioner, remove the pin.**
8. Install timing chain guide.

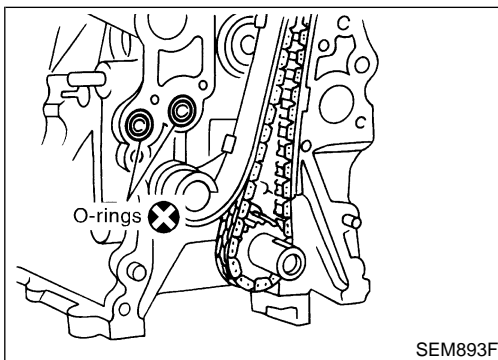


9. Install O-rings to cylinder block.

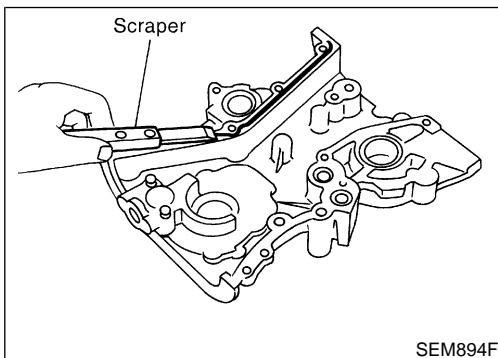

10. Before installing front cover, remove all traces of liquid gasket from mating surface using a scraper.
 - Also remove traces of liquid gasket from mating surface of cylinder block.

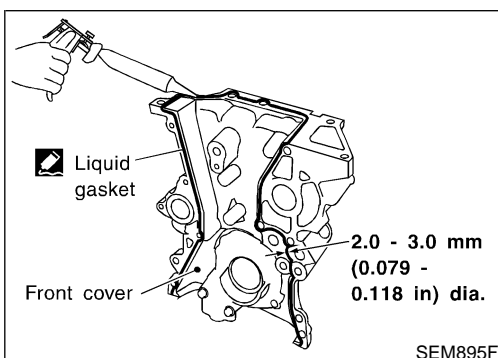

11. Apply a continuous bead of liquid gasket to mating surface of front cover.
 - **Check alignment of mating marks on chain and crankshaft sprocket.**
 - **Align oil drive spacer with oil pump.**
 - **Place timing chain to the side of chain guide. This prevents the chain from making contact with water seal area of front cover.**


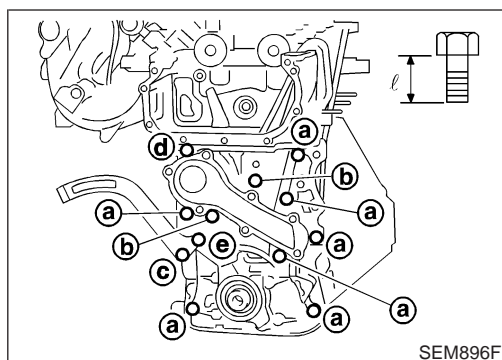


12. Install front cover.

Bolt No.	Tightening torque N-m (kg-m, in-lb)	"ℓ" mm (in)
a.	6.9 - 9.5 (0.70 - 0.97, 61 - 84)	20 (0.79)
b.	6.9 - 9.5 (0.70 - 0.97, 61 - 84)	40 (1.57)
c.	17 - 24 (1.7 - 2.4, 148 - 208*)	70 (2.76)
d.	6.9 - 9.5 (0.70 - 0.97, 61 - 84)	72.8 (2.866)
e.	6.9 - 9.5 (0.70 - 0.97, 61 - 84)	12 (0.47)


*: 12 - 17 ft-lb

- Make sure two O-rings are present.
- Be careful not to damage oil seal when installing front cover.

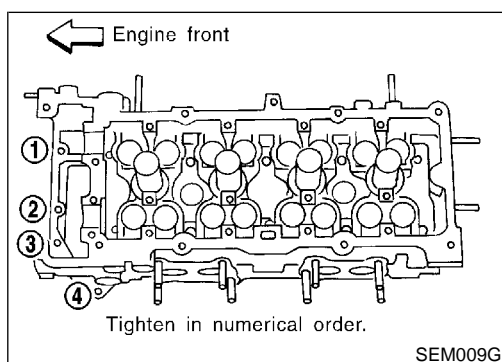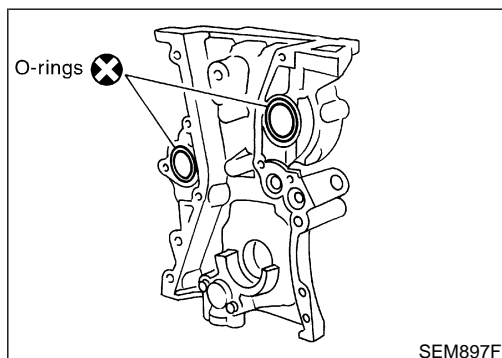


13. Install cylinder head bolts at engine front side.

- **Tightening procedure**
Tightening bolts (1 - 4) to 6.3 to 8.3 N-m (0.64 to 0.85 kg-m, 55.8 to 73.5 in-lb).

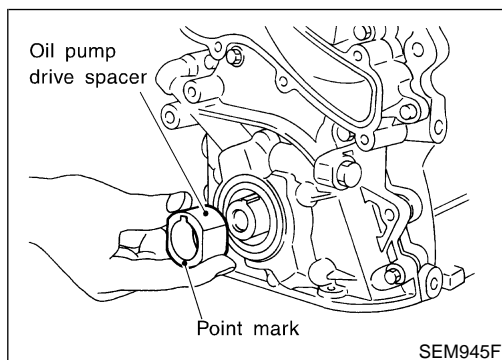

14. Install oil pump drive spacer.

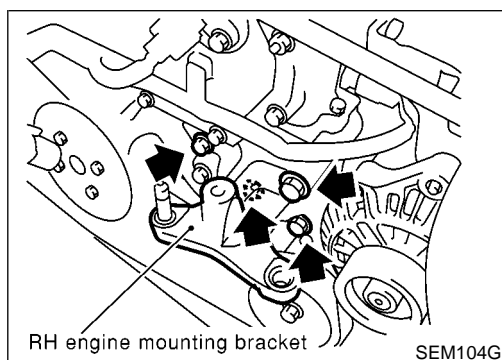

15. Install water pump and water pump pulley.

Refer to LC-14, "Water Pump".

16. Install idler pulley and bracket.

17. Install RH engine mounting bracket.

18. Install RH engine mounting.

19. Install oil strainer.


20. Install oil pan. Refer to EM-20, "Installation".

21. Install crankshaft pulley.

22. Remove ring gear stopper.


23. Install starter motor.

Installation (Cont'd)

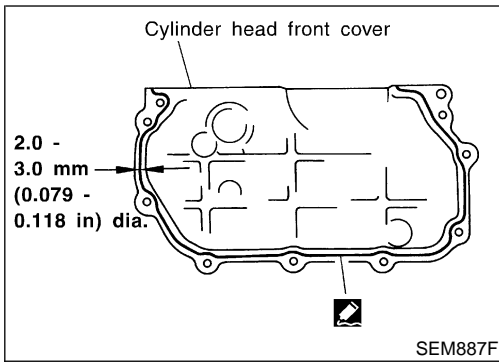


24. Install cylinder head front cover.


- Apply liquid gasket to cylinder head front cover.
- Use Genuine Liquid Gasket or equivalent.

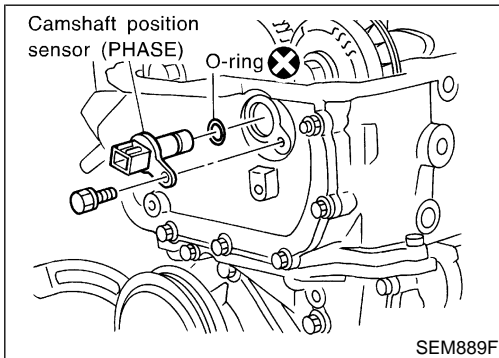

25. Install camshaft position sensor (PHASE).

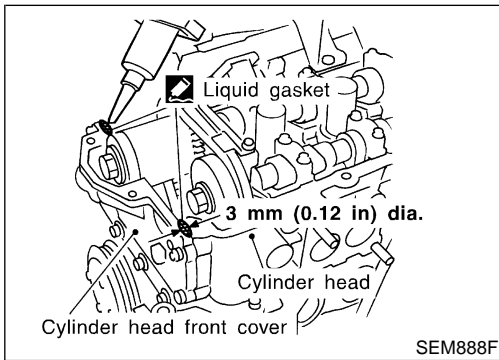

26. Before installing rocker cover, apply a continuous bead of liquid gasket to mating surface of cylinder head.

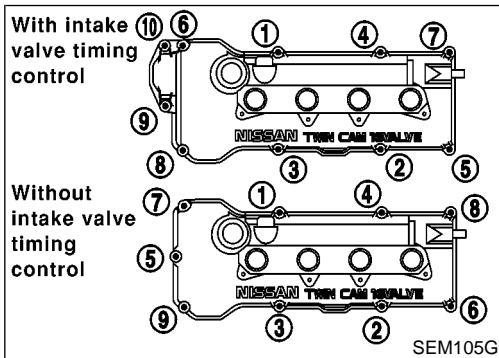


27. Install rocker cover with rocker cover gasket and tighten bolts in numerical order as shown in the figure.

28. Install spark plugs.
29. Install ignition coils.
30. Install front exhaust tube.
31. Install front/right splash undercover.
32. Install front right-side wheel.
33. Drive belts.

For adjusting drive belt deflection, refer to EM-15, "Checking".

34. Reinstall parts in reverse order of removal.

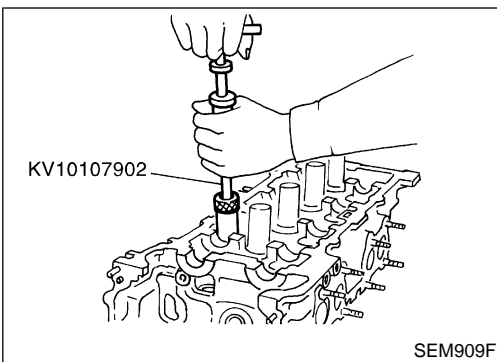


Replacement VALVE OIL SEAL

NJEM0015


NJEM0015S01

1. Remove rocker cover.
2. Remove camshaft.
3. Remove valve spring. Refer to EM-33.
4. Remove valve oil seal with Tool.

Piston concerned should be set at TDC to prevent valve from falling.

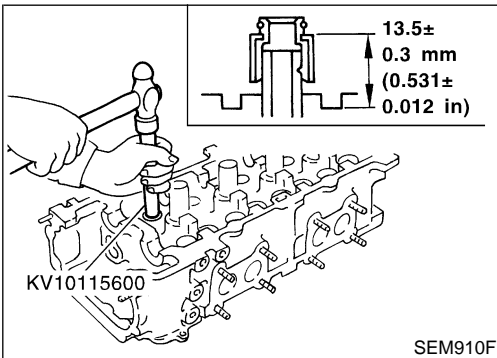


5. Apply new engine oil to new valve oil seal and install it with Tool.

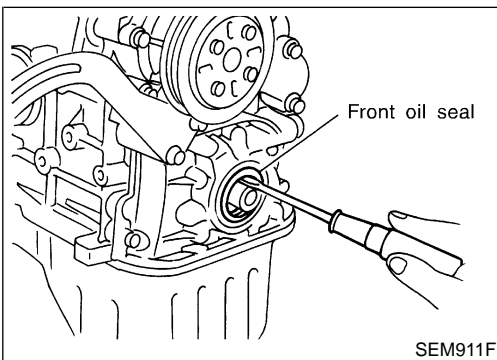


FRONT OIL SEAL

NJEM0015S02


1. Remove the following parts:
 - Engine under cover
 - RH engine side cover
 - Alternator and power steering drive belts
 - Crankshaft pulley
2. Remove front oil seal from front cover.
 - **Be careful not to scratch front cover.**

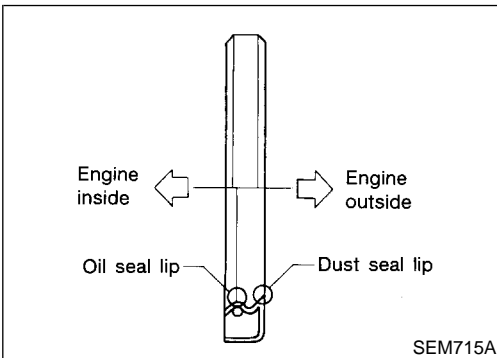

3. Apply new engine oil to new oil seal and install it using a suitable tool.
 - Install new oil seal in the direction shown.

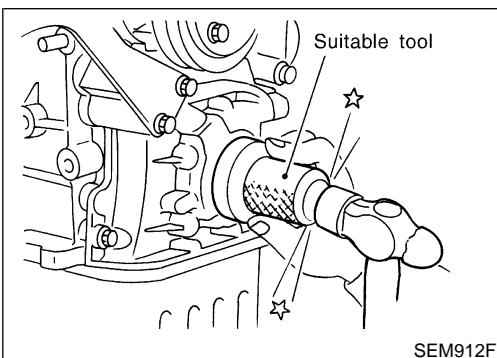

Replacement (Cont'd)

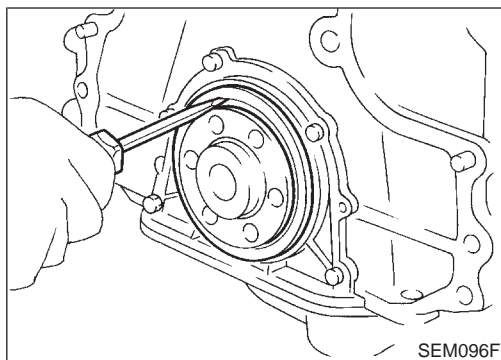
**REAR OIL SEAL**

1. Remove transaxle. Refer to MT-23 or AT-214, "REMOVAL AND INSTALLATION"^{=NJEM0015S03}.

2. Remove flywheel or drive plate.


3. Remove rear oil seal.

- Be careful not to scratch rear oil seal retainer.

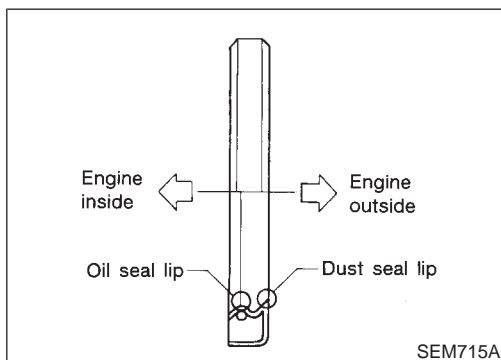

4. Apply new engine oil to new oil seal and install it using a suitable tool.

- Install new oil seal in the direction shown.

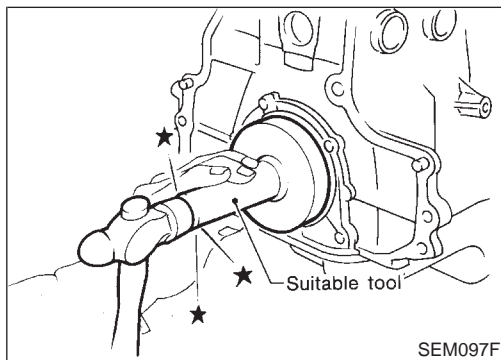


Components

NJEM0016

SEC. 111•130

With intake valve
timing control

2.0 - 3.9 (0.20 - 0.40, 17.4 - 34.7)

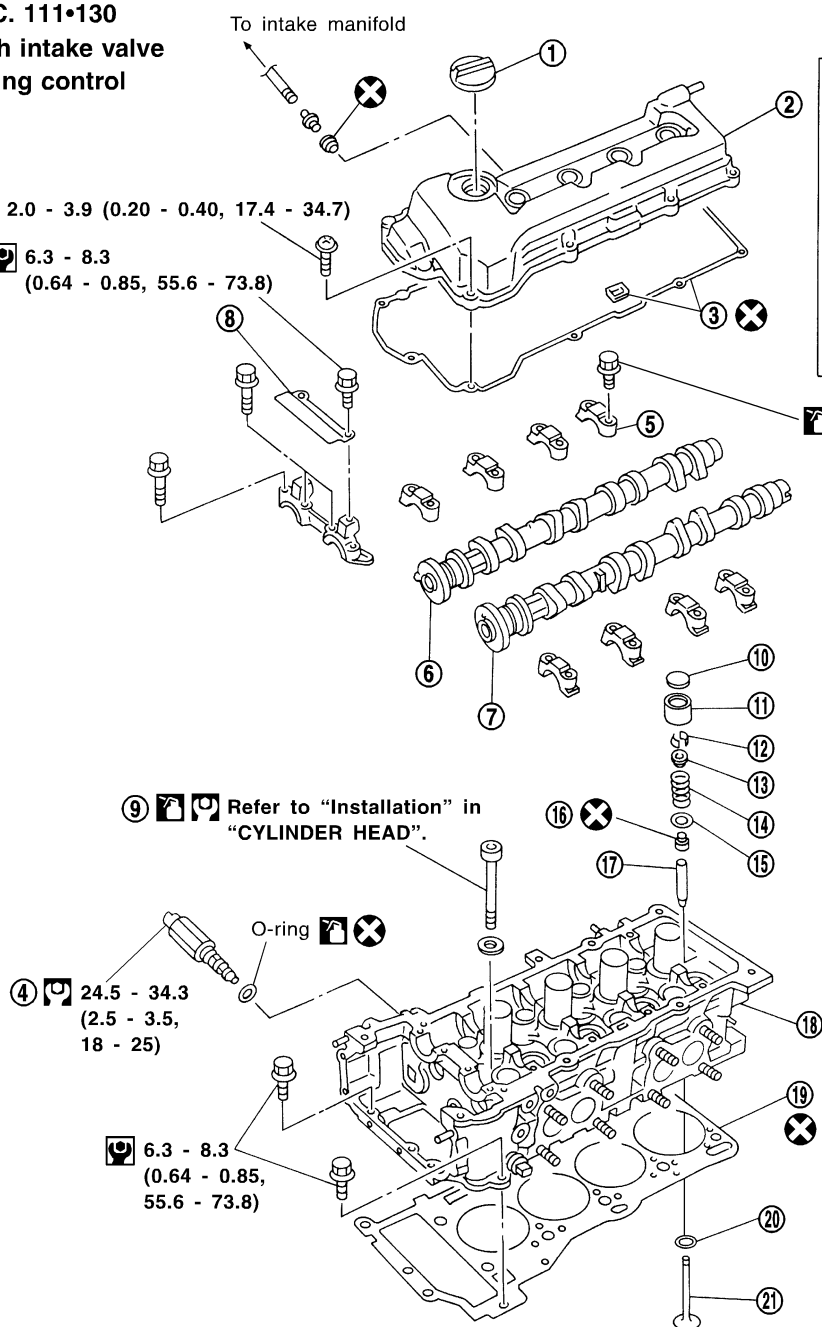 6.3 - 8.3
(0.64 - 0.85, 55.6 - 73.8)


Without intake valve timing control

 2.0 - 3.9
(0.20 - 0.40, 18 - 34)

 Refer to "Installation" in
"CYLINDER HEAD".

 Refer to "Installation" in
"CYLINDER HEAD".

 24.5 - 34.3
(2.5 - 3.5,
18 - 25)

 6.3 - 8.3
(0.64 - 0.85,
55.6 - 73.8)

: N•m (kg-m, in-lb)

: N•m (kg-m, ft-lb)

 : Use Genuine Liquid Gasket
or equivalent.

: Lubricate with new engine oil.

: Do not re-use.

SEM106G





1. Oil filler cap
2. Rocker cover
3. Rocker cover gasket
4. Intake valve timing control solenoid (Models with intake valve timing control)
5. Camshaft bracket
6. Intake camshaft

7. Exhaust camshaft
8. Timing chain guide
9. Cylinder head bolt
10. Shim
11. Valve lifter
12. Valve cotter
13. Valve spring retainer
14. Valve spring

15. Valve spring seat
16. Valve oil seal
17. Valve guide
18. Cylinder head
19. Cylinder head gasket
20. Valve seat
21. Valve


CAUTION:

- When installing camshaft and oil seal, lubricate contacting surfaces with new engine oil.
- When tightening cylinder head bolts, camshaft sprocket bolts and camshaft bracket bolts, lubricate bolt threads and seat surfaces with new engine oil.
- Attach tags to valve lifters so as not to mix them up.

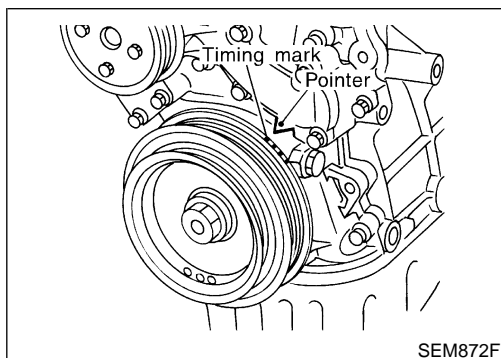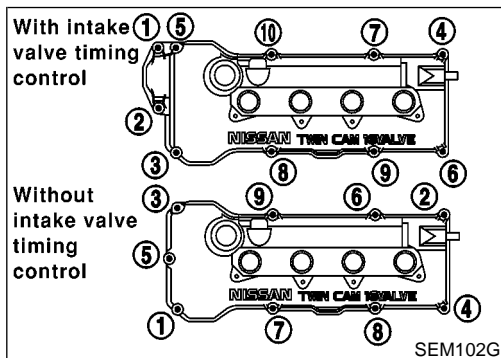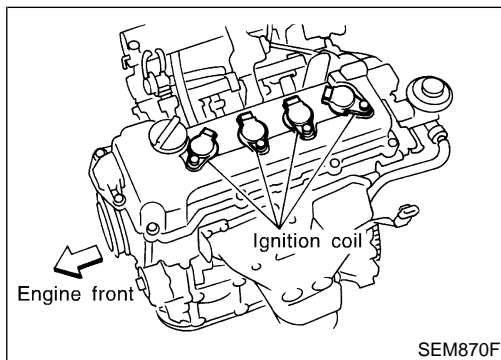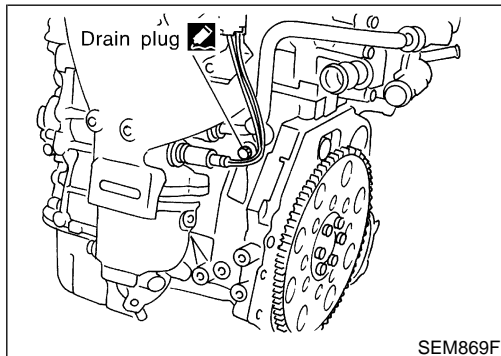
**Removal**

NJEM0017


1. Drain engine coolant from radiator and cylinder block. Be careful not to spill coolant on drive belts.
2. Release fuel pressure. Refer to EC-31, "Fuel Pressure Release".
3. Remove drive belts.
4. Remove air duct to intake manifold collector.
5. Remove front undercovers.
6. Remove front exhaust tube.
7. Disconnect vacuum hoses, fuel hoses, water hoses, wires, harness, connectors and so on.
8. Remove intake manifold rear supports.
9. Remove exhaust manifold.
10. Remove ignition coils.
11. Remove spark plugs.
12. Remove rocker cover bolts in numerical order as shown in the figure.
13. Set No. 1 piston at TDC on its compression stroke.

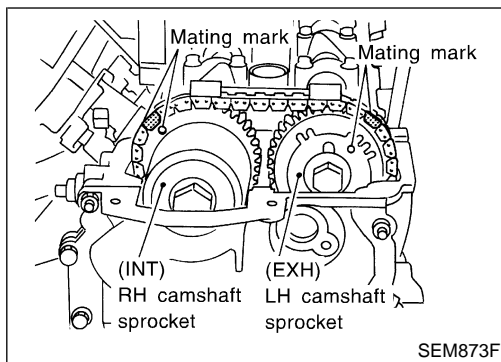


- Rotate crankshaft until mating mark on camshaft sprocket is set at position indicated in figure at left.

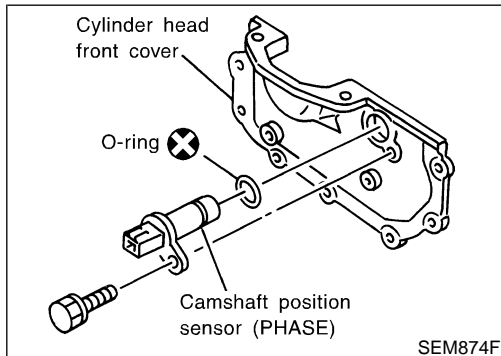


14. Remove camshaft position sensor (PHASE).
- Do not allow any magnetic materials to contact the camshaft position sensor (PHASE).
- Be careful not to damage sensor.
15. Remove cylinder head front cover.

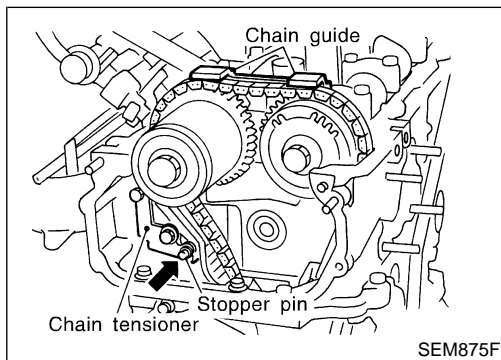

16. Remove timing chain guide from camshaft bracket.
17. Attach a suitable stopper pin to chain tensioner.
18. Remove chain tensioner.

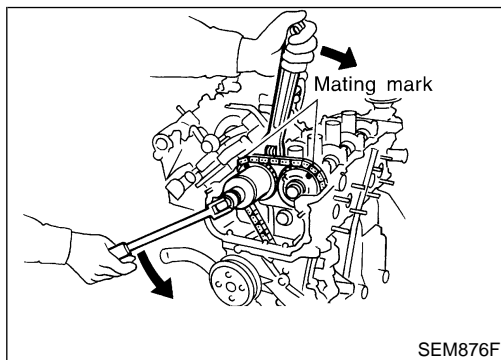

19. Remove camshaft sprocket bolts.
- Apply paint to timing chain and cam sprockets for alignment during installation.
20. Remove camshaft sprockets.

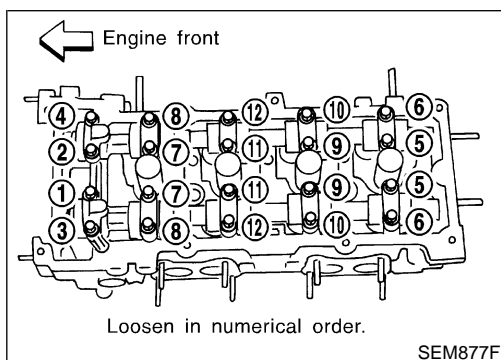

21. Remove camshaft brackets and camshafts.
- Apply I.D. marks to brackets to ensure correct reassembly.
- Bolts should be loosened in two or three steps.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT


HA

SC

EL

IDX


Removal (Cont'd)

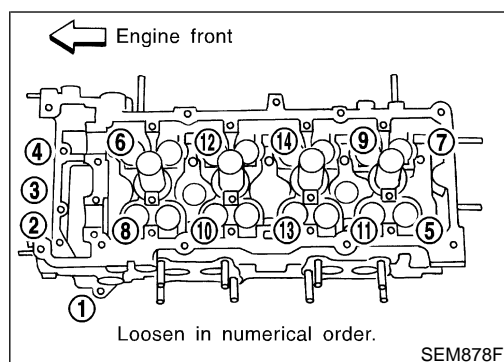

22. Remove cylinder head bolts.

23. Remove cylinder head with manifolds.


- Head warpage or cracking could result from removing in incorrect order.
- Cylinder head bolts should be loosened in two or three steps.

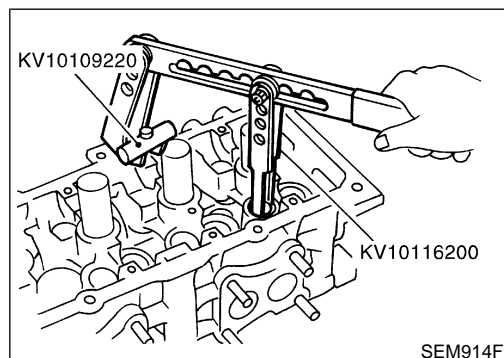

Disassembly

NJEM0018

1. Remove valve components with Tool.
2. Remove valve oil seal with a suitable tool.

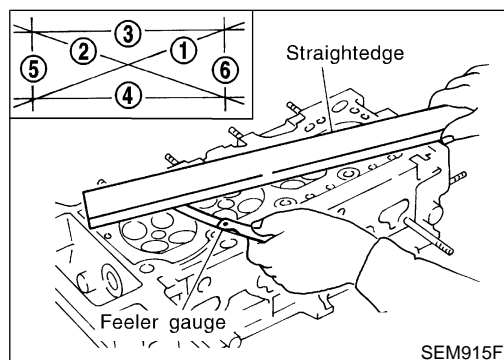

Inspection

NJEM0019

CYLINDER HEAD DISTORTION

NJEM0019S01

- Clean surface of cylinder head.
- Use a reliable straightedge and feeler gauge to check the flatness of cylinder head mating surface.
- Check along six positions shown in figure.

Head surface flatness:

Standard: Less than 0.03 mm (0.0012 in)

Limit: 0.1 mm (0.004 in)

If beyond the specified limit, replace or resurface it.

Resurfacing limit:

The limit for cylinder head resurfacing is determined by the amount of cylinder block resurfacing.

Amount of cylinder head resurfacing is "A".

Amount of cylinder block resurfacing is "B".

The maximum limit is as follows:

A + B = 0.2 mm (0.008 in)

After resurfacing cylinder head, check that camshaft rotates freely by hand. If resistance is felt, replace cylinder head.


Nominal cylinder head height:

117.8 - 118.0 mm (4.638 - 4.646 in)

CAMSHAFT VISUAL CHECK

NJEM0019S02

Check camshaft for scratches, seizure and wear.

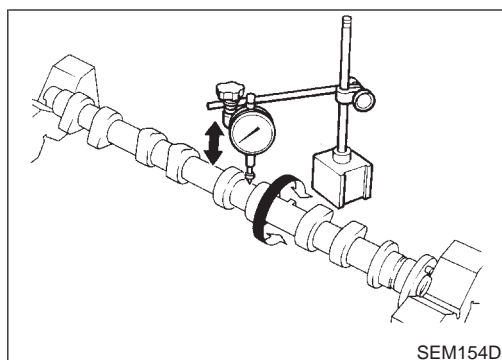**CAMSHAFT RUNOUT**

NJEM0019S03

1. Measure camshaft runout at the center journal.

Runout (Total indicator reading):


Standard

Less than 0.02 mm (0.0008 in)

Limit

0.1 mm (0.004 in)

2. If it exceeds the limit, replace camshaft.

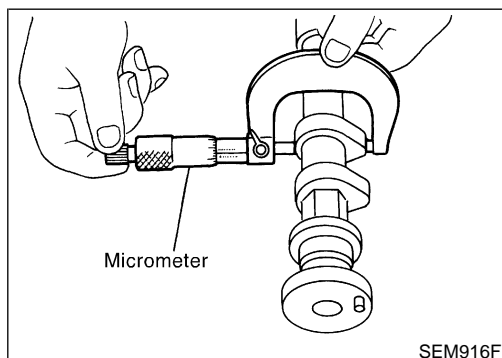**CAMSHAFT CAM HEIGHT**

NJEM0019S04

1. Measure camshaft cam height.

Standard cam height:

Intake

QG16DE with intake valve timing control

40.240 - 40.390 mm (1.5842 - 1.5902 in)

QG18DE with intake valve timing control

40.780 - 40.930 mm (1.6055 - 1.6114 in)

Except for QG16DE and 18DE with intake valve timing control

39.900 - 40.050 mm (1.5709 - 1.5768 in)


Exhaust

40.076 - 40.226 mm (1.5778 - 1.5837 in)

Cam wear limit:

0.20 mm (0.0079 in)

2. If wear is beyond the limit, replace camshaft.

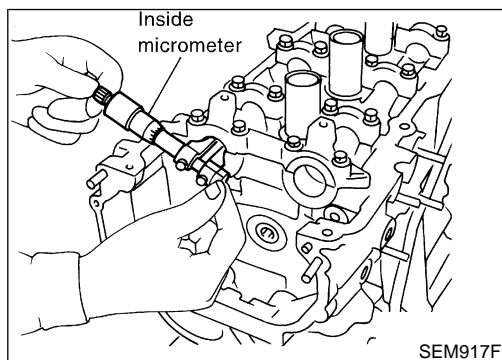**CAMSHAFT JOURNAL CLEARANCE**

NJEM0019S05

1. Install camshaft bracket and tighten bolts to the specified torque.

2. Measure inner diameter of camshaft bearing.

Standard inner diameter:

No. 1 bearing

28.000 - 28.021 mm (1.1024 - 1.1032 in)

No. 2 to No. 5 bearings

24.000 - 24.021 mm (0.9449 - 0.9457 in)

3. Measure outer diameter of camshaft journal.

Standard outer diameter:

No. 1 journal

27.935 - 27.955 mm (1.0998 - 1.1006 in)


No. 2 to No. 5 journals

23.935 - 23.955 mm (0.9423 - 0.9431 in)

4. If clearance exceeds the limit, replace camshaft and/or cylinder head.

Camshaft journal clearance:


Standard

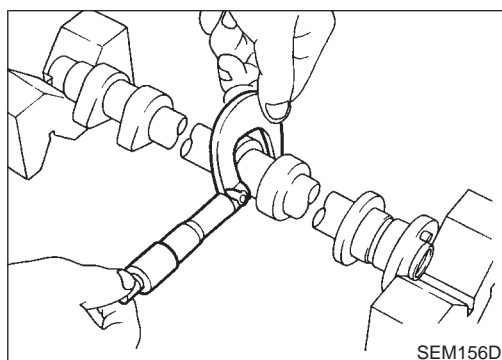

0.045 - 0.086 mm (0.0018 - 0.0034 in)

Limit

0.15 mm (0.0059 in)

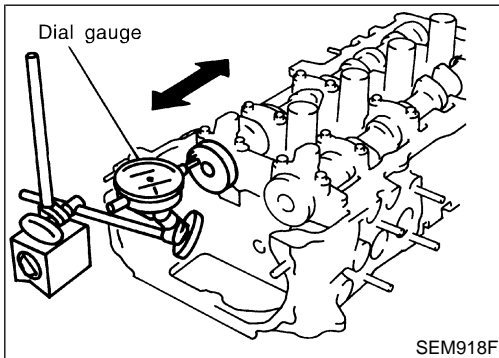

CAMSHAFT END PLAY

NJEM0019S06

1. Install camshaft in cylinder head. Refer to EM-27.
2. Measure camshaft end play.

Camshaft end play:


Standard

0.115 - 0.188 mm (0.0045 - 0.0074 in)

Limit

0.20 mm (0.0079 in)

3. If limit is exceeded, replace camshaft and remeasure end play.
- If limit is still exceeded after replacing camshaft, replace cylinder head.

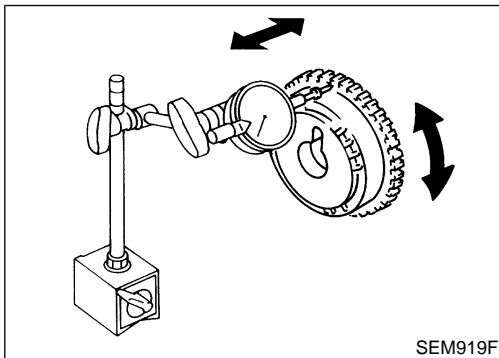

CAMSHAFT SPROCKET RUNOUT


NJEM0019S07

1. Install sprocket on camshaft.
2. Measure camshaft sprocket runout.

Runout (Total indicator reading):

Limit 0.15 mm (0.0059 in)

3. If it exceeds the limit, replace camshaft sprocket.

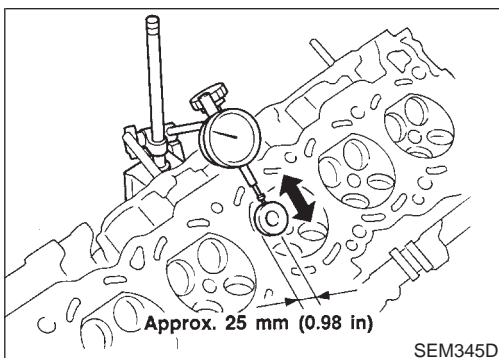

VALVE GUIDE CLEARANCE


NJEM0019S08

1. Measure valve deflection as shown in figure. (Valve and valve guide wear the most in this direction.)

Valve deflection limit (Dial gauge reading):

Intake & Exhaust

0.2 mm (0.008 in)

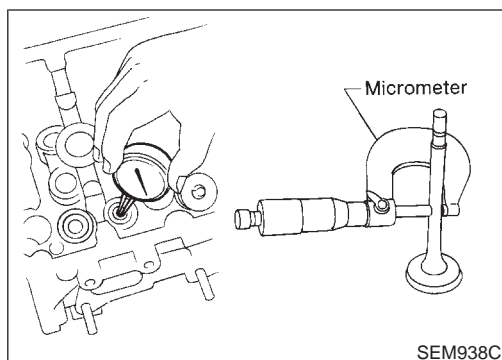


2. If it exceeds the limit, check valve to valve guide clearance.
 - a. Measure valve stem diameter and valve guide inner diameter.
 - b. Calculate valve to valve guide clearance.
Valve to valve guide clearance = valve guide inner diameter – valve stem diameter.
 - c. Check that clearance is within specification.

Unit: mm (in)

	Standard	Limit
Intake	0.020 - 0.050 (0.0008 - 0.0020)	0.1 (0.004)
Exhaust	0.040 - 0.070 (0.0016 - 0.0028)	0.1 (0.004)


- If it exceeds the limit, replace valve and remeasure clearance.
- **If limit is still exceeded after replacing valve, replace valve guide.**

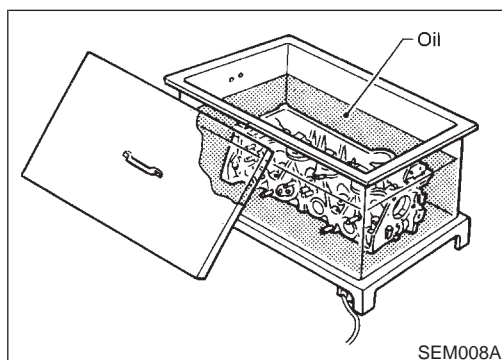


VALVE GUIDE REPLACEMENT

NJEM0019S09

1. To remove valve guide, heat cylinder head to 110 to 130°C (230 to 266°F).

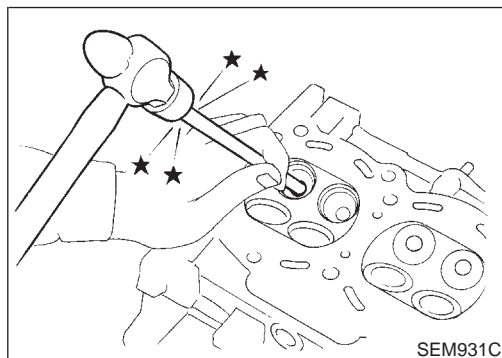

2. Drive out valve guide with a press [under a 20 kN (2 ton, 2.2 US ton, 2.0 Imp ton) pressure] or hammer and suitable tool.

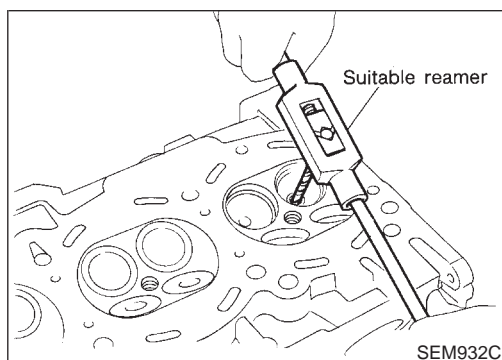

3. Ream cylinder head valve guide hole.


Valve guide hole diameter

(for service parts):


Intake & Exhaust

9.685 - 9.696 mm (0.3813 - 0.3817 in)


Inspection (Cont'd)

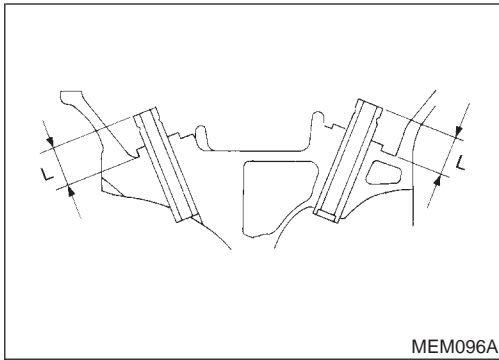

- Heat cylinder head to 110 to 130°C (230 to 266°F) and press service valve guide into cylinder head.

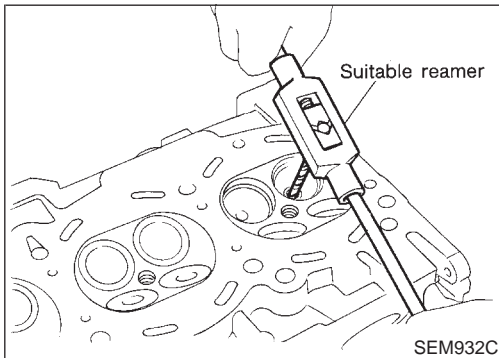Projection "L":**11.5 - 11.7 mm (0.453 - 0.461 in)**


- Ream valve guide.

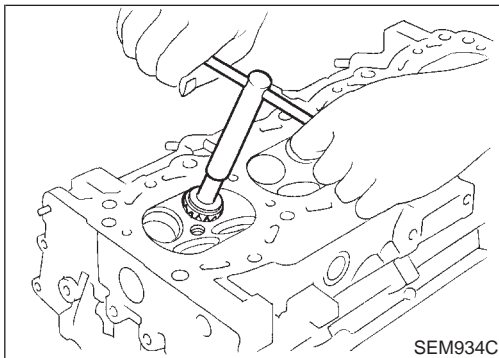Finished size:**Intake & Exhaust****5.500 - 5.515 mm (0.2165 - 0.2171 in)****VALVE SEATS**

NJEM0019S10

Check valve seats for pitting at contact surface. Resurface or replace if excessively worn.

- Before repairing valve seats, check valve and valve guide for wear. If they have worn, replace them. Then correct valve seat.
- Use both hands to cut uniformly.

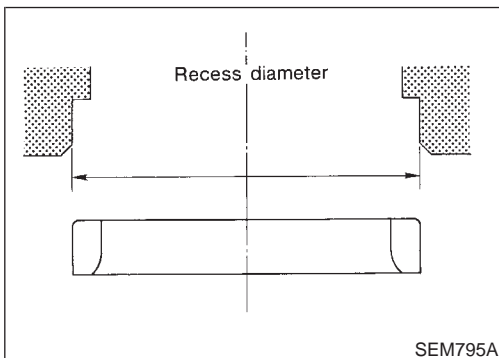
**REPLACING VALVE SEAT FOR SERVICE PARTS**

NJEM0019S11


- Bore out old seat until it collapses. Set machine depth stop so that boring cannot contact the bottom face of seat recess in cylinder head.
- Ream cylinder head recess.

Reaming bore for service valve seat**Oversize [0.5 mm (0.020 in)]:****Refer to SDS, EM-72.**

Use the valve guide center for reaming to ensure valve seat will have the correct fit.

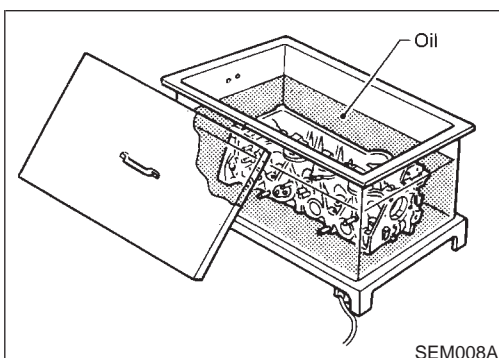

- Heat cylinder head to 110 to 130°C (230 to 266°F).
- Press fit valve seat until it seats on the bottom.

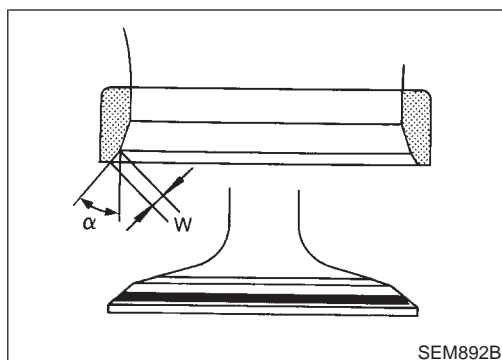

5. Cut or grind valve seat using suitable tool to the specified dimensions as shown in SDS, EM-72.
6. After cutting, lap valve seat with abrasive compound.
7. Check valve seating condition.

Seat face angle " α ":

44°53' - 45°07'


Contacting width " W ":

Intake

1.06 - 1.34 mm (0.0417 - 0.0528 in)

Exhaust

1.20 - 1.68 mm (0.0472 - 0.0661 in)

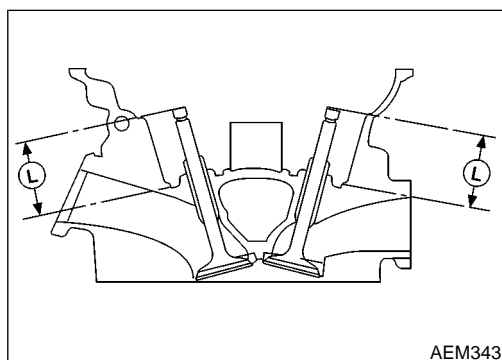

8. Use a depth gauge to measure the distance " L " between the mounting surface of the cylinder head spring seat and the valve stem end. If the distance is shorter than specified, repeat step 5 above to correct it. If the distance is longer, replace the valve seat.


Valve seat resurface limit:

Intake

35.95 - 36.55 mm (1.4154 - 1.4390 in)

Exhaust

35.92 - 36.52 mm (1.4142 - 1.4378 in)

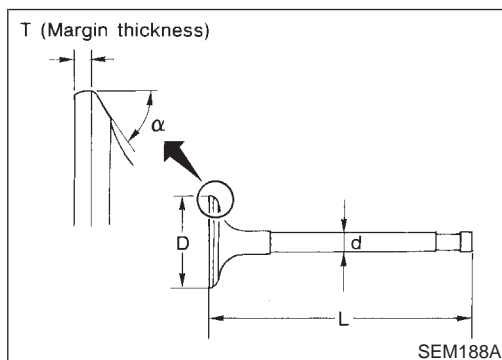


VALVE DIMENSIONS

Check dimensions of each valve. Refer to SDS, EM-68 for dimensions.

When valve head has been worn down to 0.5 mm (0.020 in) in margin thickness, replace valve.

Grinding allowance for valve stem tip is 0.2 mm (0.008 in) or less.

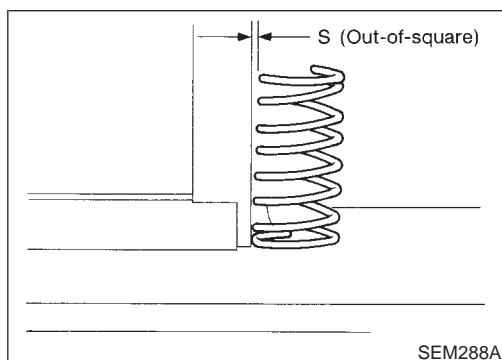

VALVE SPRING


Squareness

1. Measure dimension " S ".

Out-of-square " S ":

Less than 1.75 mm (0.0689 in)

2. If it exceeds the limit, replace spring.

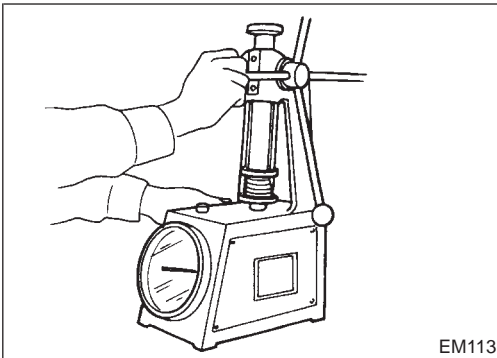

EM113

Pressure

Check valve spring pressure at specified spring height.

NJEM0019S1302


Pressure:**Standard**

370.0 N (37.73 kg, 83.19 lb) at 23.64 mm (0.9307 in)

Limit

More than 347.8 N (35.46 kg, 78.19 lb) at 23.64 mm (0.9307 in)

If it exceeds the limit, replace spring.

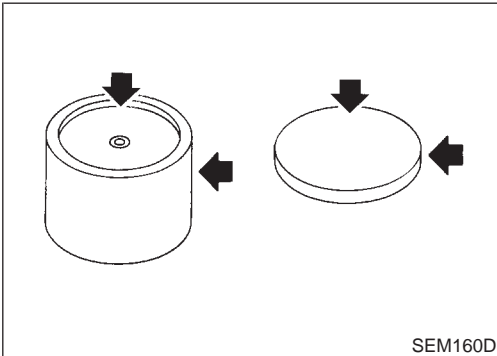


SEM160D

VALVE LIFTER AND VALVE SHIM

NJEM0019S16

1. Check contact and sliding surfaces for wear or scratches.

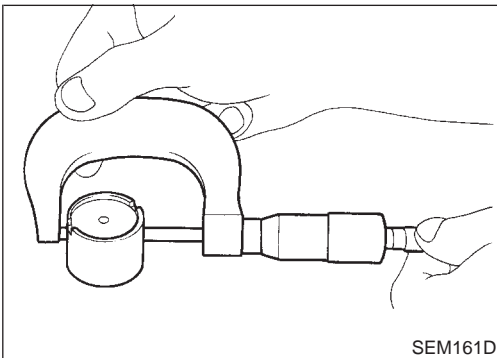

SEM161D

2. Check diameter of valve lifter and valve lifter guide bore.

Valve lifter outside diameter:

29.960 - 29.975 mm (1.1795 - 1.1801 in)


Lifter guide inside diameter:

30.000 - 30.021 mm (1.1811 - 1.1819 in)


Clearance between valve lifter and valve lifter guide:

0.025 - 0.065 mm (0.0010 - 0.0026 in)

If it exceeds the limit, replace valve lifter or cylinder head which exceeds the standard diameter tolerance.

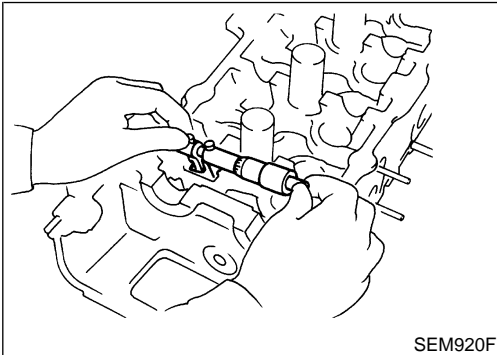

SEM920F

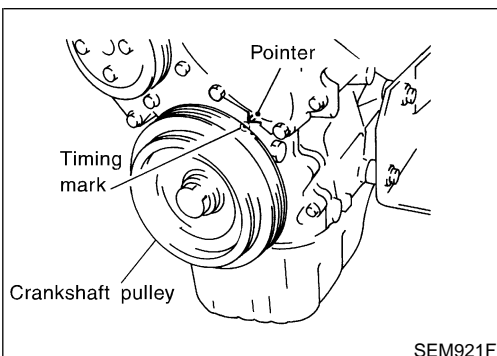

SEM921F

Valve Clearance

NJEM0041





CHECKING

NJEM0041S01

Check valve clearance while engine is warm and not running.

1. Remove rocker cover.
2. Remove all spark plugs.
3. Set No. 1 cylinder at TDC on its compression stroke.
 - Align pointer with TDC mark on crankshaft pulley.
 - Check that valve lifters on No. 1 cylinder are loose and valve lifters on No. 4 are tight.

- If not, turn crankshaft one revolution (360°) and align as described above.

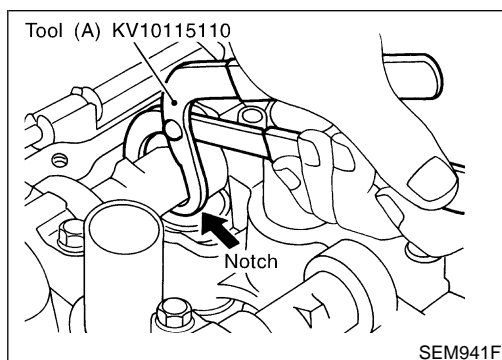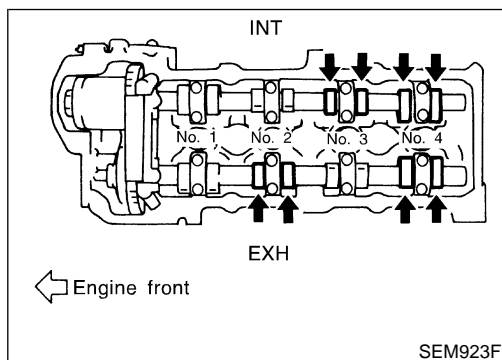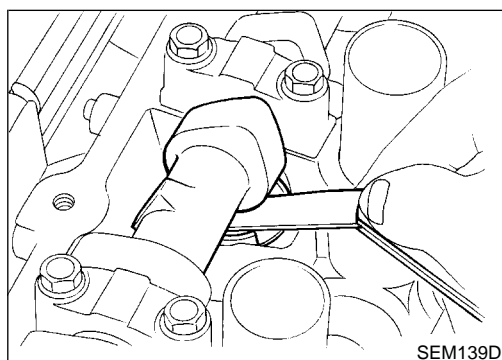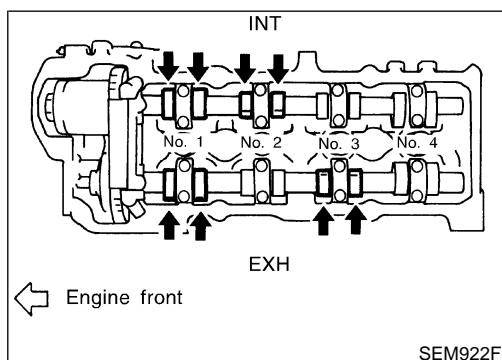

4. Check only those valves shown in the figure.

- Using a feeler gauge, measure clearance between valve lifter and camshaft.
- Record any valve clearance measurements which are out of specification. They will be used later to determine the required replacement adjusting shim.

Valve clearance for checking (Hot):

Intake

0.21 - 0.49 mm (0.008 - 0.019 in)

Exhaust

0.30 - 0.58 mm (0.012 - 0.023 in)

5. Turn crankshaft one revolution (360°) and align mark on crankshaft pulley with pointer.
6. Check only those valves shown in the figure.
- Use the same procedure as mentioned in step 4.
7. If all valve clearances are within specification, install the following parts:
 - Rocker cover
 - All spark plugs

ADJUSTING

NJEM0041S02

Adjust valve clearance while engine is cold.


1. Turn crankshaft. Position cam lobe upward on camshaft for valve that must be adjusted.
2. Place Tool (A) around camshaft as shown in figure.

Before placing Tool (A), rotate notch toward center of cylinder head. (See figure.) This will simplify shim removal later.


CAUTION:

Be careful not to damage cam surface with Tool (A).

Valve Clearance (Cont'd)

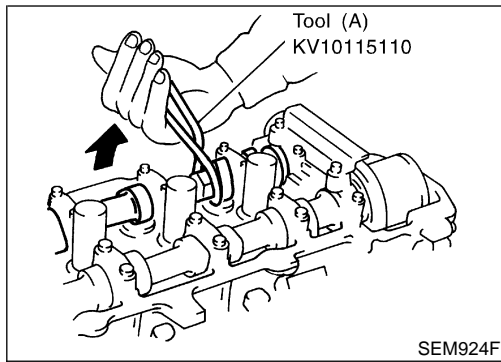


3. Rotate Tool (A) so that valve lifter is pushed down.

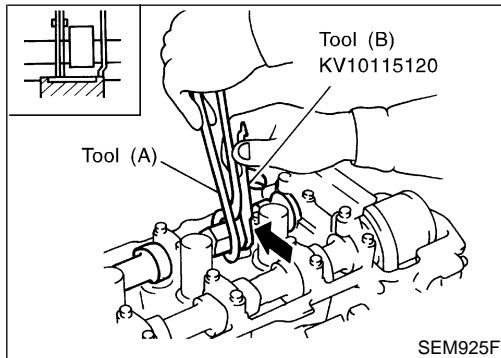

4. Place Tool (B) between camshaft and valve lifter to retain valve lifter.

CAUTION:

- Tool (B) must be placed as close to camshaft bracket as possible.
 - Be careful not to damage cam surface with Tool (B).
5. Remove Tool (A).

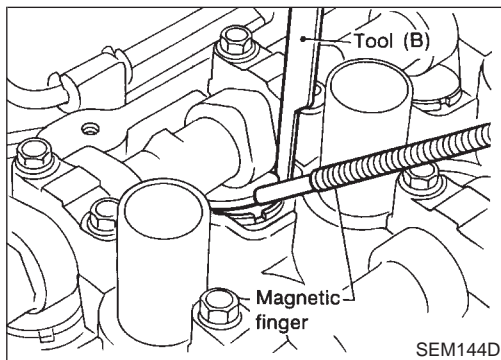

6. Remove adjusting shim using a small screwdriver and a magnetic finger.
7. Determine replacement adjusting shim size using the following formula.

- Use a micrometer to determine thickness of removed shim.
 - Calculate thickness of new adjusting shim so valve clearance comes within specified values.
- R = Thickness of removed shim
N = Thickness of new shim
M = Measured valve clearance


Intake:

$$N = R + [M - 0.37 \text{ mm (0.0146 in)}]$$


Exhaust:



$$N = R + [M - 0.40 \text{ mm (0.0157 in)}]$$

Shims are available in 50 sizes from 2.00 mm (0.0787 in) to 2.98 mm (0.1173 in), in steps of 0.02 mm (0.0008 in).

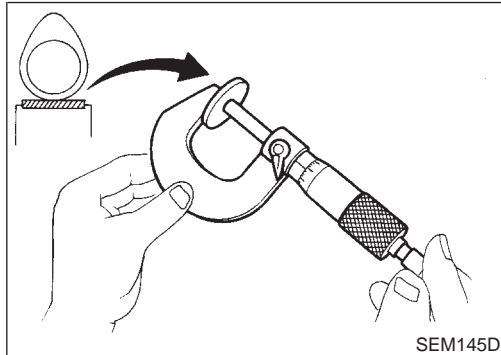

- Select the closest size shim to the calculated thickness. Refer to chart in SDS, EM-69.

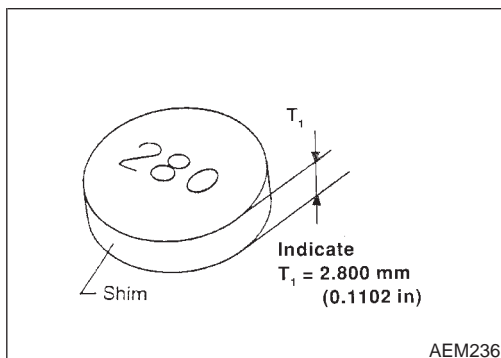

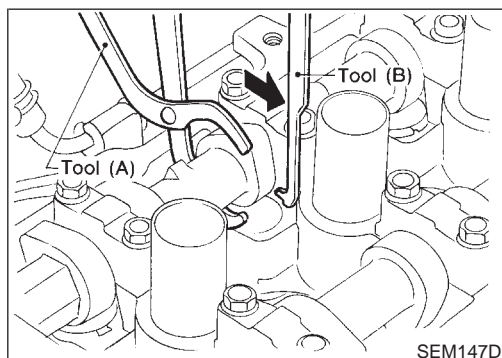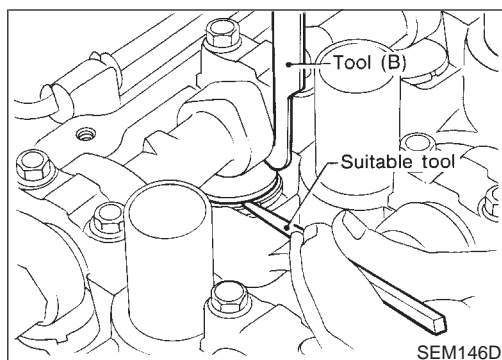

8. Install new shim using a suitable tool.
 - **Install with the surface on which the thickness is stamped facing down.**

9. Place Tool (A) as explained in steps 2 and 3.
10. Remove Tool (B).
11. Remove Tool (A).
12. Recheck valve clearance.



Valve clearance:

Unit: mm (in)

	For adjusting		For checking
	Hot	Cold* (reference data)	Hot
Intake	0.32 - 0.40 (0.013 - 0.016)	0.25 - 0.33 (0.010 - 0.013)	0.21 - 0.49 (0.008 - 0.019)
Exhaust	0.37 - 0.45 (0.015 - 0.018)	0.32 - 0.40 (0.013 - 0.016)	0.30 - 0.58 (0.012 - 0.023)

*: At a temperature of approximately 20°C (68°F)

Whenever valve clearances are adjusted to cold specifications, check that the clearances satisfy hot specifications and adjust again if necessary.

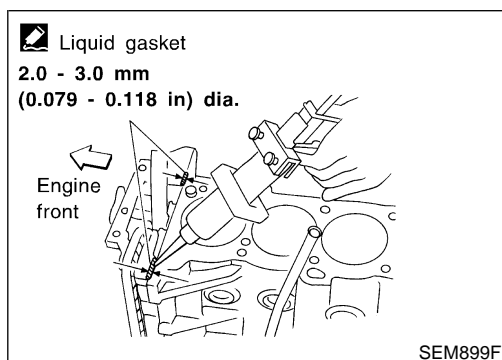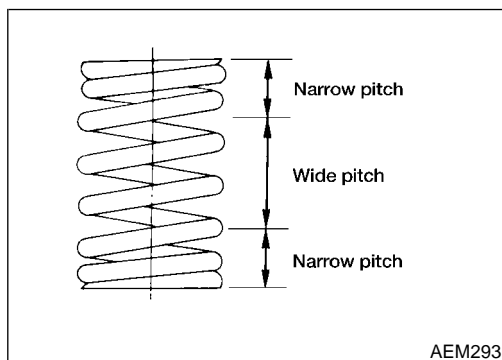**Assembly**

NJEM0020






1. Install valve component parts.
 - **Always use new valve oil seal. Refer to EM-31.**
 - **Before installing valve oil seal, install valve spring seat.**
 - **After installing valve components, tap valve stem tip with a plastic hammer to assure a proper fit.**
 - **Install valve spring (narrow pitch at both ends of spring) with either end toward cylinder head.**

Installation

NJEM0021

1. Before installing cylinder head gasket, apply a continuous bead of liquid gasket to mating surface of cylinder block.
2. Install cylinder head gasket.
 - **When installing cylinder head with manifolds, use new cylinder head gasket.**

Installation (Cont'd)

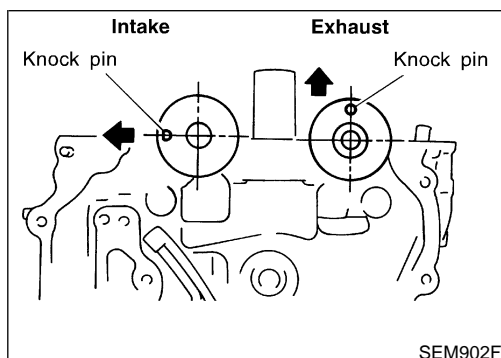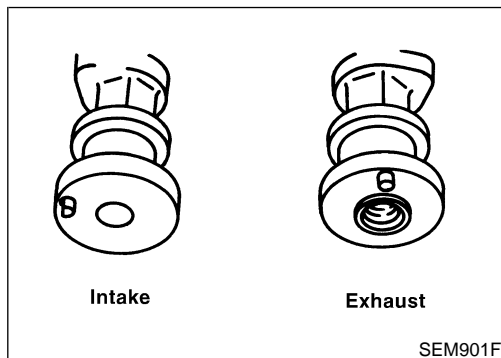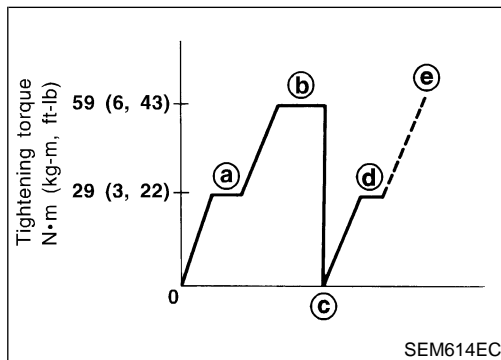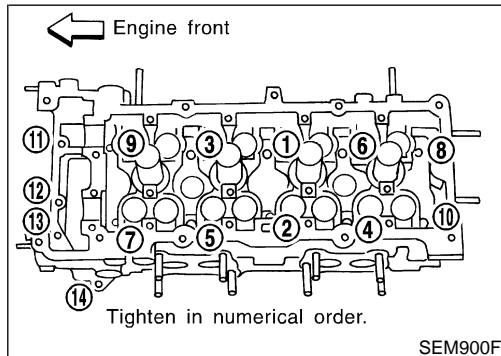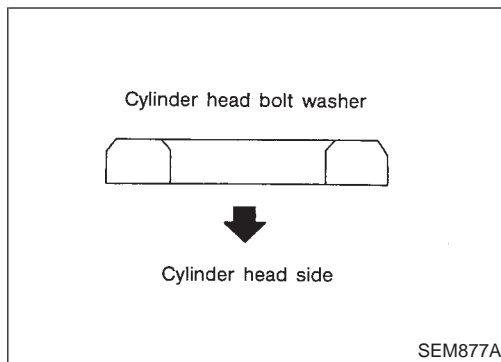

3. Install cylinder head with manifolds.

- Be sure to install washers between bolts and cylinder head.
- Do not rotate crankshaft and camshaft separately, or valves will strike piston heads.
- Apply new engine oil to cylinder head bolt threads and seat surfaces.



• Tightening procedure

- Tighten bolts to 29 N·m (3 kg-m, 22 ft-lb).
- Tighten bolts to 59 N·m (6 kg-m, 43 ft-lb).
- Loosen bolts completely.
- Tighten bolts to 29 N·m (3 kg-m, 22 ft-lb).
- Turn bolts 50 to 55 degrees clockwise or if angle wrench is not available, tighten bolts to 59 ± 4.9 N·m (6 ± 0.5 kg-m, 43 ± 3.6 ft-lb).
- Tightening bolts (11 - 14) to 6.3 to 8.3 N·m (0.64 to 0.85 kg-m, 55.8 to 73.5 in-lb).

	Tightening torque N·m (kg-m, ft-lb)				
	a	b	c	d	e, f
Bolts (1 - 10)	29 (3, 22)	59 (6, 43)	0 (0, 0)	29 (3, 22)	50 - 55 degrees or 59 ± 4.9 (6 ± 0.5 , 43 ± 3.6 ft-lb)
Bolts (11 - 14)	—	—	—	—	6.3 - 8.3 (0.64 - 0.85, 55.8 - 73.5 in-lb)

4. Install camshaft.

- Make sure camshafts are aligned as shown in figure.

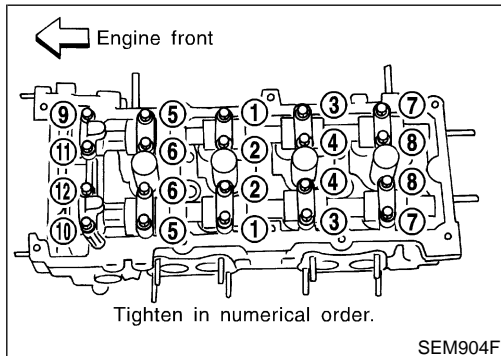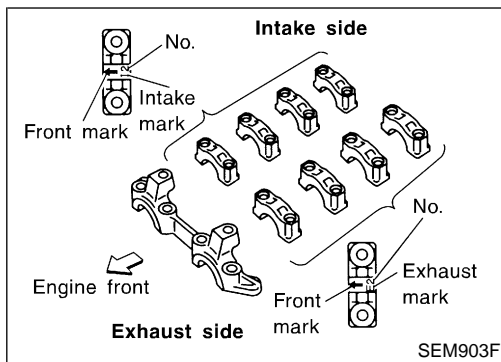

5. Install camshaft brackets.

- Make sure camshaft brackets are aligned as marked during disassembly.

- Apply new engine oil to bolt threads and seat surface.
- Tighten camshaft bracket bolts in the following steps.
 - Tighten bolts 9 - 12, then 1 - 8.
 2.0 N·m (0.204 kg-m, 17.7 in-lb)
 - Tighten bolts 1 - 12.
 5.9 N·m (0.60 kg-m, 52.2 in-lb)
 - Tighten bolts 1 - 12.
 9.0 - 11.8 N·m (0.91 - 1.20 kg-m, 79 - 104 in-lb)
- If any part of valve assembly or camshaft is replaced, check valve clearance according to reference data. After completing assembly check valve clearance. Refer to "Checking" and "Adjusting" in "VALVE CLEARANCE" (EM-42).


Reference data valve clearance (Cold):

Intake

0.25 - 0.33 mm (0.010 - 0.013 in)


Exhaust

0.32 - 0.40 mm (0.013 - 0.016 in)

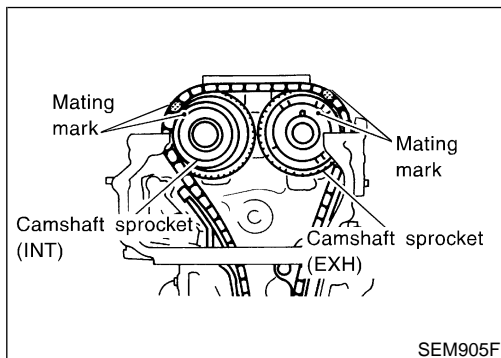

6. Install camshaft sprocket.


- Set timing chain by aligning mating marks with those of camshaft sprockets.

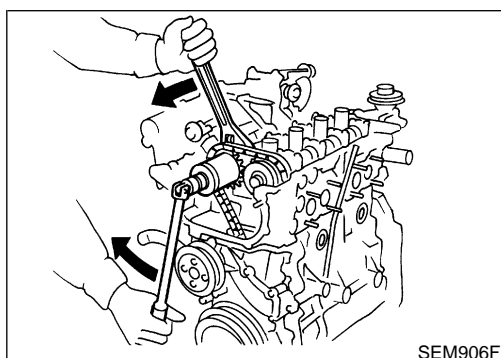


7. Install camshaft sprocket bolts and tighten them to correct torque.

- Apply new engine oil to bolt threads and seat surface.


Installation (Cont'd)

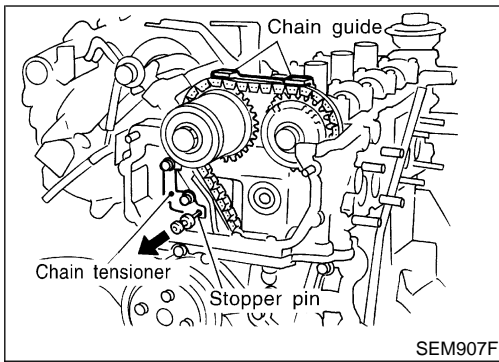


8. Install chain tensioner.
 - Before installing chain tensioner, insert a suitable pin into pin hole of chain tensioner.
 - After installing chain tensioner, remove the pin.
9. Install timing chain guide.

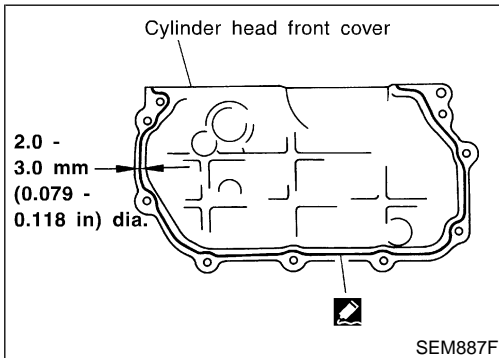


10. Install cylinder head front cover.
 - Apply liquid gasket to cylinder head front cover.
 - Use Genuine Liquid Gasket or equivalent.

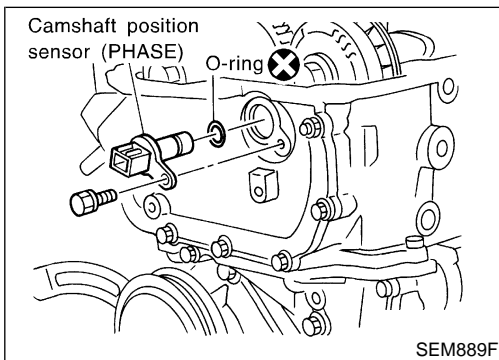

11. Install camshaft position sensor (PHASE).

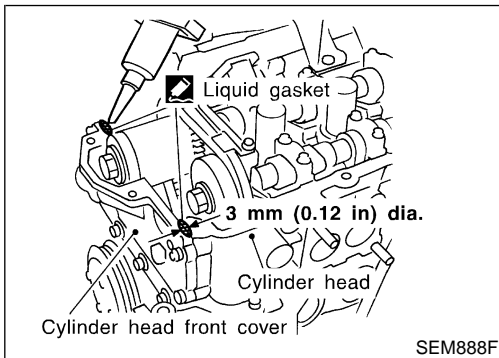

12. Before installing rocker cover, apply a continuous bead of liquid gasket to mating surface of cylinder head.

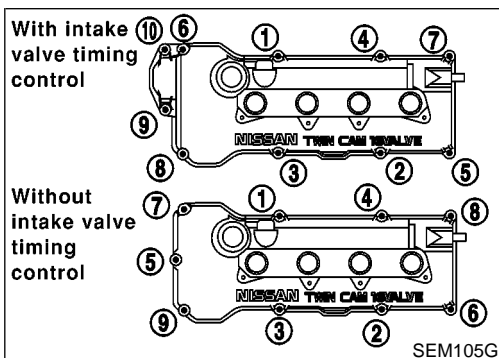

13. Install rocker cover with rocker cover gasket and tighten bolts in numerical order as shown in the figure.
14. Install spark plugs.
15. Install ignition coils.
16. Install exhaust manifold.
17. Install intake manifold rear supports.
18. Connect vacuum hoses, fuel hoses, water hose, wire, harness, connectors and so on.
19. Install front exhaust tube.
20. Install front undercovers.

- 21. Install air duct to intake manifold collector.
- 22. Drive belts.
For adjusting drive belt deflection, refer to “Checking”, EM-15.
- 23. Reinstall parts in reverse order of removal.

GI

MA

EM

LC

EC

FE

GL

MT

AT

AX

SU

BR

ST

RS

BT

HA


SC

EL

IDX

Removal and Installation

NJEM0022

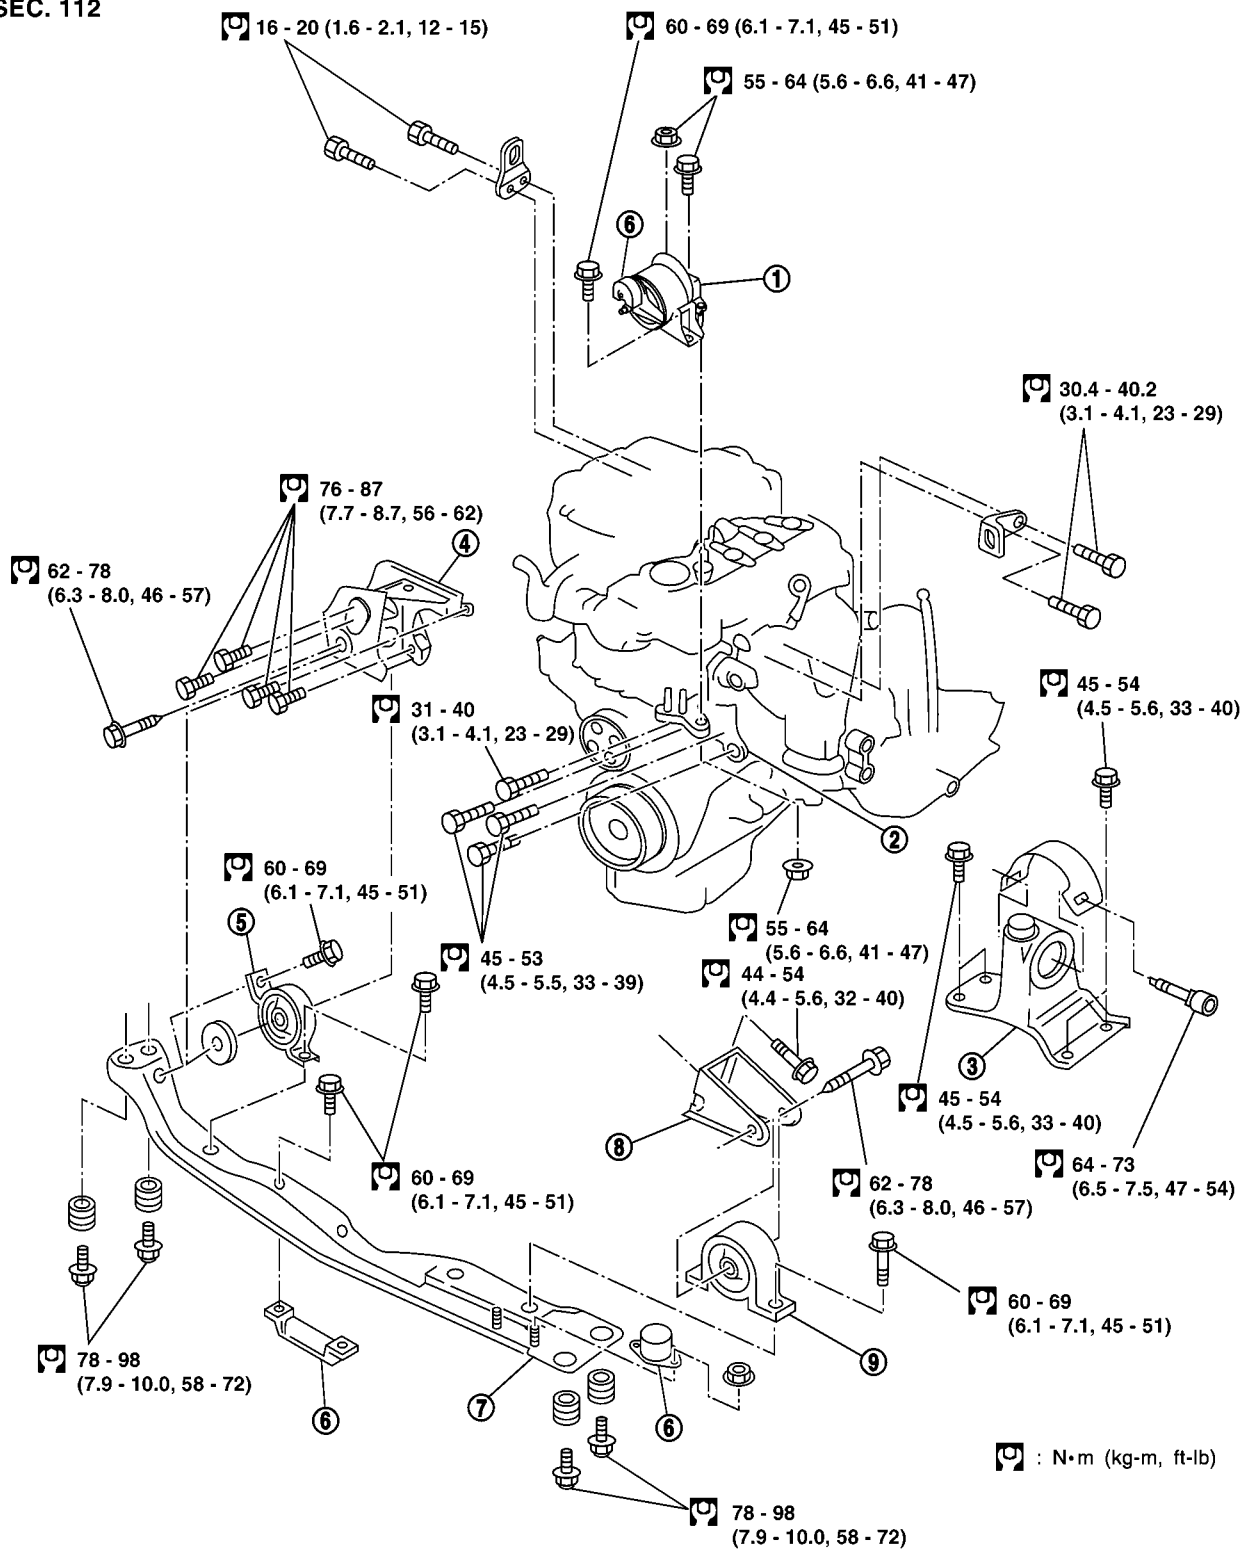SEC. 112


SEM107G

- | | | |
|---------------------------------|--|----------------------------------|
| 1. RH engine mounting | 5. Rear engine mounting | 8. Front engine mounting bracket |
| 2. RH engine mounting bracket | 6. Dynamic damper (Specific models only) | 9. Front engine mounting |
| 3. LH engine mounting | 7. Center member | |
| 4. Rear engine mounting bracket | | |

WARNING:

- Position vehicle on a flat and solid surface.
- Place chocks at front and back of rear wheels.
- Do not remove engine until exhaust system has completely cooled off, otherwise, you may burn yourself and/or fire may break out in fuel line.
- Before disconnecting fuel hose, release pressure. Refer to EC-31, "Fuel Pressure Release".
- Be sure to lift engine and transaxle in a safe manner.
- For engines not equipped with engine slingers, attach proper slingers and bolts described in PARTS CATALOG.

CAUTION:

- When lifting engine, be sure to clear surrounding parts. Use special care near accelerator wire casing, brake lines and brake master cylinder.
- When lifting the engine, always use engine slingers in a safe manner.
- When removing drive shaft, be careful not to damage grease seal of transaxle.
- Before separating engine and transaxle, remove crankshaft position sensor (POS) from the cylinder block assembly.
- Always be extra careful not to damage edge of crankshaft position sensor (POS), or signal plate teeth.


Engine cannot be removed separately from transaxle. Remove engine with transaxle as an assembly.

REMOVAL

1. Drain coolant from radiator and cylinder block. Refer to LC-18, "Changing Engine Coolant".
2. Remove coolant reservoir tank and bracket.
3. Drain engine oil.
4. Remove battery and battery tray.
5. Remove air cleaner and air duct.
6. Remove drive belts.
7. Remove alternator and air conditioner compressor from engine.
8. Remove power steering oil pump from engine and position aside.

Power steering oil pump does not need to be disconnected from power steering tubes.

Removal and Installation (Cont'd)

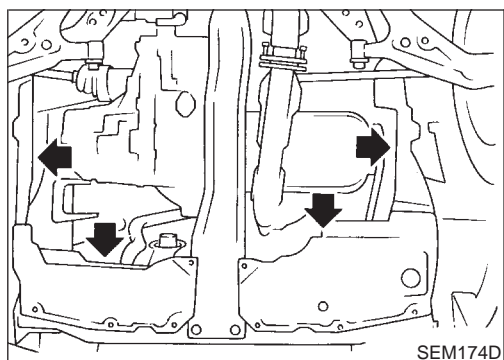


9. Remove the following parts:
 - RH and LH front tires
 - Splash covers
 - RH and LH brake caliper assemblies
Refer to BR-26, "FRONT DISC BRAKE".


Brake hose does not need to be disconnected from brake caliper assembly. Never depress brake pedal.

- RH & LH drive shaft. Refer to AX-9, "Drive Shaft".

When removing drive shaft, be careful not to damage transaxle side grease seal.

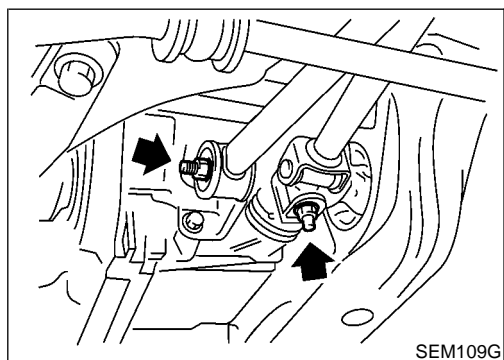

- Disconnect control rod and support rod from transaxle. (M/T models.)
Refer to MT-29, "TRANSAXLE GEAR CONTROL".
- Disconnect control cable from transaxle. (A/T models.)
Refer to AT-214, "Removal".

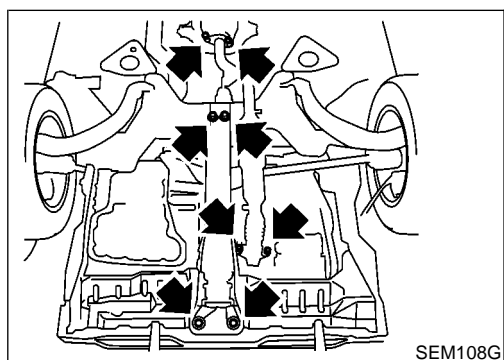


- Center member
- Front exhaust tube
- Stabilizer bar
- Cooling fan
- Radiator
- Disconnect wires, harness, pipes, hoses and so on.

10. Lift up engine slightly and disconnect or remove all engine mountings.

When lifting engine, be sure to clear surrounding parts. Use special care near brake tubes and brake master cylinder.

11. Remove engine with transaxle as shown.

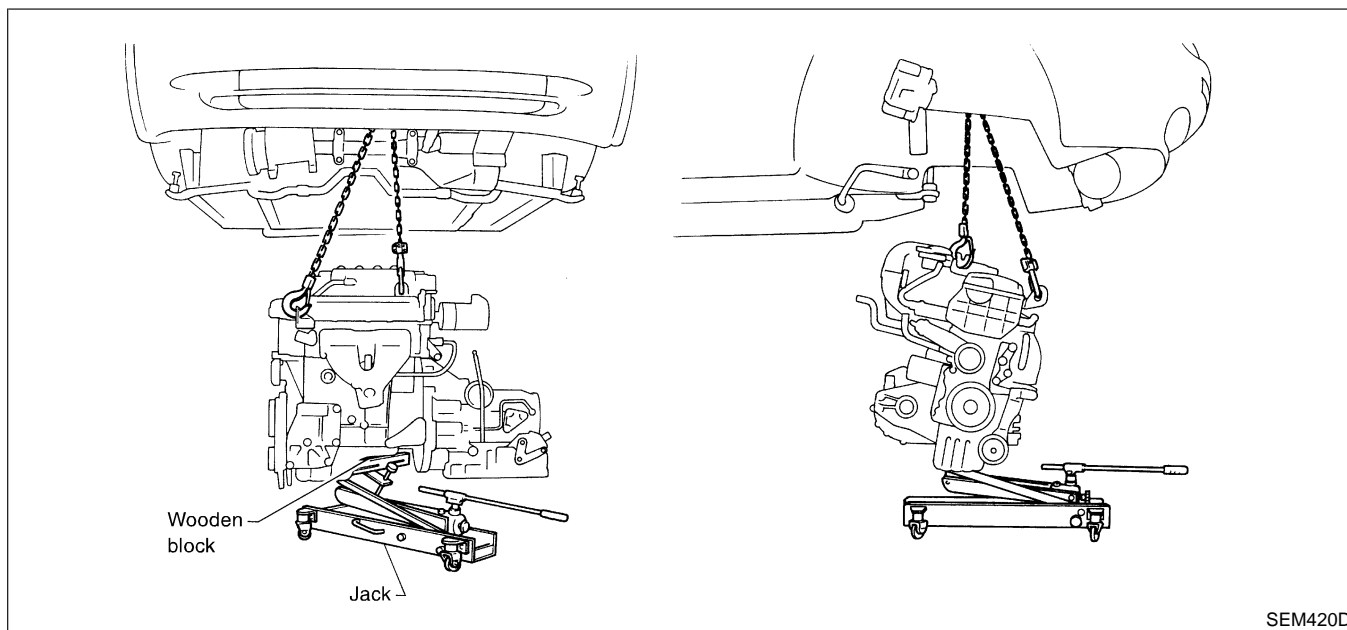

INSTALLATION


- Install in reverse order of removal.

NJEM0022S02

Components

NJEM0023

SEC. 110•120•226

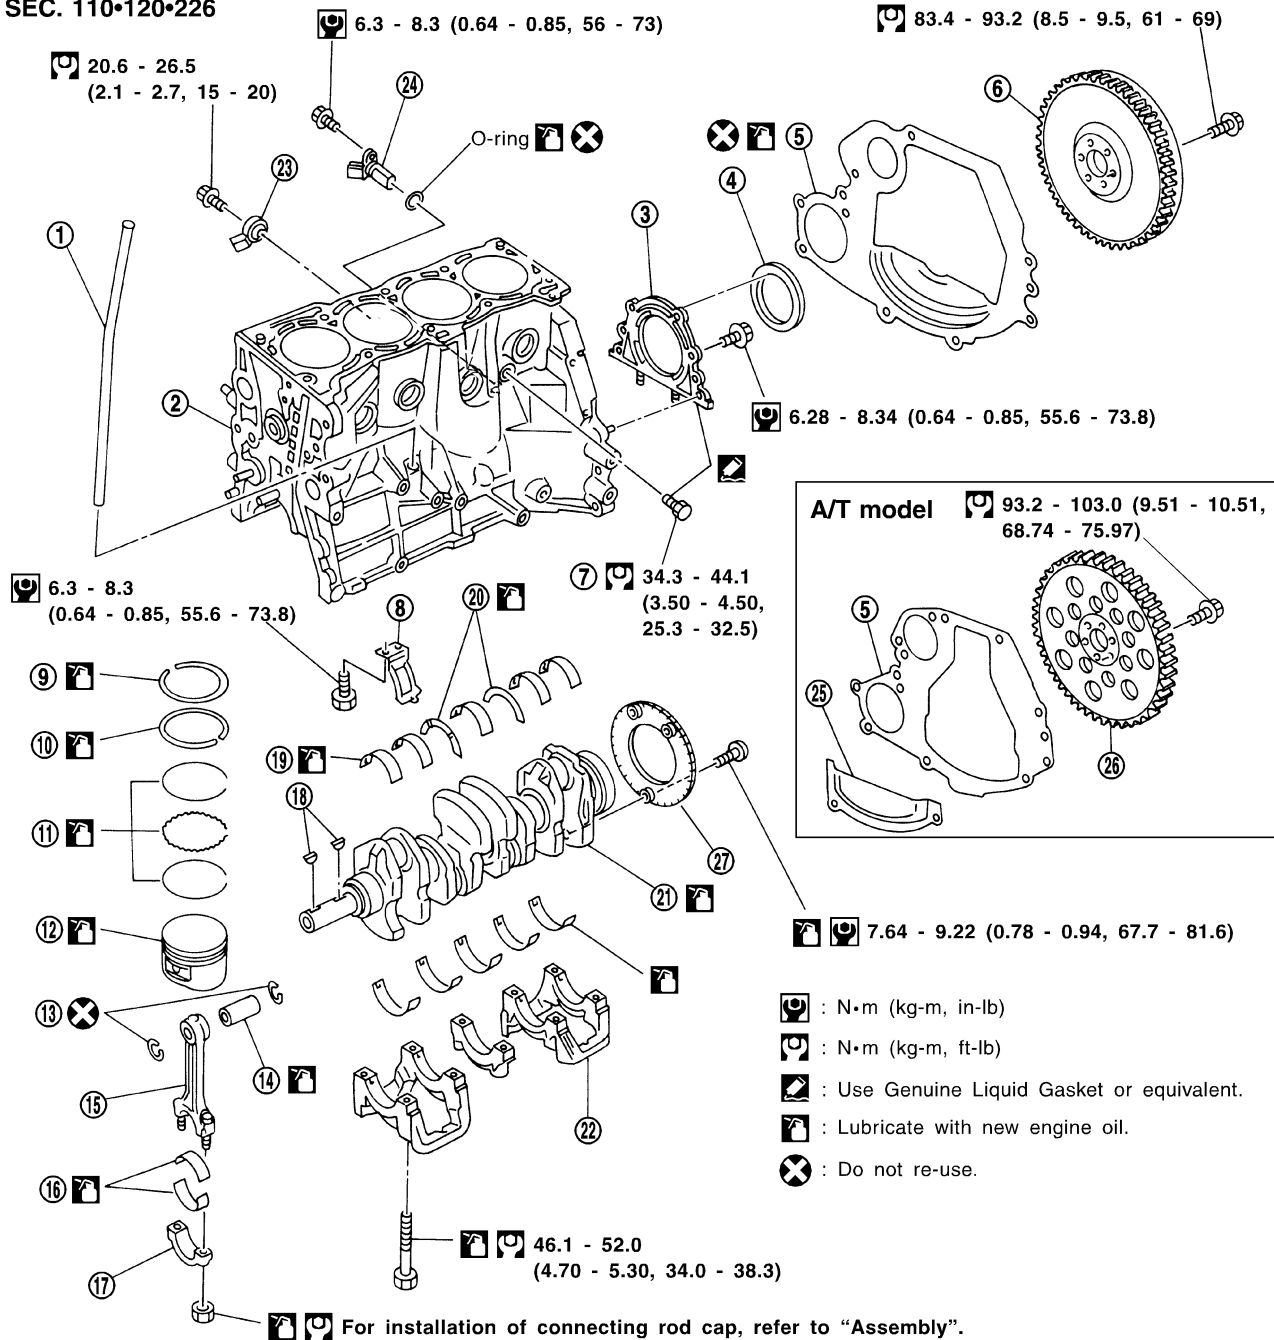

SEM926FA


- | | | |
|---------------------------|----------------------------|--------------------------------------|
| 1. Oil level gauge guide | 10. 2nd ring | 19. Main bearing |
| 2. Cylinder block | 11. Oil ring | 20. Thrust bearing |
| 3. Rear oil seal retainer | 12. Piston | 21. Crankshaft |
| 4. Rear oil seal | 13. Snap ring | 22. Main bearing cap |
| 5. Rear plate | 14. Piston pin | 23. Knock sensor |
| 6. Flywheel | 15. Connecting rod | 24. Crankshaft position sensor (POS) |
| 7. Drain plug | 16. Connecting rod bearing | 25. Rear lower plate |
| 8. Baffle plate | 17. Connecting rod cap | 26. Drive plate |
| 9. Top ring | 18. Key | 27. Signal plate |

Removal and Installation

NJEM0024

CAUTION:

- When installing sliding parts such as bearings and pistons, apply engine oil on the sliding surfaces.
- Place removed parts, such as bearings and bearing caps, in their proper order and direction.
- When installing connecting rod nuts and main bearing cap bolts, apply new engine oil to threads and seating surfaces.
- Do not allow any magnetic materials to contact the signal plate teeth of flywheel or drive plate, and rear plate.
- Remove the crankshaft position sensor (POS).
- Be careful not to damage sensor edges and single plate teeth.

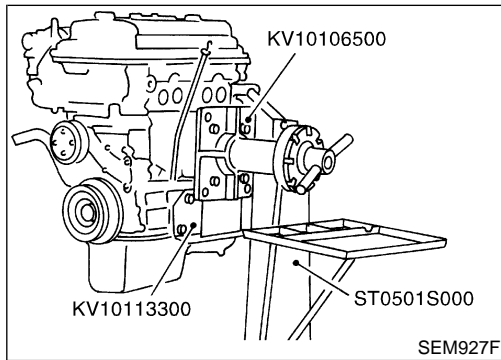


Disassembly

PISTON AND CRANKSHAFT

NJEM0025

NJEM0025S01


1. Place engine on a work stand.
2. Drain coolant and oil.
3. Remove timing chain. Refer to EM-23.

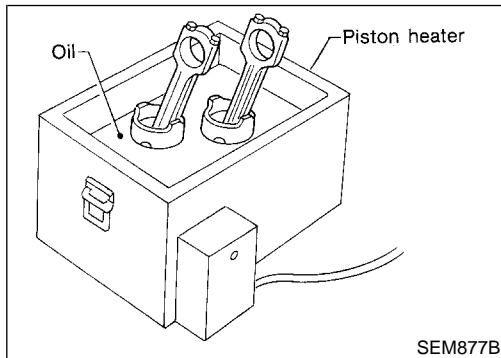


4. Remove pistons with connecting rod.
- When disassembling piston and connecting rod, remove snap ring first. Then heat piston to 60 to 70°C (140 to 158°F) or use piston pin press stand at room temperature.

CAUTION:


- When piston rings are not replaced, make sure that piston rings are mounted in their original positions.
- When replacing piston rings, if there is no punch mark, install with either side up.

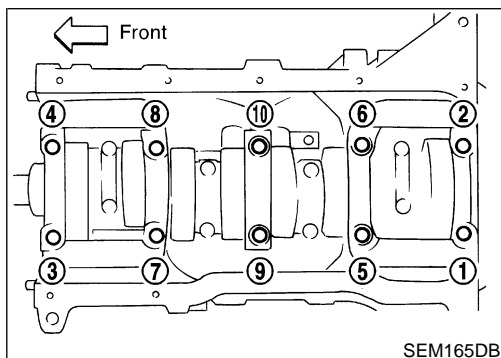

5. Loosen main bearing caps in numerical order as shown in figure.
 6. Remove bearing caps, main bearings and crankshaft.
- Before removing bearing caps, measure crankshaft end play. Refer to EM-63.
 - Bolts should be loosened in two or three steps.

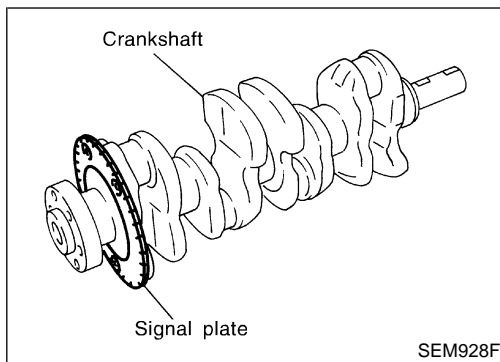

7. Remove signal plate from crankshaft.

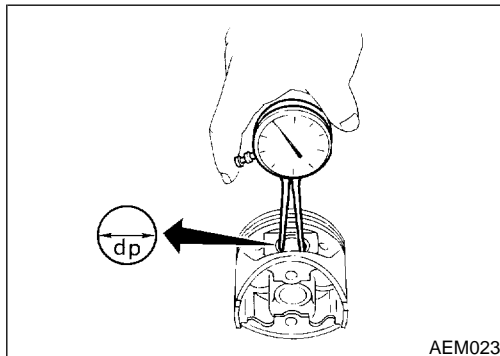

Inspection

PISTON AND PISTON PIN CLEARANCE

NJEM0026

NJEM0026S01

1. Measure inner diameter of piston pin hole "dp".


Standard diameter "dp":

QG18DE

18.993 - 19.005 mm (0.7478 - 0.7482 in)

Except for QG18DE

18.987 - 18.999 mm (0.7475 - 0.7480 in)

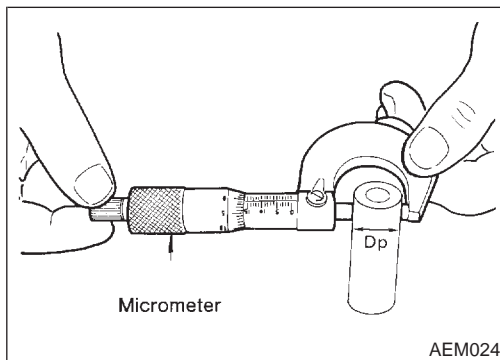

2. Measure outer diameter of piston pin "Dp".

Standard diameter "Dp":

18.989 - 19.001 mm (0.7476 - 0.7481 in)

3. Calculate piston pin clearance.


QG18DE

Dp - dp: 0.002 - 0.006 mm (0.0001 - 0.0002 in)

Except for QG18DE

Dp - dp: -0.004 to 0 mm (-0.0002 to 0 in)

If it exceeds the above value, replace piston assembly with pin.

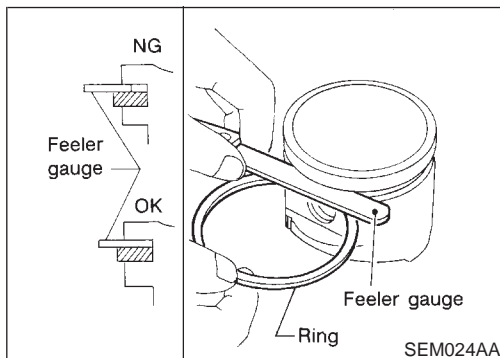

PISTON RING SIDE CLEARANCE

NJEM0026S02

Side clearance:

Top ring

QG18DE

0.040 - 0.080 mm (0.0016 - 0.0031 in)

Except for QG18DE

0.050 - 0.085 mm (0.0020 - 0.0033 in)

2nd ring


0.030 - 0.070 mm (0.0012 - 0.0028 in)

Max. limit of side clearance:

0.2 mm (0.008 in)

If out of specification, replace piston and/or piston ring assembly.

Inspection (Cont'd)

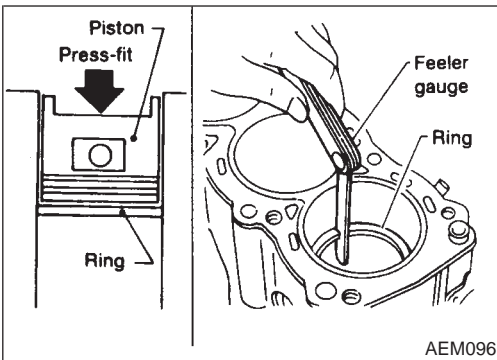

PISTON RING END GAP

NJEM0026S03

End gap:

Top ring

0.20 - 0.44 mm (0.0079 - 0.0173 in)

2nd ring

QG18DE

0.50 - 0.74 mm (0.0197 - 0.0291 in)

Except for QG18DE

0.37 - 0.61 mm (0.0146 - 0.0240 in)

Oil ring

0.20 - 0.69 mm (0.0079 - 0.0272 in)

Max. limit of ring gap:

Top ring 0.49 mm (0.0193 in)


2nd ring 0.64 mm (0.0252 in)

Oil ring 1.09 mm (0.0429 in)

If out of specification, replace piston ring. If gap exceeds maximum limit with a new ring, rebore cylinder and use oversized piston and piston rings.

Refer to SDS, EM-74.

- When replacing the piston, check the cylinder bore surface for scratches or seizure. If scratches or seizure is found, hone or replace the cylinder block.

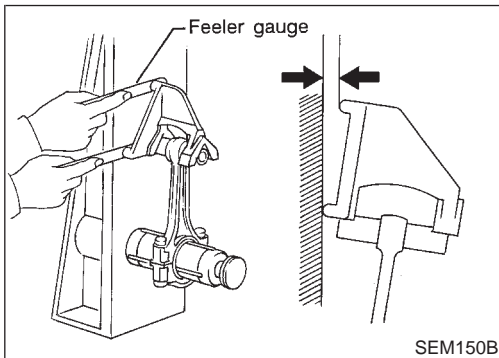

CONNECTING ROD BEND AND TORSION

NJEM0026S04

Bend:

Limit 0.15 mm (0.0059 in)


per 100 mm (3.94 in) length

Torsion:


Limit 0.3 mm (0.012 in)

per 100 mm (3.94 in) length

If it exceeds the limit, replace connecting rod assembly.

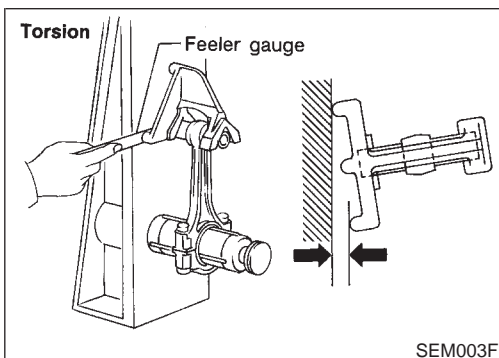

NJEM0026S05

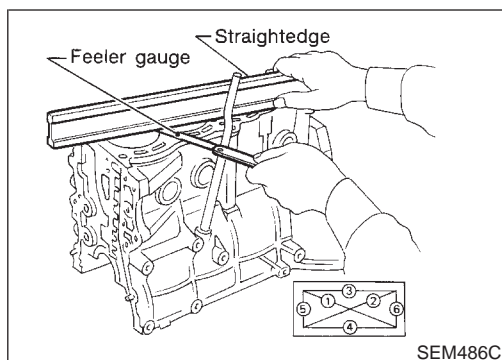

SEM486C

CYLINDER BLOCK DISTORTION AND WEAR

Clean upper surface of cylinder block.

Use a reliable straightedge and feeler gauge to check the flatness of cylinder block surface. Check along six positions shown in figure.

Block surface flatness:

Standard Less than 0.03 mm (0.0012 in)

Limit 0.10 mm (0.004 in)

If out of specification, resurface it.

The limit for cylinder block resurfacing is determined by the amount of cylinder head resurfacing.

Amount of cylinder head resurfacing is "A".

Amount of cylinder block resurfacing is "B".


The maximum limit is as follows:

A + B = 0.2 mm (0.008 in)


**Nominal cylinder block height
from crankshaft center:**

213.95 - 214.05 mm (8.4232 - 8.4271 in)

If necessary, replace cylinder block.

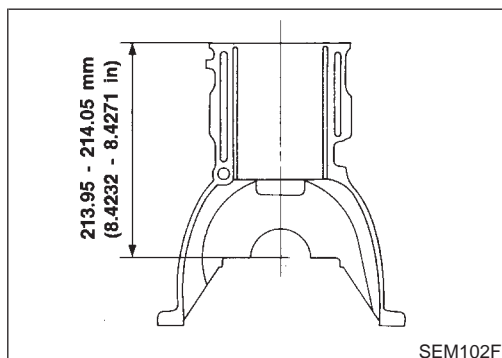

SEM102F

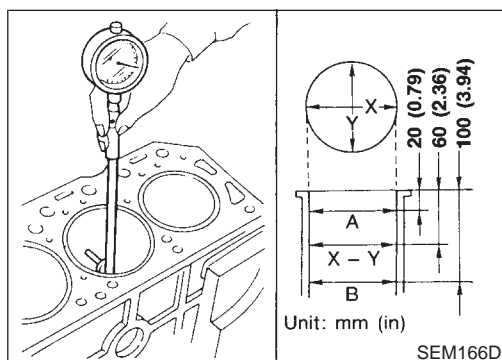

SEM166D

PISTON-TO-BORE CLEARANCE

NJEM0026S06

- Using a bore gauge, measure cylinder bore for wear, out-of-round and taper.

Standard inner diameter:

Refer to SDS, EM-74.

Wear limit:

0.2 mm (0.008 in)

Out-of-round (X - Y) standard:

Less than 0.015 mm (0.0006 in)


Taper (A - B) standard:

Less than 0.01 mm (0.0004 in)


If it exceeds the limit, rebore all cylinders. Replace cylinder block if necessary.

- Check for score and seizure. If seizure is found, hone it.

- If cylinder block or piston is replaced, match piston grade with grade number on cylinder block lower surface.

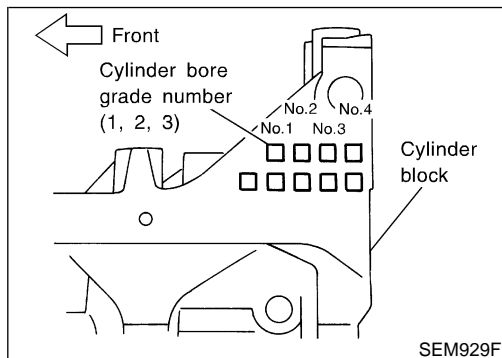

SEM929F

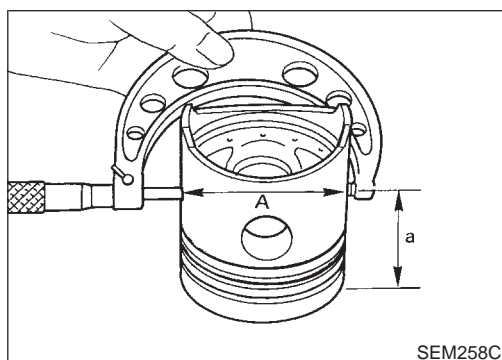

SEM258C

- Measure piston skirt diameter.

Piston diameter "A":

Refer to SDS, EM-74.

Measuring point "a" (Distance from the top):

Refer to SDS, EM-74.

- Check that piston-to-bore clearance is within specification.

Piston-to-bore clearance = cylinder bore measurement "B" - Piston diameter "A":

0.015 - 0.035 mm (0.0006 - 0.0014 in)

5. Determine piston oversize according to amount of cylinder wear.

Oversize pistons are available for service. Refer to SDS EM-74.

6. Cylinder bore size is determined by adding piston-to-bore clearance to piston diameter "A".

Rebored size calculation:

$$D = A + B - C$$

where,



D: Bored diameter

A: Piston diameter as measured

B: Piston-to-bore clearance

C: Honing allowance 0.02 mm (0.0008 in)

7. Install main bearing caps and tighten bolts to the specified torque. This will prevent distortion of cylinder bores.
8. Cut cylinder bores.
 - **When any cylinder needs boring, all other cylinders must also be bored.**
 - **Do not cut too much out of cylinder bore at a time. Cut only 0.05 mm (0.0020 in) or so at a time.**
9. Hone cylinders to obtain specified piston-to-bore clearance.
10. Measure finished cylinder bore for out-of-round and taper.
 - **Measurement should be done after cylinder bore cools down.**

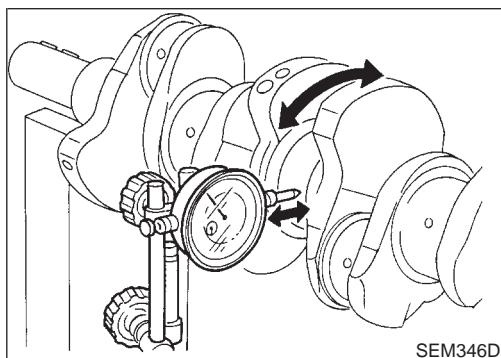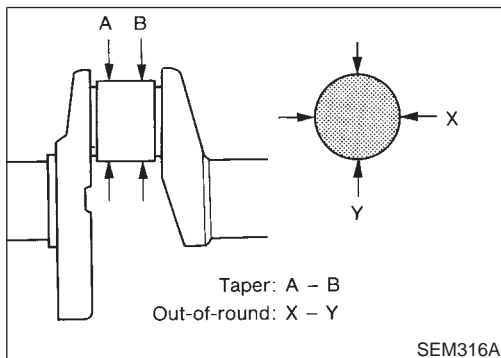

CRANKSHAFT

NJEM0026S07

1. Check crankshaft main and pin journals for score, wear or cracks.
2. With a micrometer, measure journals for taper and out-of-round.

Out-of-round (X - Y):

Less than 0.003 mm (0.0001 in)






Taper (A - B):

Less than 0.004 mm (0.0002 in)

3. Measure crankshaft runout.

Runout (Total indicator reading):

Less than 0.04 mm (0.0016 in)

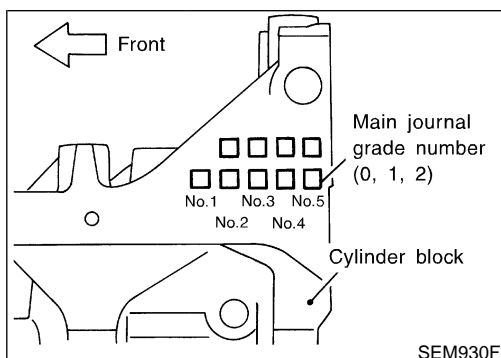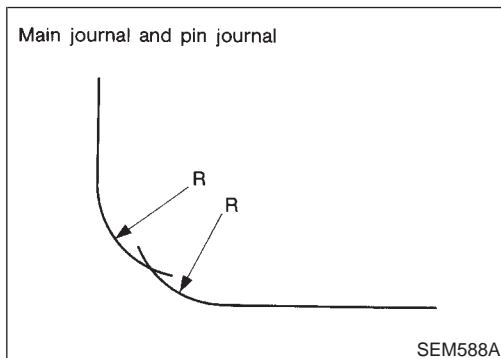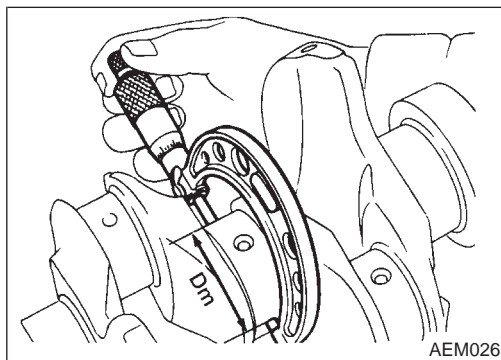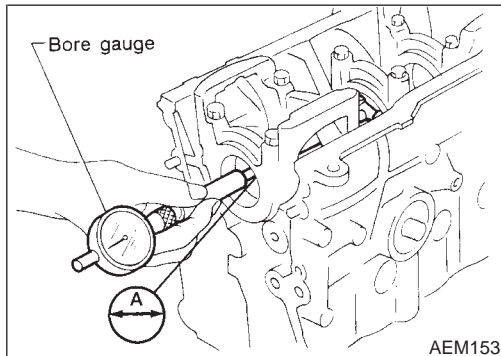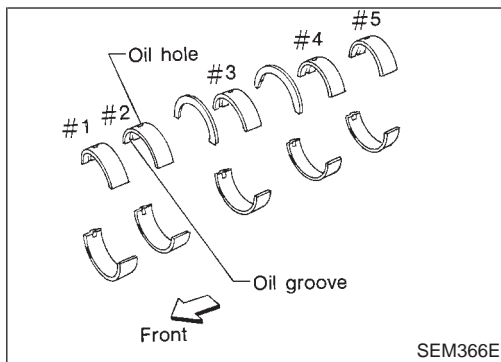

BEARING CLEARANCE

NJEM0026S08

- Use Method A or Method B. Method A is preferred because it is more accurate.

Method A (Using bore gauge and micrometer)

Main bearing

NJEM0026S0801

- Set main bearings in their proper positions on cylinder block and main bearing cap.

- Install main bearing cap to cylinder block.

Tighten all bolts in correct order in two or three stages. Refer to EM-63.

- Measure inner diameter "A" of each main bearing.

- Measure outer diameter "Dm" of each main journal in crankshaft.

- Calculate main bearing clearance.

$$\text{Main bearing clearance} = A - Dm$$

Standard: 0.018 - 0.042 mm (0.0007 - 0.0017 in)

Limit: 0.1 mm (0.004 in)

If it exceeds the limit, replace bearing.

If clearance cannot be adjusted within standard of any bearing, grind crankshaft journal and use undersized bearing.

When grinding crank pin and crank journal:






- Grind until clearance is within specified standard bearing clearance.
- Fillets should be finished as shown in the figure. R: 2.3 - 2.5 mm (0.091 - 0.098 in)

Refer to SDS, EM-77 for standard bearing clearance and available spare parts.

- If the crankshaft is replaced, select thickness of main bearings as follows:

- Grade number of each cylinder block main journal is punched on the respective cylinder block. These numbers are punched in either Arabic or Roman numerals.

Inspection (Cont'd)

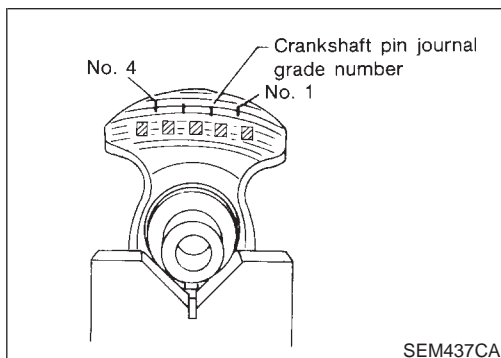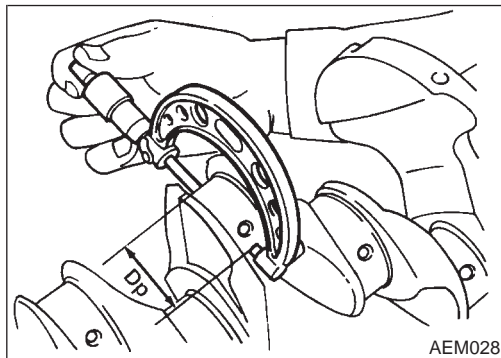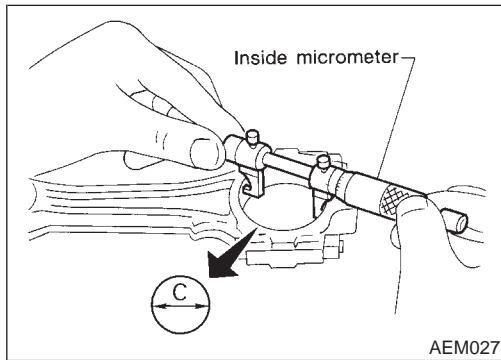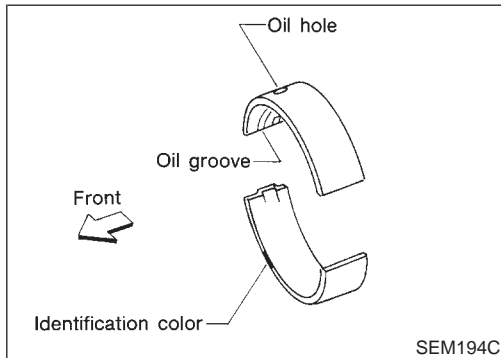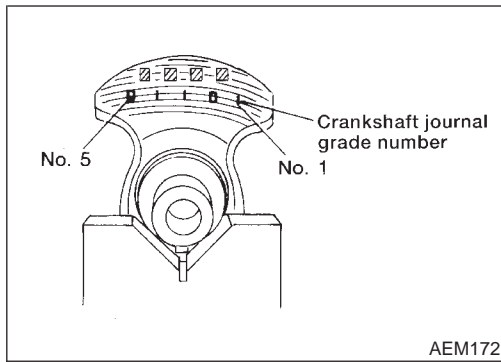

- Grade number of each crankshaft main journal is punched on the respective crankshaft. These numbers are punched in either Arabic or Roman numerals.
- Select main bearing with suitable thickness according to the following table.

Main bearing grade color:

Crankshaft main journal grade number	Cylinder block main journal grade number		
	0	1	2
0	Black	Brown	Green
1	Brown	Green	Yellow
2	Green	Yellow	Blue

For example:

Cylinder block main journal grade number: 1

Crankshaft main journal grade number: 2

Main bearing grade number = 1 + 2 = Yellow

Connecting rod bearing (Big end)

NJEM0026S0802

- Install connecting rod bearing to connecting rod and cap.
- Install connecting rod cap to connecting rod.

Tighten bolts to the specified torque.

- Measure inner diameter "C" of each bearing.

- Measure outer diameter "Dp" of each crankshaft pin journal.
- Calculate connecting rod bearing clearance.

Connecting rod bearing clearance = C – Dp

Standard: 0.014 - 0.039 mm (0.0006 - 0.0015 in)

Limit: 0.1 mm (0.004 in)

If it exceeds the limit, replace bearing.


If clearance cannot be adjusted using any standard bearing grade, grind crankshaft journal and use undersized bearing. Refer to step 5, EM-59.

- If a new bearing, crankshaft or connecting rod is replaced, select connecting rod bearing according to the following table.


Connecting rod bearing grade number:

These numbers are punched in either Arabic or Roman numerals.

Crankshaft pin journal grade number	Connecting rod bearing grade color
0	—
1	Brown
2	Green

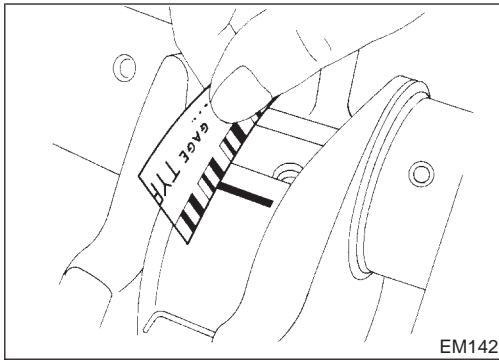
**Method B (Using Plastigage)****CAUTION:**

- Do not turn crankshaft or connecting rod while Plastigage is being inserted.
- If incorrect bearing clearance exists, use a thicker or undersized main bearing to ensure specified clearance.

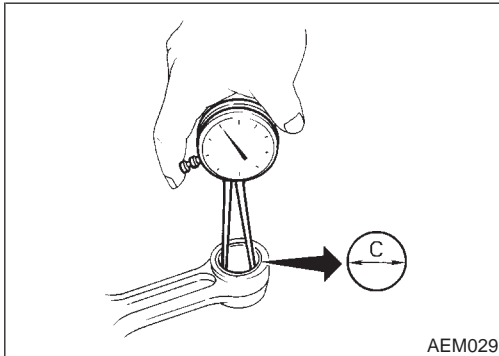**CONNECTING ROD BUSHING CLEARANCE (SMALL END)**

NJEM0026S09

- Measure inner diameter "C" of bushing.

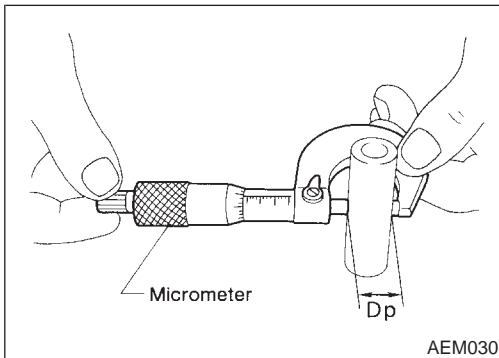

- Measure outer diameter "Dp" of piston pin.
- Calculate connecting rod bushing clearance.

$$\text{Connecting rod bushing clearance} = C - Dp$$


Standard:

0.005 - 0.017 mm (0.0002 - 0.0007 in)

Limit:

0.023 mm (0.0009 in)

If it exceeds the limit, replace connecting rod assembly or connecting rod bushing and/or piston pin.

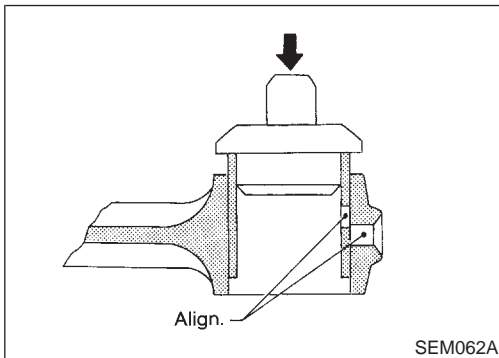**REPLACEMENT OF CONNECTING ROD BUSHING (SMALL END)**

NJEM0026S10


- Drive in small end bushing until it is flush with end surface of rod.

Be sure to align the oil holes.

- Ream the bushing so that clearance with piston pin is within specification.

Clearance between connecting rod bushing and piston pin:

0.005 - 0.017 mm (0.0002 - 0.0007 in)

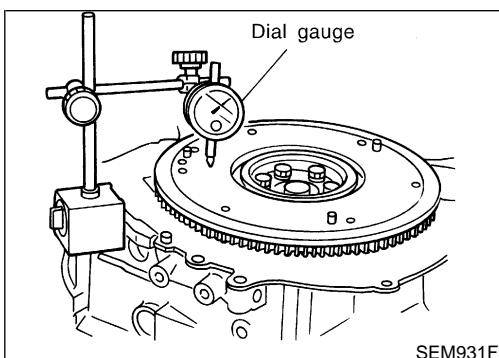**FLYWHEEL/DRIVE PLATE RUNOUT**

NJEM0026S12

Runout (Total indicator reading):

Flywheel (M/T models)

Less than 0.15 mm (0.0059 in)


Drive plate (A/T models)*

Less than 0.2 mm (0.008 in)

*Measuring points: Approximately 115 mm (4.53 in) from crankshaft center

CAUTION:

- Do not allow any magnetic materials to contact the ring gear teeth and rear plate.
- Do not resurface flywheel. Replace as necessary.

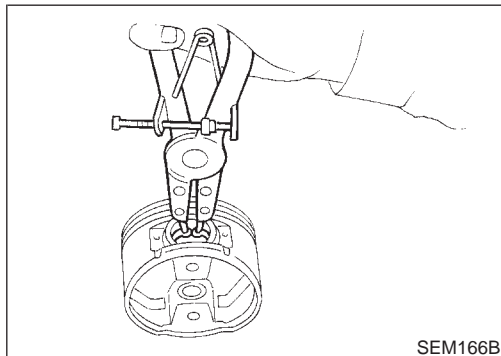

SEM166B


Assembly

PISTON

NJEM0027

NJEM0027S01


1. Install new snap ring on one side of piston pin hole.

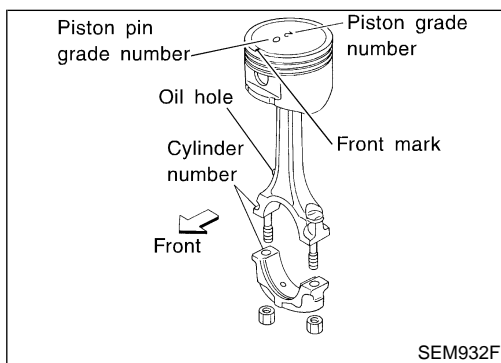

SEM932F

2. Heat piston to 60 to 70°C (140 to 158°F) and assemble piston, piston pin, connecting rod and new snap ring.

- **Align the direction of piston and connecting rod.**
- **Numbers stamped on connecting rod and cap correspond to each cylinder.**
- **After assembly, make sure connecting rod swings smoothly.**

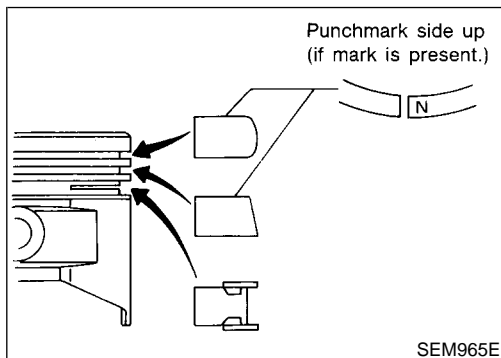


SEM965E

3. Set piston rings as shown.


CAUTION:

- **When piston rings are not replaced, make sure that piston rings are mounted in their original position.**
- **Install new piston rings either side up if there is no punch mark.**

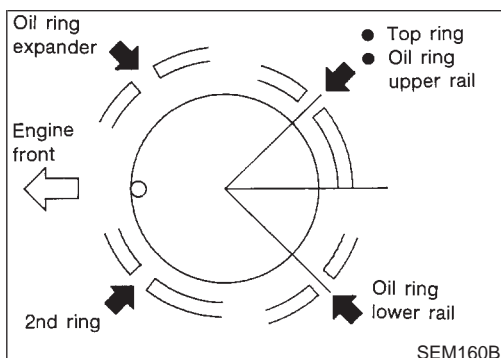





SEM160B

- **Align piston rings so that end gaps are positioned as shown.**

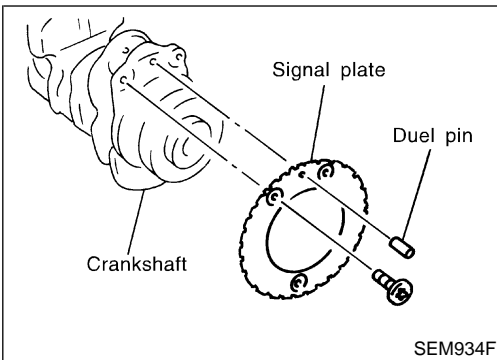**CRANKSHAFT**

NJEM0027S02

1. Install signal plate to crankshaft.
2. Set main bearings in their proper positions on cylinder block and main bearing cap.
 - **Confirm that correct main bearings are selected by using Method A or Method B. Refer to EM-59.**
 - **Apply new engine oil to bearing surfaces.**


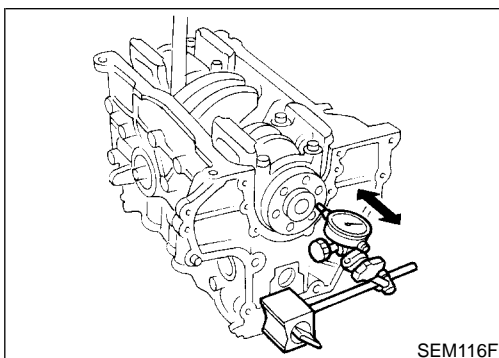
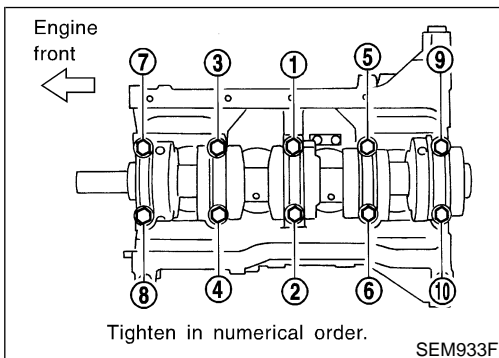
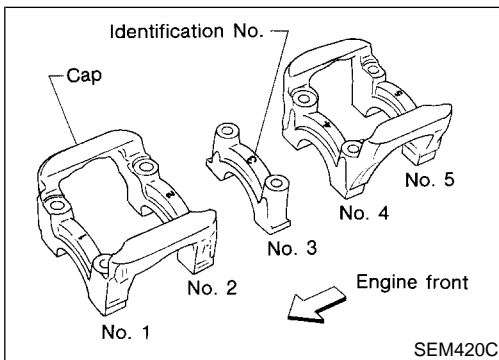
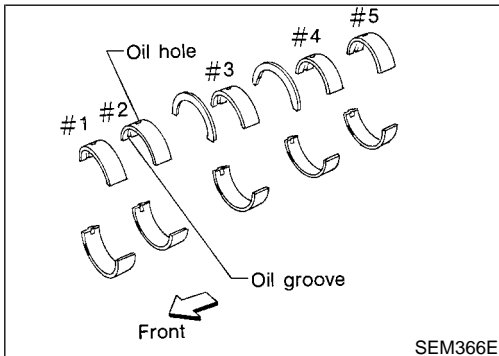


3. Install crankshaft and main bearing caps and tighten bolts to the specified torque.
 - **Apply new engine oil to the bolt thread and seat surface.**
 - **Prior to tightening bearing cap bolts, shift crankshaft back and forth to properly seat the bearing caps.**
 - **Tighten bearing cap bolts gradually in two or three stages. Start with center bearing and move outward as shown in figure.**
 - **After securing bearing cap bolts, make sure crankshaft turns smoothly by hand.**

4. Measure crankshaft end play.

Crankshaft end play:**Standard****0.060 - 0.220 mm (0.0024 - 0.0087 in)****Limit****0.3 mm (0.012 in)****If beyond the limit, replace thrust bearing with new ones.**

Assembly (Cont'd)

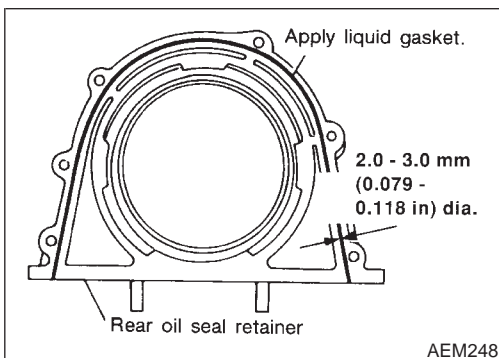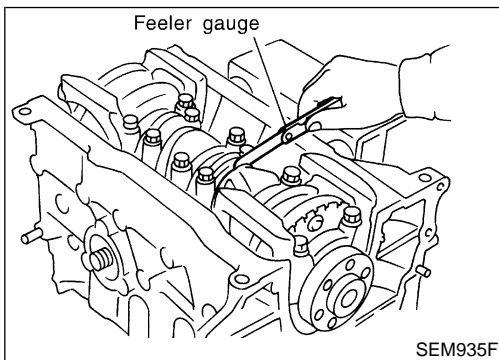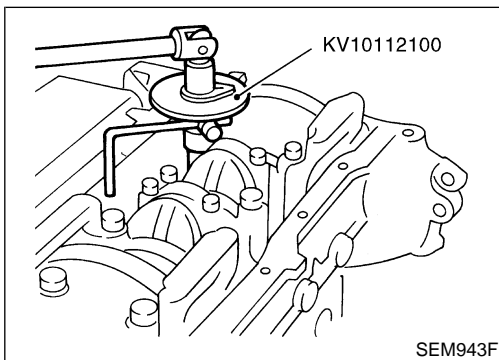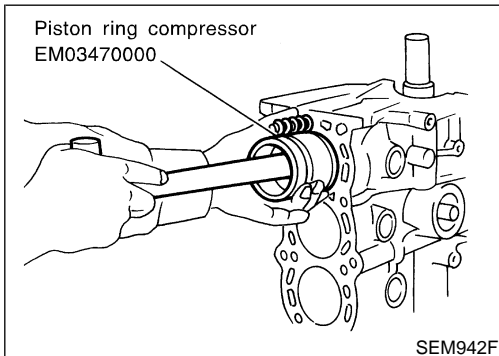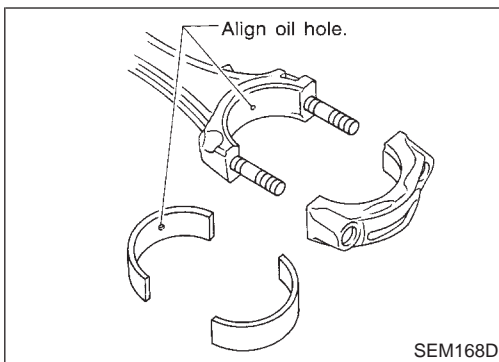

5. Install connecting rod bearings in connecting rods and connecting rod caps.
 - Confirm that correct bearings are used. Refer to EM-60.
 - Install bearings so that oil hole in connecting rod aligns with oil hole of bearing.
 - Apply new engine oil to bolt threads and bearing surfaces.
6. Install pistons with connecting rods.
 - a. Install them into corresponding cylinders with Tool.
 - Make sure connecting rod does not scratch cylinder wall.
 - Make sure connecting rod bolts do not scratch crankshaft pin journals.
 - Arrange so that front mark on piston head faces engine.
 - Apply new engine oil to piston rings and sliding surface of piston.
 - b. Install connecting rod caps.
Apply new engine oil to bolt threads and nut seating surfaces. Tighten connecting rod cap nuts in the following procedure:
 - Tighten to 13.72 to 15.68 N·m (1.399 to 1.599 kg-m, 10.120 - 11.566 ft-lb).
 - Turn nuts to 35° to 40° degrees clockwise with an angle wrench. If an angle wrench is not available, tighten nuts to 23 to 28 N·m (2.3 to 2.9 kg-m, 17 to 21 ft-lb).
7. Measure connecting rod side clearance.

Connecting rod side clearance:


Standard

0.200 - 0.470 mm (0.0079 - 0.0185 in)

Limit

0.5 mm (0.020 in)

If beyond the limit, replace connecting rod and/or crankshaft.
8. Install rear oil seal retainer.
 - a. Before installing rear oil seal retainer, remove old liquid gasket from cylinder block and retainer.
 - b. Apply a continuous bead of liquid gasket to rear oil seal retainer.
 - Use Genuine Liquid Gasket or equivalent.
 - Apply around inner side of bolt holes.
9. Install crankshaft position sensor (POS).

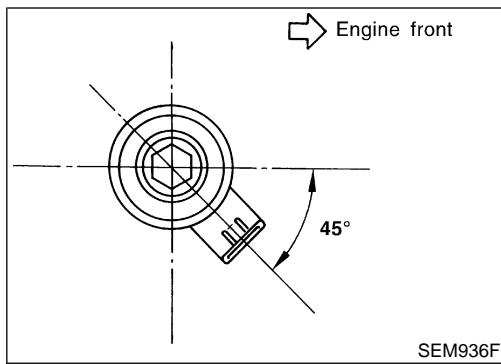

10. Install knock sensor.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC


EL

IDX

General Specifications

NJEM0028

Engine		QG13DE	QG15DE	QG16DE	QG18DE
Classification		Gasoline			
Cylinder arrangement		4, in-line			
Displacement cm ³ (cu in)		1,295 (70.02)	1,497 (91.35)	1,596 (97.39)	1,769 (107.94)
Bore × stroke mm (in)		71.0 × 81.8 (2.795 × 3.220)	73.6 × 88.0 (2.898 × 3.465)	76.0 × 88.0 (2.992 × 3.465)	80.0 × 88.0 (3.150 × 3.465)
Valve arrangement		DOHC			
Firing order		1-3-4-2			
Number of piston rings	Compression	2			
	Oil	1			
Number of main bearings		5			
Compression ratio		9.5			

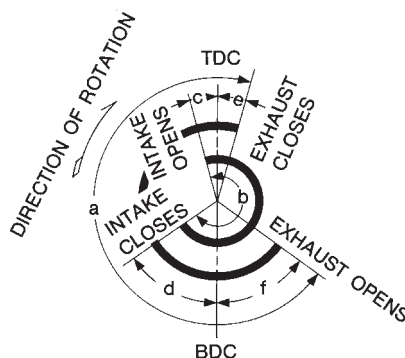

EM120

		a	b	c	d	e	f
Valve timing	QG16DE with intake valve timing control	222°	228°	-4° (16°)	52° (32°)	-2°	44°
	QG18DE with intake valve timing control	222°	236°	0° (20°)	56° (36°)	-2°	44°
	Except for QG16DE and 18DE with intake valve timing control	222°	222°	0°	42°	-2°	44°

(): Intake valve timing control ON

Compression Pressure

NJEM0029

Unit: kPa (bar, kg/cm², psi)/350 rpm

Standard	1,324 (13.24, 13.5, 192)
Minimum	1,128 (11.28, 11.5, 164)
Difference limit between cylinders	98 (0.98, 1.0, 14)

Belt Deflection

Unit: mm (in)

		Applied engine	Used belt deflection		Deflection of new belt
			Limit	Deflection after adjustment	
Alternator	With air conditioner compressor	QG13DE	10 (0.39)	6 - 7 (0.24 - 0.28)	5.5 - 6.5 (0.217 - 0.256)
		QG15-16-18DE	8.1 (0.319)	5.3 - 5.7 (0.209 - 0.224)	4.5 - 5.0 (0.177 - 0.197)
	Without air conditioner compressor	QG13DE	11 (0.43)	7 - 9 (0.28 - 0.35)	6 - 8 (0.24 - 0.31)
		QG15-16-18DE	10.2 (0.402)	6.5 - 7.0 (0.256 - 0.276)	5.5 - 6.1 (0.217 - 0.240)
Power steering oil pump		QG13-15DE	8.5 (0.335)	5.2 - 5.8 (0.205 - 0.228)	4.6 - 5.2 (0.181 - 0.205)
		QG16-18DE	7.1 (0.280)	4.4 - 4.9 (0.173 - 0.193)	3.9 - 4.4 (0.154 - 0.173)
Applied pushing force		98 N (10 kg, 22 lb)			

Spark Plug

NJEM0046

Type	Standard	BKR5E
	Cold	BKR6E, BKR7E
Plug gap mm (in)		0.8 - 0.9 (0.031 - 0.035)

Cylinder Head


Unit: mm (in)

	Standard	Limit
Head surface flatness	Less than 0.03 (0.0012)	0.1 (0.004)
Height	117.8 - 118.0 (4.638 - 4.646)	—

Valve

NJEM0031

VALVE

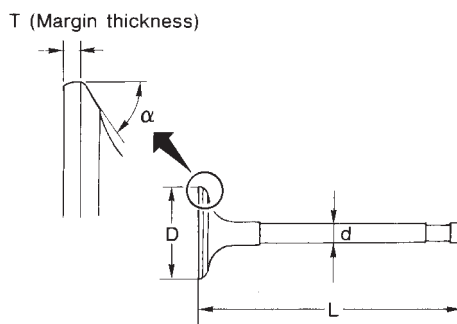NJEM0031S01
Unit: mm (in)

SEM188A

		QG13DE	QG15DE	QG16DE and 18DE
Valve head diameter "D"	Intake	26.4 - 26.7 (1.039 - 1.051)	28.9 - 29.2 (1.138 - 1.150)	29.9 - 30.2 (1.177 - 1.189)
	Exhaust	21.4 - 21.7 (0.843 - 0.854)	23.9 - 24.2 (0.941 - 0.953)	24.9 - 25.2 (0.980 - 0.992)
Valve length "L"	Intake	92.00 - 92.50 (3.6220 - 3.6417)		
	Exhaust	92.37 - 92.87 (3.6366 - 3.6563)		
Valve stem diameter "d"	Intake	5.465 - 5.480 (0.2152 - 0.2157)		
	Exhaust	5.445 - 5.460 (0.2144 - 0.2150)		
Valve face angle " α "		45°15' - 45°45'		
Valve margin "T" limit		1.05 - 1.35 (0.0413 - 0.0531)		
Valve stem end surface grinding limit		0.2 (0.008)		

VALVE SPRING

NJEM0031S02

Free height mm (in)		41.2 (1.622)
Pressure N (kg, lb) at height mm (in)	Standard	370.0 (37.73, 83.19) at 23.64 (0.9307)
	Limit	347.8 (35.46, 78.19) at 23.64 (0.9307)
Out-of-square mm (in)		Less than 1.75 (0.0689)

VALVE LIFTER

NJEM0031S10
Unit: mm (in)

Valve lifter outside diameter	29.960 - 29.975 (1.1795 - 1.1801)
Lifter guide inside diameter	30.000 - 30.021 (1.1811 - 1.1819)
Clearance between valve lifter and valve lifter guide	0.025 - 0.065 (0.0010 - 0.0026)

SERVICE DATA AND SPECIFICATIONS (SDS)

QG

Valve (Cont'd)

VALVE CLEARANCE

=NJEM0031S11
Unit: mm (in)


	For adjusting		For checking
	Hot	Cold* (reference data)	Hot
Intake	0.32 - 0.40 (0.013 - 0.016)	0.25 - 0.33 (0.010 - 0.013)	0.21 - 0.49 (0.008 - 0.019)
Exhaust	0.37 - 0.45 (0.015 - 0.018)	0.32 - 0.40 (0.013 - 0.016)	0.30 - 0.58 (0.012 - 0.023)

*: At a temperature of approximately 20°C (68°F)

Whenever valve clearances are adjusted to cold specifications, check that the clearances satisfy hot specifications and adjust again if necessary.

VALVE GUIDE

NJEM0031S04
Unit: mm (in)

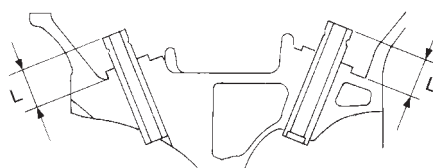

MEM096A

		Intake		Exhaust	
		Standard	Service	Standard	Service
Valve guide	Outer diameter	9.523 - 9.534 (0.3749 - 0.3754)	9.723 - 9.734 (0.3828 - 0.3832)	9.523 - 9.534 (0.3749 - 0.3754)	9.723 - 9.734 (0.3828 - 0.3832)
	Inner diameter [Finished size]	5.500 - 5.515 (0.2165 - 0.2171)		5.500 - 5.515 (0.2165 - 0.2171)	
Cylinder head valve guide hole diameter		9.475 - 9.496 (0.3730 - 0.3739)	9.685 - 9.696 (0.3813 - 0.3817)	9.475 - 9.496 (0.3730 - 0.3739)	9.685 - 9.696 (0.3813 - 0.3817)
Interference fit of valve guide		0.027 - 0.059 (0.0011 - 0.0023)	0.027 - 0.049 (0.0011 - 0.0019)	0.027 - 0.059 (0.0011 - 0.0023)	0.027 - 0.049 (0.0011 - 0.0019)
Stem to guide clearance		0.020 - 0.050 (0.0008 - 0.0020)		0.040 - 0.070 (0.0016 - 0.0028)	
Valve deflection limit (Dial gauge reading)		0.2 (0.008)			
Projection length “L”		11.5 - 11.7 (0.453 - 0.461)			

AVAILABLE SHIMS

NJEM0031S07

Thickness mm (in)	Identification mark
2.00 (0.0787)	200
2.02 (0.0795)	202
2.04 (0.0803)	204
2.06 (0.0811)	206
2.08 (0.0819)	208
2.10 (0.0827)	210
2.12 (0.0835)	212
2.14 (0.0843)	214
2.16 (0.0850)	216

SERVICE DATA AND SPECIFICATIONS (SDS)

QG

Valve (Cont'd)

2.18 (0.0858)	218
2.20 (0.0866)	220
2.21 (0.0870)	221
2.22 (0.0874)	222
2.23 (0.0878)	223
2.24 (0.0882)	224
2.25 (0.0886)	225
2.26 (0.0890)	226
2.27 (0.0894)	227
2.28 (0.0898)	228
2.29 (0.0902)	229
2.30 (0.0906)	230
2.31 (0.0909)	231
2.32 (0.0913)	232
2.33 (0.0917)	233
2.34 (0.0921)	234
2.35 (0.0925)	235
2.36 (0.0929)	236
2.37 (0.0933)	237
2.38 (0.0937)	238
2.39 (0.0941)	239
2.40 (0.0945)	240
2.41 (0.0949)	241
2.42 (0.0953)	242
2.43 (0.0957)	243
2.44 (0.0961)	244
2.45 (0.0965)	245
2.46 (0.0969)	246
2.47 (0.0972)	247
2.48 (0.0976)	248
2.49 (0.0980)	249
2.50 (0.0984)	250
2.51 (0.0988)	251
2.52 (0.0992)	252
2.53 (0.0996)	253
2.54 (0.1000)	254
2.55 (0.1004)	255
2.56 (0.1008)	256
2.57 (0.1012)	257
2.58 (0.1016)	258
2.59 (0.1020)	259

EM-70


SERVICE DATA AND SPECIFICATIONS (SDS)

QG

Valve (Cont'd)

2.60 (0.1024)	260	
2.61 (0.1028)	261	GI
2.62 (0.1031)	262	
2.63 (0.1035)	263	MA
2.64 (0.1039)	264	
2.65 (0.1043)	265	EM
2.66 (0.1047)	266	
2.68 (0.1055)	268	LC
2.70 (0.1063)	270	
2.72 (0.1071)	272	EC
2.74 (0.1079)	274	
2.76 (0.1087)	276	FE
2.78 (0.1094)	278	
2.80 (0.1102)	280	CL
2.82 (0.1110)	282	
2.84 (0.1118)	284	MT
2.86 (0.1126)	286	
2.88 (0.1134)	288	AT
2.90 (0.1142)	290	
2.92 (0.1150)	292	AX
2.94 (0.1157)	294	
2.96 (0.1165)	296	SU
2.98 (0.1173)	298	
		BR
		ST
		RS
		BT
		HA
		SC
		EL
		IDX


Valve (Cont'd)

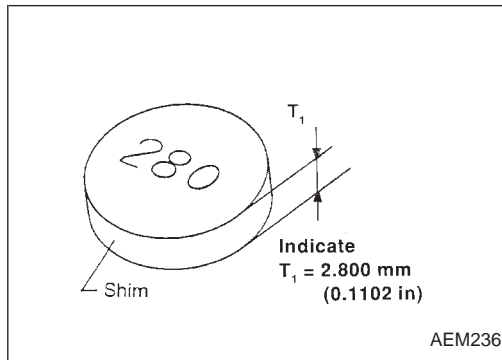

VALVE SEAT

NJEM0031S05
Unit: mm (in)


INTAKE

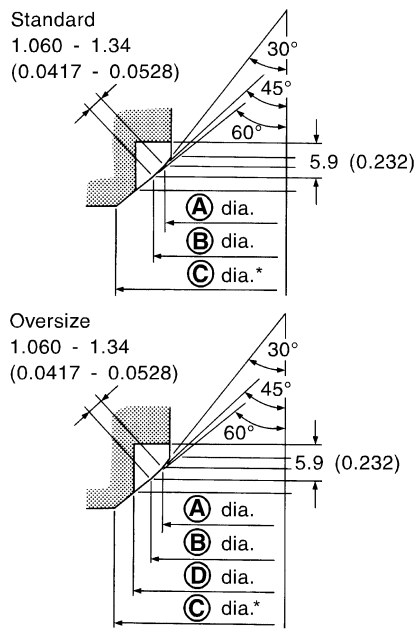

* Cylinder head machining data

SEM573DA

EXHAUST

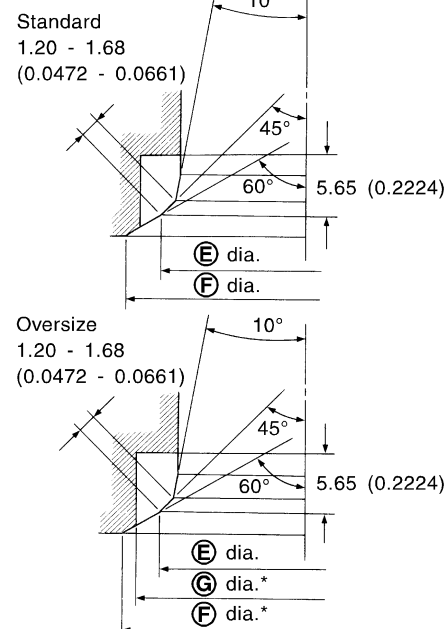


* Cylinder head machining data

SEM574DA

Dia.	QG13DE	QG15DE	QG16DE and 18DE
A	24.3 - 24.5 (0.957 - 0.965)	26.8 - 27.0 (1.055 - 1.063)	27.8 - 28.0 (1.094 - 1.102)
B	26.0 - 26.2 (1.024 - 1.031)	28.5 - 28.7 (1.122 - 1.130)	29.5 - 29.7 (1.161 - 1.169)
C	27.7 - 27.9 (1.091 - 1.098)	30.2 - 30.4 (1.189 - 1.197)	31.9 - 32.1 (1.256 - 1.264)
D	28.000 - 28.016 (1.1024 - 1.1030)	30.500 - 30.516 (1.2008 - 1.2014)	31.500 - 31.516 (1.2402 - 1.2408)
E	21.0 - 21.2 (0.827 - 0.835)	23.5 - 23.7 (0.925 - 0.933)	24.5 - 24.7 (0.9646 - 0.9724)
F	22.7 - 22.9 (0.894 - 0.902)	25.2 - 25.4 (0.992 - 1.000)	26.2 - 26.4 (1.031 - 1.039)
G	23.000 - 23.016 (0.9055 - 0.9061)	25.500 - 25.516 (1.0039 - 1.0046)	26.500 - 26.516 (1.043 - 1.0439)

VALVE SEAT RESURFACE LIMIT

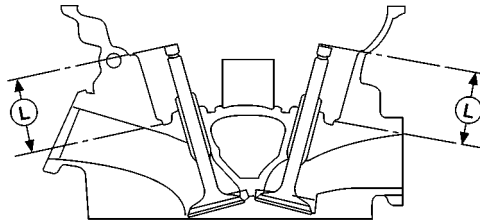NJEM0031S08
Unit: mm (in)


AEM343

Depth (L)	Intake	35.95 - 36.55 (1.4154 - 1.4390)
	Exhaust	35.92 - 36.52 (1.4142 - 1.4378)

Camshaft and Camshaft Bearing

NJEM0032
Unit: mm (in)

Engine model		QG16DE with intake valve timing control	QG18DE with intake valve timing control	Except for QG16DE and 18DE with intake valve timing control
Cam height "A"	Intake	40.240 - 40.390 (1.5842 - 1.5902)	40.780 - 40.930 (1.6055 - 1.6114)	39.900 - 40.050 (1.5709 - 1.5768)
	Exhaust	40.076 - 40.226 (1.5778 - 1.5837)		
Cam wear limit		0.20 (0.0079)		

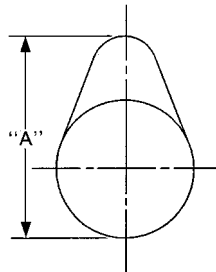


EM671

		Standard	Limit
Camshaft journal to bearing clearance		0.045 - 0.086 (0.0018 - 0.0034)	0.15 (0.0059)
Inner diameter of camshaft bearing	No. 1	28.000 - 28.021 (1.1024 - 1.1032)	—
	No. 2 to No. 5	24.000 - 24.021 (0.9449 - 0.9457)	
Outer diameter of camshaft journal	No. 1	27.935 - 27.955 (1.0998 - 1.1006)	—
	No. 2 to No. 5	23.935 - 23.955 (0.9423 - 0.9431)	
Camshaft runout [TIR*]		Less than 0.02 (0.0008)	0.1 (0.004)
Camshaft end play		0.115 - 0.188 (0.0045 - 0.0074)	0.20 (0.0079)

*Total indicator reading

Cylinder Block

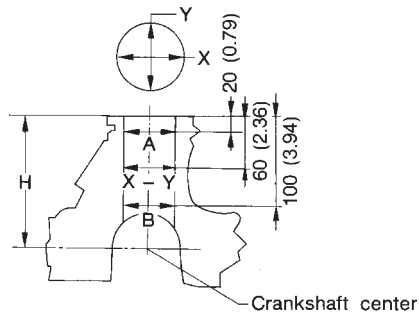NJEM0033
Unit: mm (in)


SEM171D

			QG13DE	QG15DE	QG16DE	QG18DE	Limit
			Standard				
Surface flatness			Less than 0.03 (0.0012)				0.1 (0.004)
Height “H” (nominal)			213.95 - 214.05 (8.4232 - 8.4271)				—
Cylinder bore inner diameter	Standard	Grade No. 1	71.000 - 71.010 (2.7953 - 2.7957)	73.600 - 73.610 (2.8976 - 2.8976)	76.000 - 76.010 (2.9921 - 2.9925)	80.000 - 80.010 (3.1496 - 3.1500)	0.2 (0.008)
		Grade No. 2	71.010 - 71.020 (2.7957 - 2.7961)	73.610 - 73.620 (2.8980 - 2.8984)	76.010 - 76.020 (2.7957 - 2.7961)	80.010 - 80.020 (3.1500 - 3.1504)	
		Grade No. 3	71.020 - 71.030 (2.7961 - 2.7965)	73.620 - 73.630 (2.8984 - 2.8988)	76.020 - 76.030 (2.7961 - 2.9933)	80.020 - 80.030 (3.1504 - 3.1508)	
Out-of-round (X – Y)			Less than 0.015 (0.0006)				—
Taper (A – B)			Less than 0.01 (0.0004)				—
Difference in inner diameter between cylinders			0.05 (0.0020)				0.2 (0.008)

Piston, Piston Ring and Piston Pin

NJEM0034

PISTON

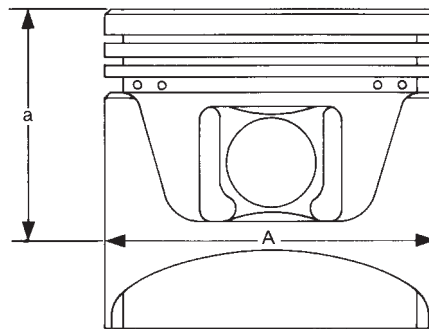NJEM0034S01
Unit: mm (in)

SEM882E

			QG13DE	QG15DE	QG16DE	QG18DE
Piston skirt diameter "A"	Standard	Grade No. 1	70.975 - 70.985 (2.7943 - 2.7947)	73.575 - 73.585 (2.8966 - 2.8970)	75.975 - 75.985 (2.9911 - 2.9915)	79.975 - 79.985 (3.1486 - 3.1490)
		Grade No. 2	70.985 - 70.995 (2.7947 - 2.7951)	73.585 - 73.595 (2.8970 - 0.1415)	75.985 - 75.995 (2.9915 - 2.9919)	79.985 - 79.995 (3.1490 - 3.1494)
		Grade No. 3	70.995 - 71.005 (2.7951 - 2.7955)	73.595 - 73.605 (2.8974 - 2.8978)	75.995 - 76.005 (2.9919 - 2.9923)	79.995 - 80.005 (3.1494 - 3.1498)

SERVICE DATA AND SPECIFICATIONS (SDS)

QG

Piston, Piston Ring and Piston Pin (Cont'd)

0.5 (0.002) oversize (service)	71.475 - 71.505 (2.8140 - 2.8152)	74.075 - 74.105 (2.9163 - 2.9175)	76.475 - 76.505 (3.0108 - 3.0120)	80.225 - 80.255 (3.1585 - 3.1596)*1
1.0 (0.039) oversize (service)	71.975 - 72.005 (2.8337 - 2.8348)	74.575 - 74.605 (2.9360 - 2.9372)	76.975 - 77.005 (3.0305 - 3.0317)	80.475 - 80.0505 (3.1683 - 3.1695)*2
“a” dimension	47 (1.850)	43.5 (1.713)	44.5 (1.7520)	45.1 (1.7756)
Piston pin hole inner diameter	18.987 - 18.999 (0.7472 - 0.7080)		18.993 - 19.005 (0.7478 - 0.7482)	
Piston to bore clearance	0.015 - 0.035 (0.0006 - 0.0014)			

*1: 0.25 (0.0098) oversize (service)

*2: 0.5 (0.002) oversize (service)

PISTON RING

NJEM0034S02
Unit: mm (in)

		Except for QG18DE	QG18DE	Limit
		Standard		
Side clearance	Top	0.050 - 0.085 (0.0020 - 0.0033)	0.040 - 0.080 (0.0016 - 0.0031)	0.2 (0.008)
	2nd	0.030 - 0.070 (0.0012 - 0.0028)		
	Oil	0.050 - 0.120 (0.0020 - 0.0047)	0.020 - 0.170 (0.0008 - 0.0067)	
End gap	Top	0.20 - 0.44 (0.0079 - 0.0173)		0.49 (0.0193)
	2nd	0.37 - 0.61 (0.0146 - 0.0240)	0.50 - 0.74 (0.0197 - 0.0291)	0.64 (0.0252)
	Oil	0.20 - 0.69 (0.0079 - 0.0272)		1.09 (0.0429)

PISTON PIN

NJEM0034S03
Unit: mm (in)

		Except for QG18DE	QG18DE
Piston pin outer diameter		18.989 - 19.001 (0.7476 - 0.7481)	
Piston pin to piston clearance		-0.004 to 0 (-0.0002 to 0)	0.002 - 0.006 (0.0001 - 0.0002)
Piston pin to connecting rod bushing clearance	Standard	0.005 - 0.017 (0.0002 - 0.0007)	
	Limit	0.023 (0.0009)	

Connecting Rod

NJEM0035
Unit: mm (in)

Center distance	140.45 - 140.55 (5.5295 - 5.5335)	
Bend limit [per 100 (3.94)]	0.15 (0.0059)	
Torsion limit [per 100 (3.94)]	0.3 (0.012)	
Connecting rod bushing inner diameter* (small end)	19.000 - 19.012 (0.7480 - 0.7485)	
Connecting rod big end inner diameter	43.000 - 43.013 (1.6929 - 1.6934)	
Side clearance	Standard	0.200 - 0.470 (0.0079 - 0.0185)
	Limit	0.5 (0.020)

*After installing in connecting rod

Crankshaft

NJEM0036
Unit: mm (in)

Main journal dia. "Dm"	Grade No. 0	49.956 - 49.964 (1.9668 - 1.9671)
	Grade No. 1	49.948 - 49.956 (1.9665 - 1.9668)
	Grade No. 2	49.940 - 49.948 (1.9661 - 1.9665)
Pin journal dia. "Dp"	Grade No. 0	39.968 - 39.974 (1.5735 - 1.5738)
	Grade No. 1	39.962 - 39.968 (1.5733 - 1.5735)
	Grade No. 2	39.956 - 39.962 (1.5731 - 1.5733)
Center distance "r"		43.95 - 44.05 (1.7303 - 1.7342)
Out-of-round (X - Y)	Standard	Less than 0.003 (0.0001)
	Limit	Less than 0.005 (0.0002)
Taper (A - B)	Standard	Less than 0.004 (0.0002)
	Limit	Less than 0.005 (0.0002)
Runout [TIR*]	Standard	Less than 0.04 (0.0016)
	Limit	Less than 0.05 (0.0020)
Free end play	Standard	0.060 - 0.220 (0.0024 - 0.0087)
	Limit	0.3 (0.012)

*: Total indicator reading

Main Bearing

NJEM0037

STANDARD

NJEM0037S01

Grade No.	Thickness "T" mm (in)	Identification color
0	1.827 - 1.831 (0.0719 - 0.0721)	Black
1	1.831 - 1.835 (0.0721 - 0.0722)	Brown
2	1.835 - 1.839 (0.0722 - 0.0724)	Green
3	1.839 - 1.843 (0.0724 - 0.0726)	Yellow
4	1.843 - 1.847 (0.0726 - 0.0727)	Blue

UNDERSIZE

NJEM0037S02
Unit: mm (in)

	Thickness "T"
0.25 (0.0098)	1.960 - 1.964 (0.0772 - 0.0773)
0.50 (0.0197)	2.085 - 2.089 (0.0821 - 0.0822)

Connecting Rod Bearing

NJEM0038

STANDARD SIZE

NJEM0038S01
Unit: mm (in)

Grade No.	Thickness	Identification color or number
0	1.503 - 1.506 (0.0592 - 0.0593)	—
1	1.506 - 1.509 (0.0593 - 0.0594)	Brown
2	1.509 - 1.512 (0.0594 - 0.0595)	Green

SERVICE DATA AND SPECIFICATIONS (SDS)

QG

Connecting Rod Bearing (Cont'd)

UNDERSIZE

NJEM0038S02
Unit: mm (in)

Grade No.	Thickness	Identification color or number
0.08 (0.0031)	1.542 - 1.546 (0.0607 - 0.0609)	—
0.12 (0.0047)	1.562 - 1.566 (0.0615 - 0.0617)	—
0.25 (0.0098)	1.627 - 1.631 (0.0641 - 0.0642)	—

GI

MA

EM

Bearing Clearance

NJEM0039
Unit: mm (in)

Main bearing clearance	Standard	0.018 - 0.042 (0.0007 - 0.0017)
	Limit	0.1 (0.004)
Connecting rod bearing clearance	Standard	0.014 - 0.039 (0.0006 - 0.0015)
	Limit	0.1 (0.004)

LC

EC

FE

Miscellaneous Components

NJEM0040
Unit: mm (in)

Flywheel runout [TIR*]	Less than 0.15 (0.0059)
Drive plate runout [TIR*]	Less than 0.2 (0.008)
Camshaft sprocket runout [TIR*]	Less than 0.15 (0.0059)

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL


IDX

*: Total indicator reading


Parts Requiring Angular Tightening

NJEM0047

- Use an angle wrench for the final tightening of the following engine parts:
 - a) Cylinder head bolts
 - b) Main bearing cap bolts
 - c) Connecting rod cap nuts
 - d) Crankshaft pulley bolt
- Do not use a torque value for final tightening.
- The torque value for these parts are for a preliminary step.
- Ensure thread and seat surfaces are clean and coated with engine oil.

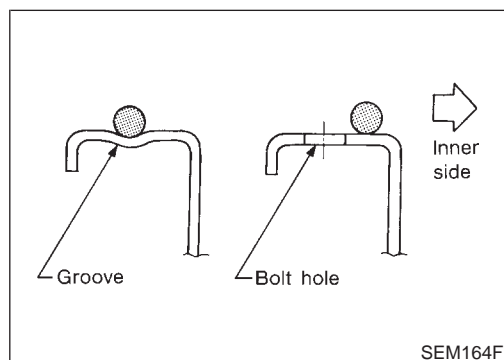

SEM164F

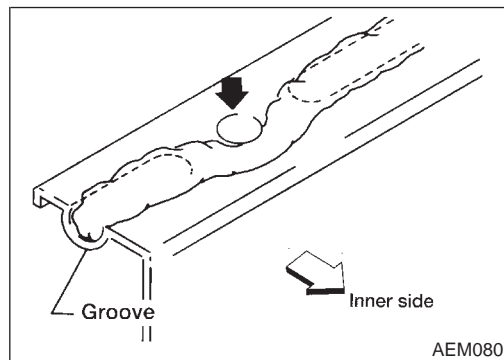

AEM080







Liquid Gasket Application Procedure

NJEM0048

1. Use a scraper to remove all traces of old liquid gasket from mating surfaces and grooves. Also, completely clean any oil from these areas.
2. Apply a continuous bead of liquid gasket to mating surfaces. (Use Genuine Liquid Gasket or equivalent.)
 - Be sure liquid gasket diameter is as specified.
3. Apply liquid gasket around the inner side of bolt holes (unless otherwise specified).
4. Assembly should be done within 5 minutes after coating.
5. Wait at least 30 minutes before refilling engine oil and engine coolant.

Special Service Tools








NJEM0049

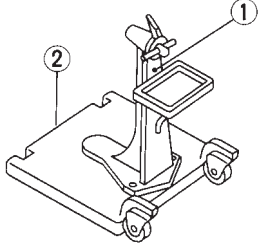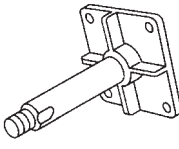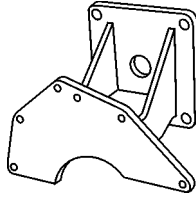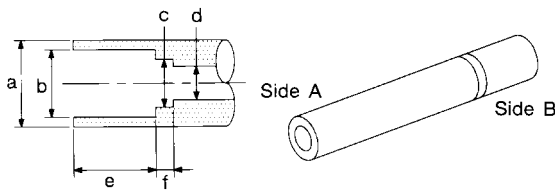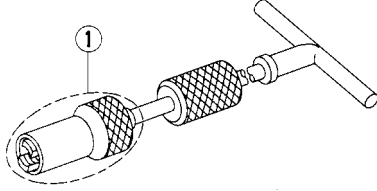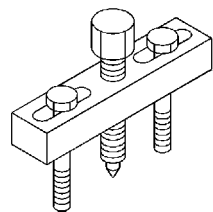Tool number Tool name	Description	
ST0501S000 Engine stand assembly 1 ST05011000 Engine stand 2 ST05012000 Base	Disassembling and assembling  NT042	GI MA EM LC EC FE CL
KV10106500 Engine stand shaft	 NT028	CL MT AT AX
KV11105900 Engine sub-attachment	 NT799	AX SU BR ST
KV10115600 Valve oil seal drift	Installing valve oil seal Use side A. Side A a: 20 (0.79) dia. b: 13 (0.51) dia. c: 10.3 (0.406) dia. d: 8 (0.31) dia. e: 10.7 (0.421) f: 5 (0.20) Unit: mm (in)  NT603	RS BT HA
KV10107902 Valve oil seal puller 1 KV10116100 Valve oil seal puller adapter	Removing valve oil seal  NT605	HA SC EL IDX
KV11103000 Injection pump drive gear puller	 NT676	

PREPARATION

YD





Special Service Tools (Cont'd)

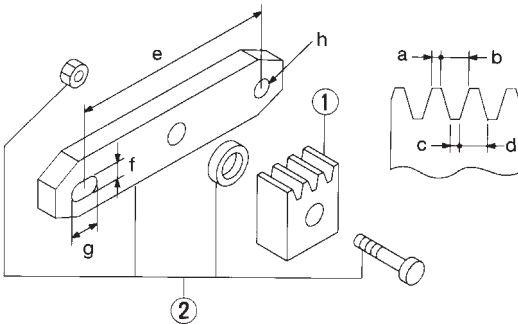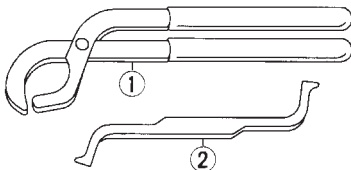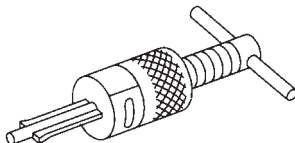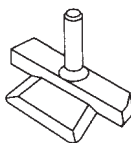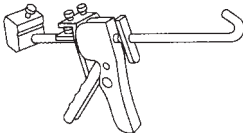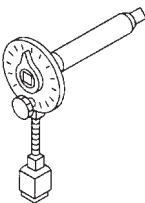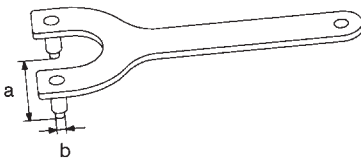Tool number Tool name	Description
KV101056S0 Ring gear stopper 1 KV10105630 Adapter 2 KV10105610 Plate	 <p>Preventing crankshaft from rotating a: 3 (0.12) b: 6.4 (0.252) c: 2.8 (0.110) d: 6.6 (0.260) e: 107 (4.21) f: 14 (0.55) g: 20 (0.79) h: 14 (0.55) dia. Unit: mm (in)</p> <p>NT617</p>
KV101151S0 Lifter stopper set 1 KV10115110 Camshaft pliers 2 KV10115120 Lifter stopper	 <p>Changing shims</p> <p>NT041</p>
ST16610001 Pilot bushing puller	 <p>Removing crankshaft pilot bushing</p> <p>NT045</p>
KV10111100 Seal cutter	 <p>Removing steel oil pan and rear timing chain case</p> <p>NT046</p>
WS39930000 Tube presser	 <p>Pressing the tube of liquid gasket</p> <p>NT052</p>
KV10112100 Angle wrench	 <p>Tightening bolts for bearing cap, cylinder head, etc.</p> <p>NT014</p>
KV10109300 Pulley holder	 <p>a: 68 mm (2.68 in) b: 8 mm (0.31 in) dia.</p> <p>NT628</p>

PREPARATION




YD

Special Service Tools (Cont'd)

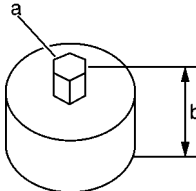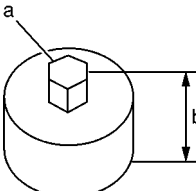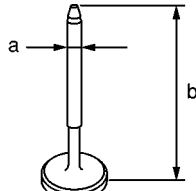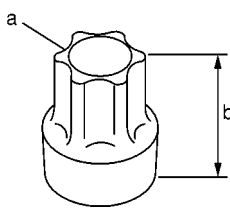Tool number Tool name	Description	
KV11106010 Hexagon wrench	 <p>a: 5 mm (Face to face) b: 20 mm</p> <p>NT801</p>	<p>GI</p> <p>MA</p> <p>EM</p>
KV11106020 Hexagon wrench	 <p>a: 6 mm (Face to face) b: 20 mm</p> <p>NT803</p>	<p>LC</p> <p>EC</p> <p>FE</p>
KV11106030 Positioning stopper pin	 <p>a: 6 mm dia. b: 80 mm</p> <p>NT804</p>	<p>CL</p> <p>MT</p> <p>AT</p>
KV11106040 Torque wrench	 <p>a: T70 b: 26 mm</p> <p>NT805</p>	<p>AX</p> <p>SU</p> <p>BR</p>

Commercial Service Tools



NJEM0050

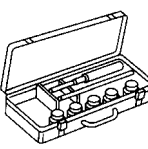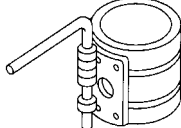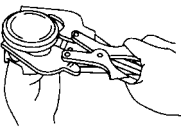Tool name	Description	
Valve seat cutter set	 <p>Finishing valve seat dimensions</p> <p>NT048</p>	<p>ST</p> <p>RS</p> <p>BT</p>
Piston ring compressor	 <p>Installing piston assembly into cylinder bore</p> <p>NT044</p>	<p>HA</p> <p>SC</p> <p>EL</p>
Piston ring expander	 <p>Removing and installing piston ring</p> <p>NT030</p>	<p>IDX</p>

PREPARATION

YD

Commercial Service Tools (Cont'd)

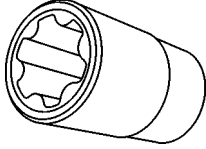Tool name	Description
Torques socket	 NT807
Universal socket	 NT808

NVH Troubleshooting — Engine Noise

NJEM0051S01


Use the chart below to help you find the cause of the symptom.

1. Locate the area where noise occurs.
2. Confirm the type of noise.
3. Specify the operating condition of engine.
4. Check specified noise source.


If necessary, repair or replace these parts.

Location of noise	Type of noise	Operating condition of engine						Source of noise	Check item	Reference page
		Before warm-up	After warm-up	When starting	When idling	When racing	While driving			
Top of engine Rocker cover Cylinder head	Ticking or clicking	C	A	—	A	B	—	Tappet noise	Valve clearance	EM-130
	Rattle	C	A	—	A	B	C	Camshaft bearing noise	Camshaft journal clearance Camshaft runout	EM-119, 119
Crankshaft pulley Cylinder block (Side of engine) Oil pan	Slap or knock	—	A	—	B	B	—	Piston pin noise	Piston and piston pin clearance Connecting rod bushing clearance	EM-140, 149
	Slap or rap	A	—	—	B	B	A	Piston slap noise	Piston-to-bore clearance Piston ring side clearance Piston ring end gap Connecting rod bend and torsion	EM-140, 141, 142, 143
	Knock	A	B	C	B	B	B	Connecting rod bearing noise	Connecting rod bushing clearance (Small end) Connecting rod bearing clearance (Big end)	EM-149, 147
	Knock	A	B	—	A	B	C	Main bearing noise	Main bearing oil clearance Crankshaft runout	EM-144, 145
Front of engine Timing chain cover	Tapping or ticking	A	A	—	B	B	B	Timing chain and chain tensioner noise	Timing chain cracks and wear Timing chain tensioner operation	EM-97, EM-97
Front of engine	Squeaking or fizzing	A	B	—	B	—	C	Other drive belts (Sticking or slipping)	Drive belts deflection	EM-86
	Creaking	A	B	A	B	A	B	Other drive belts (Slipping)	Idler pulley bearing operation	EM-87, EM-87
	Squall Creak	A	B	—	B	A	B	Water pump noise	Water pump operation	LC-40

A: Closely related B: Related C: Sometimes related —: Not related

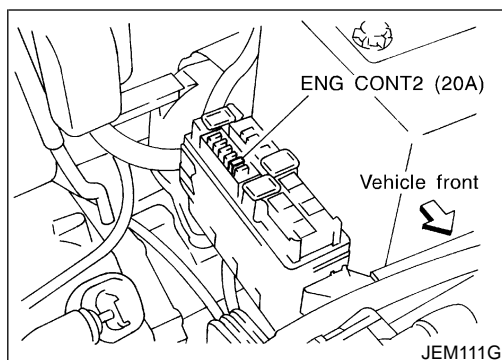

1. Warm up engine.
2. Turn ignition switch OFF.
3. Using CONSULT-II, make sure no error codes are indicated for self-diagnosis items. Refer to EC-258, "Trouble Diagnosis — Index".
 - Do not disconnect CONSULT-II until the end of this operation; it will be used to check engine rpm and for error detection at the end of this operation.
4. Disconnect the negative battery terminal.
5. To prevent fuel from being injected during inspection, remove fuel injection pump fuse [ENG CONT2 (20A)] from fuse box on the left side of engine compartment.
6. Remove glow plugs from all the cylinders.
 - Before removal, clean the surrounding area to prevent entry of any foreign materials into the engine.
 - Carefully remove glow plugs to prevent any damage or breakage.
 - Handle with care to avoid applying any shock to glow plugs.

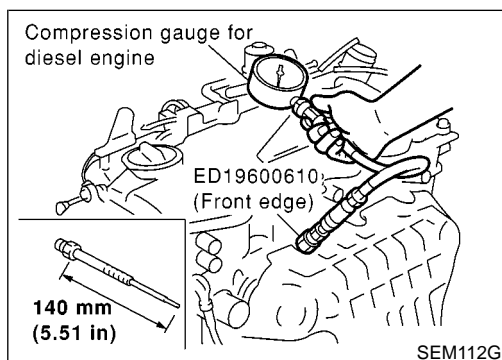

7. Install adapter (SST) to installation holes of glow plugs and connect compression gauge for diesel engine.
 - **18 - 21 N·m (1.8 - 2.2 kg-m, 13 - 15 ft-lb)**
8. Connect battery negative terminal.
9. Set the ignition switch to "START" and crank. When gauge pointer stabilizes, read compression pressure and engine rpm. Repeat the above steps for each cylinder.
 - Always use a fully-charged battery to obtain specified engine speed.

Unit: kPa (bar, kg/cm², psi)/rpm

Standard	Minimum	Difference limit between cylinders
2,844 (28.44, 29.0, 412)/200	2,452 (24.52, 25.0, 356)/200	490 (4.90, 5.0, 71)/200

- When engine rpm is out of the specified range, check the specific gravity of battery liquid. Measure again under corrected conditions.
 - If engine rpm exceeds the limit, check valve clearance and combustion chamber components (valves, valve seats, cylinder head gaskets, piston rings, pistons, cylinder bores, cylinder block upper and lower surfaces) and measure again.
10. Complete this operation as follows:
 - a. Turn the ignition switch to "OFF".
 - b. Disconnect battery negative terminal.
 - c. Install glow plugs.

- d. Install fuel injection pump fuse [ENG CONT2 (20A)].
- e. Connect battery negative terminal.
- f. Using CONSULT-II make sure no error code is indicated for items of self- diagnosis. Refer to EC-258, “Trouble Diagnosis — Index”.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT


HA

SC

EL

IDX

Inspection

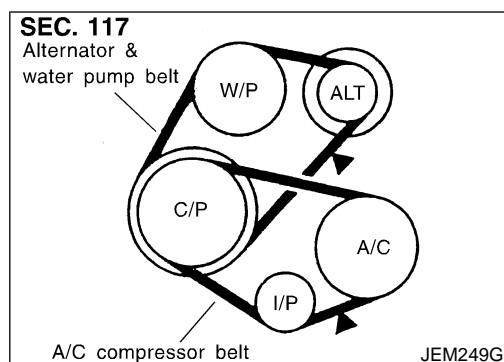

Inspection

NJEM0088

- Before inspecting the engine, make sure the engine has cooled down; wait approximately 30 minutes after the engine has been stopped.
- Visually inspect all belts for wear, damage, or cracks on contacting surfaces and edge areas.
- When measuring deflection, apply 98 N (10 kg, 22 lb) at the ▼ marked point.
- When checking belt deflection immediately after installation, first adjust it to the specified value. Then, after turning the crankshaft two turns or more, re-adjust to the specified value to avoid variation in deflection between pulleys.**
- Tighten idler pulley lock nut by hand and measure tension without looseness.**

Belt deflection:

Applied belt	Belt specification	Belt deflection with 98 N (10 kg, 22 lb) force applied* mm (in)		
		New	Adjusted	Limit for re-tightening
Air conditioner compressor belt	HA type low edge belt	4 - 5 (0.16 - 0.20)	6 - 7 (0.24 - 0.28)	8.5 (0.335)
Alternator & water pump belt	HA type low-edge wide angle belt	9.0 - 10.5 (0.354 - 0.413)	11.0 - 12.5 (0.433 - 0.492)	16.5 (0.650)

*: Main engines cooled down

Adjustment

NJEM0089

- Adjust belts with the parts shown below.

Applied belt	Belt tightening method for adjustment
Air conditioner compressor belt	Adjusting bolt on idler pulley
Alternator water pump belt	Adjusting bolt on alternator

CAUTION:

- When a new belt is installed as a replacement, adjust it to the value specified under "New" accommodations because of insufficient adaptability with pulley grooves.**

- If the belt deflection of the current belt is out of the “Limit for re-tightening”, adjust to the “Adjusted value”.
- When checking belt deflection immediately after installation, first adjust it to the specified value. Then, after turning crankshaft two turns or more, re-adjust it to the specified value to avoid variation in deflection between pulleys.
- Make sure the belts are fully fitted into the pulley grooves during installation.
- Handle with care to avoid smearing the belts with oil or cooling water etc.
- Do not twist or bend the belts with strong force.

GI

MA

EM


LC

EC

FE

CL

MT

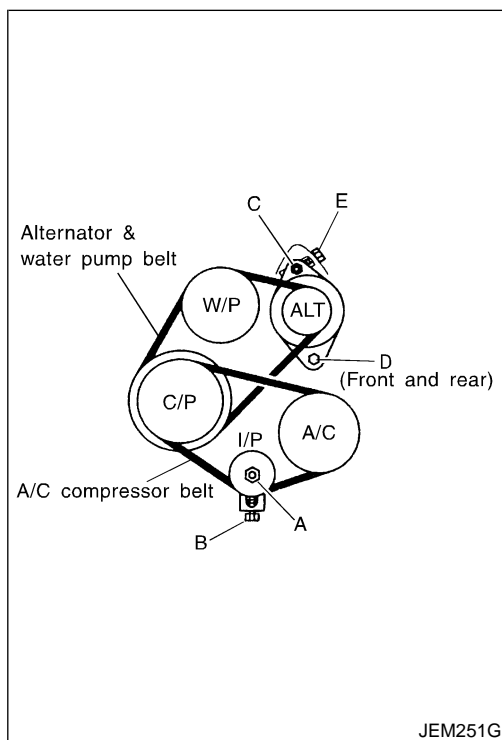

AIR CONDITIONER COMPRESSOR BELT

NJEM0089S01

1. Remove RH splash cover (with undercover attached).
 2. Loosen idler pulley lock nut (A).
 3. Turn adjusting bolt (B) to adjust.
- Refer to EM-86, “Inspection” for adjustment values.
4. Tighten lock nut (A).

Nut A:

: 31 - 39 N·m (3.1 - 4.0 kg-m, 23 - 28 ft-lb)

ALTERNATOR & WATER PUMP BELT

NJEM0089S02

1. Loosen adjuster lock nut (C).
 2. Loosen alternator fixing bolts (D) (each on front and rear).
 3. Turn adjusting bolt (E) to adjust.
- Refer to EM-86, “Inspection” for adjustment values.
4. Tighten nut (C) and bolt (D) in this order.

Nut C:

: 19 - 24 N·m (1.9 - 2.5 kg-m, 14 - 18 ft-lb)

Bolt D:

: 44 - 57 N·m (4.4 - 5.9 kg-m, 32 - 42 ft-lb)

Removal

NJEM0090

1. Loosen each belt. Refer to EM-86, “Adjustment”.
2. Remove air conditioner compressor belt.
3. Remove alternator & water pump belt.


EL

IDX

Installation

NJEM0091

1. Install each belt on pulley in reverse order of removal.
2. Adjust belt deflection. Refer to EM-86, "Adjustment".
3. Tighten nuts and bolts provided for adjustment to the specified torque.
4. Check again that each belt deflection is as specified.

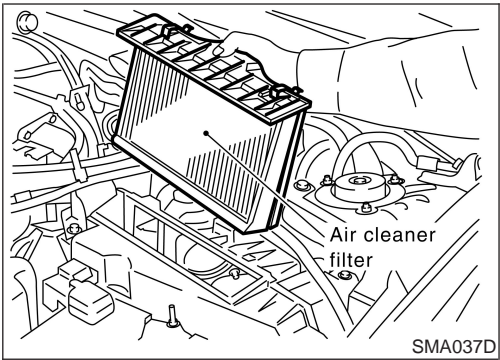

Changing Air Cleaner Filter
VISCOUS PAPER TYPE

NJEM0092

NJEM0092S01

The viscous paper type filter does not need cleaning.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC


EL

IDX

Components

NJEM0054

SEC. 110•150•221

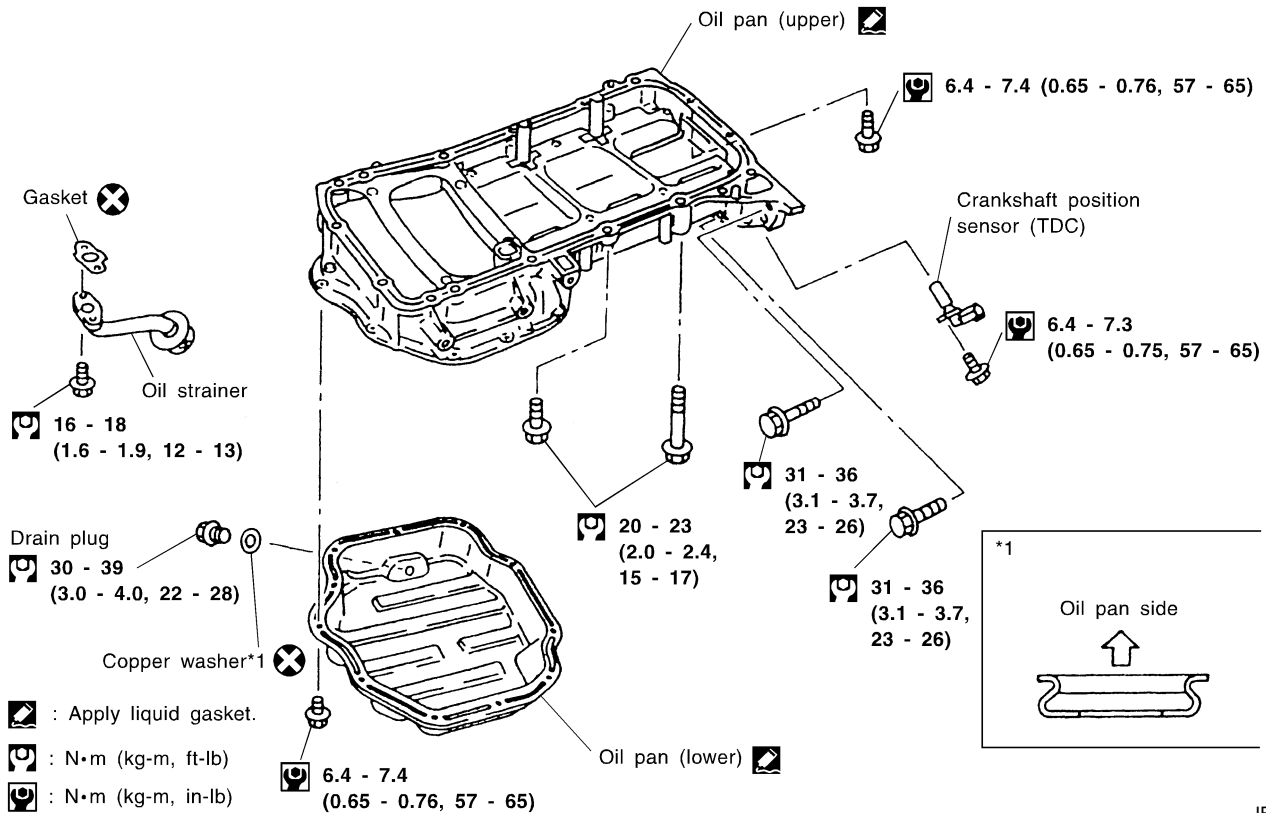

JEM113G


Removal

NJEM0055



CAUTION:

When removing the upper oil pan from engine, first remove the crankshaft position sensor (TDC) from the assembly. Be careful not to damage sensor edges and signal plate teeth.

1. Remove right engine undercover.
2. Drain engine oil.

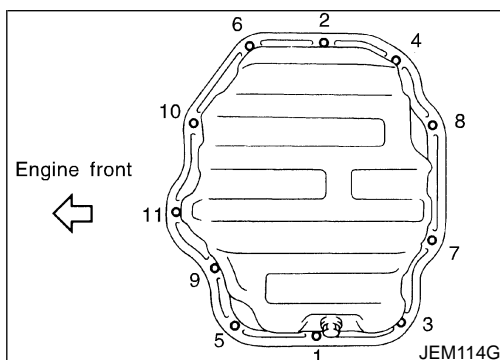


3. Remove lower oil pan bolts.
- Loosen bolts in the reverse order of that shown in the figure.

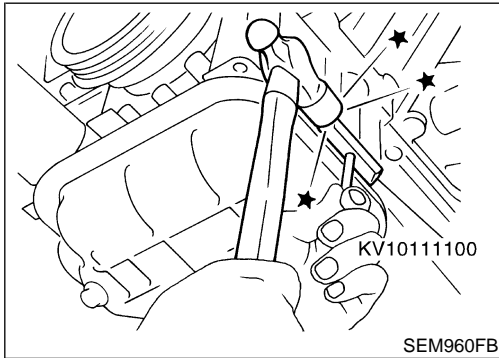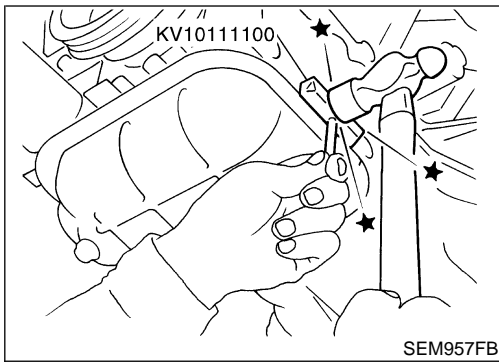


4. Remove lower oil pan.
 - a. Insert Tool between upper oil pan and lower oil pan.
 - **Be careful not to damage aluminum mating surface.**
 - **Do not insert screwdriver, or oil pan flange will be deformed.**

- b. Slide Tool by tapping on the side of the Tool with a hammer.
 - c. Remove lower oil pan.

5. Remove oil strainer.
6. Remove front exhaust tube and its support. Refer to FE-21, "Removal and Installation".



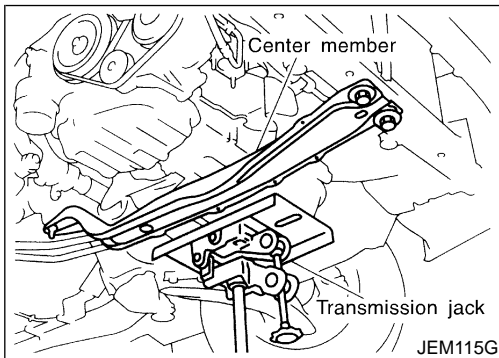


7. Set a suitable transmission jack under transaxle and hoist engine with engine slinger.
 - Place the jack as close to the center as possible for support.
8. Remove front and rear engine mounting nuts and bolts.
9. Remove center member.
10. Remove crankshaft position sensor (TDC) from oil pan.
11. Remove air compressor bracket.

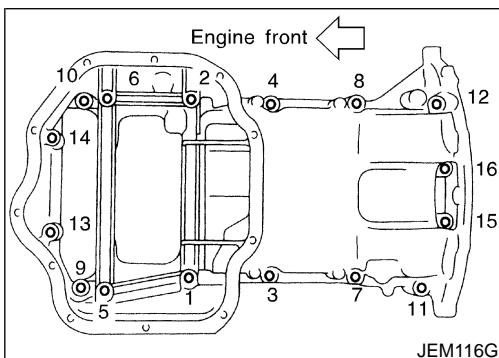

12. Remove upper oil pan bolts in numerical order.

13. Remove four engine-to-transaxle bolts using universal socket (Commercial Service Tool).
14. Remove upper oil pan.
 - a. Insert an appropriate size tool into the notch of upper oil pan.
 - **Be careful not to damage aluminum mating surface.**
 - **Do not insert screwdriver, or oil pan flange will be deformed.**
 - b. Pry off upper oil pan by moving the tool up and down.
 - c. Remove upper oil pan.
 - **Be careful to prevent No. 15 and 16 bolts from falling into transaxle case.**
15. Remove O-rings from cylinder block and oil pump body.

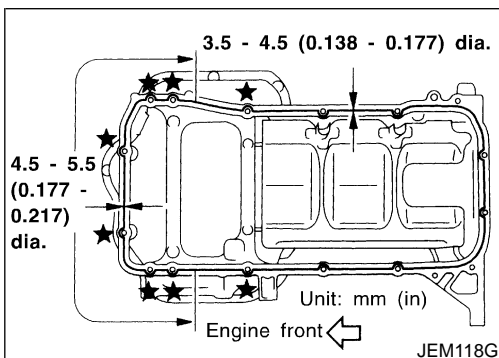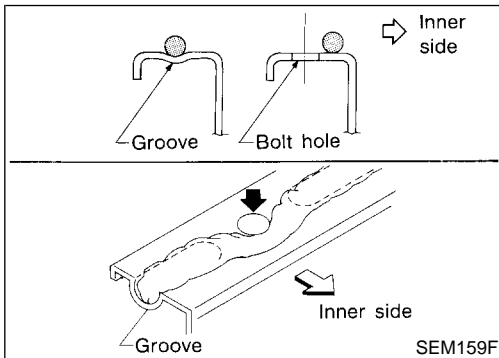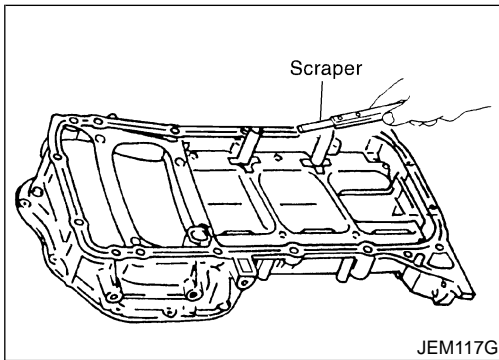


Installation

NJEM0056

1. Install upper oil pan.
 - a. Use a scraper to remove old liquid gasket from mating surfaces.
 - **Also remove old liquid gasket from mating surface of cylinder block, front cover and lower oil pan.**
 - **Remove old liquid gasket from the bolt hole and thread.**
 - b. Apply a continuous bead of liquid gasket to mating surface of aluminum oil pan.
 - **Use Genuine Liquid Gasket or equivalent.**
 - c. Apply Genuine Liquid Gasket or equivalent, to areas shown in the figure.
 - **At the 8 bolt holes marked ★, liquid gasket should be applied on the rims of the holes.**
 - **Be sure liquid gasket is 3.5 to 4.5 mm (0.138 to 0.177 in) or 4.5 to 5.5 mm (0.177 to 0.217 in) wide. (Be careful that the diameter of the silicon bead is different around the front.)**
 - **Attaching should be done within 5 minutes after coating.**

- d. Install O-rings, cylinder block and oil pump body.

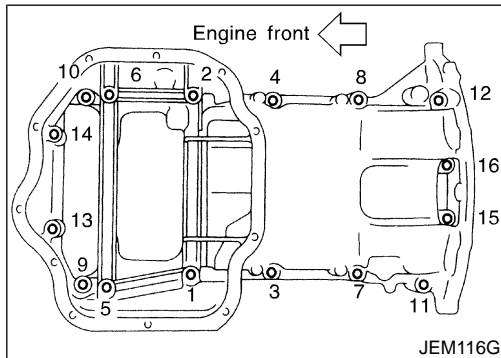

- e. Install upper oil pan.
- Tighten bolts in numerical order.
 - Bolt dimensions vary depending on the installation location. Refer to the following and use appropriate bolts.


M6 x 30 mm: Bolt No. 15, 16

M8 x 25 mm: Bolt No. 3, 4, 9, 10


M8 x 60 mm: Bolt No. 1, 2, 5, 6, 7, 8, 11, 12, 13, 14

- The shank length under the blot neck above is the length of the threaded part (pilot portion not included).
- **Wait at least 30 minutes before refilling engine oil.**

2. Install the four engine-to-transaxle bolts. For tightening torque, refer to MT-24, "Installation".
3. Install rear cover plate.
4. Install air compressor bracket.
⚙ : 57 - 65 N·m (5.8 - 6.7 kg-m, 42 - 48 ft-lb)
5. Install drive belts.
6. Install center member.
7. Install front and rear engine mounting insulator nuts and bolts.

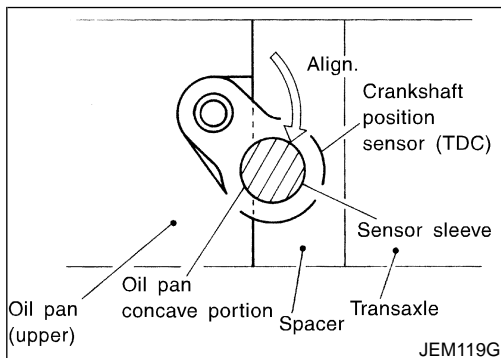


8. Install crankshaft position sensor (TDC).
 - Tighten bolt while positioning and setting the side surface of the crankshaft position sensor (TDC) sleeve against the arc of the upper oil pan.
9. Install front exhaust tube and its support.
10. Install oil strainer.

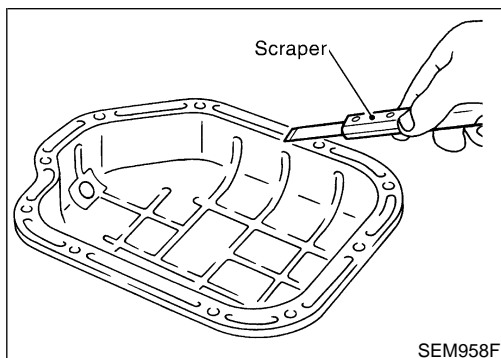


11. Install lower oil pan.
 - a. Use a scraper to remove old liquid gasket from mating surfaces.
 - **Also remove old liquid gasket from mating surface of upper oil pan.**

Installation (Cont'd)

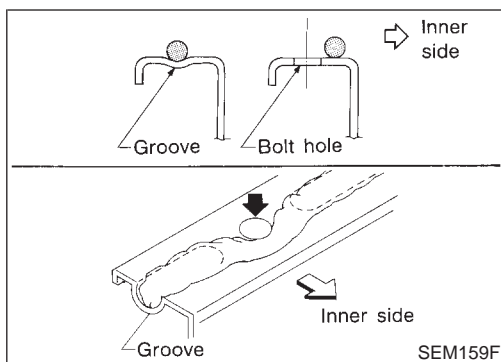


- b. Apply a continuous bead of liquid gasket to mating surface of lower oil pan.

- **Use Genuine Liquid Gasket or equivalent.**

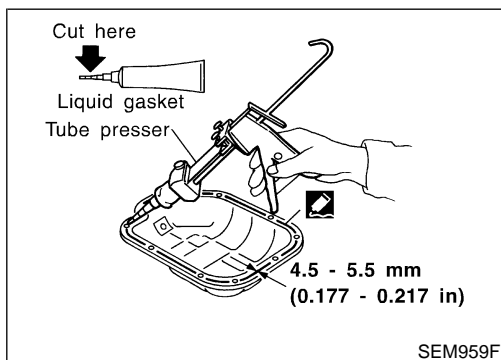

- **Be sure liquid gasket is 4.5 to 5.5 mm (0.177 to 0.217 in) wide.**
- **Attaching should be done within 5 minutes after coating.**

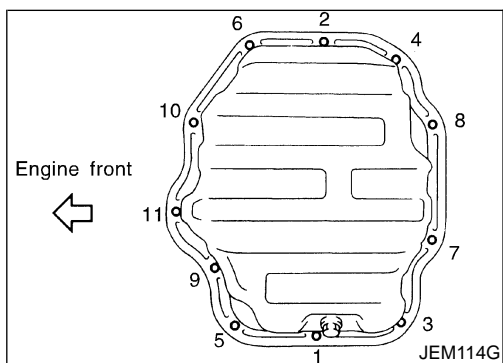

- c. Install lower oil pan.
- **Tighten in numerical order shown in the figure.**
 - **Wait at least 30 minutes before refilling engine oil.**


Secondary Timing Chain

NJEM0093

CAUTION:

- After removing timing chain, do not turn crankshaft and camshaft separately, or valves will strike piston heads.
- When installing camshafts, chain tensioners, oil seals, or other sliding parts, lubricate contacting surfaces with new engine oil.
- Apply new engine oil to bolt threads and seat surfaces when installing camshaft sprockets, crankshaft pulley, and camshaft brackets.
- When removing the oil pans, oil pump assembly and timing chain from engine, first remove the crankshaft position sensor (TDC).
Be careful not to damage sensor edges.
- Do not spill engine coolant on drive belts.

SEC. 130•135

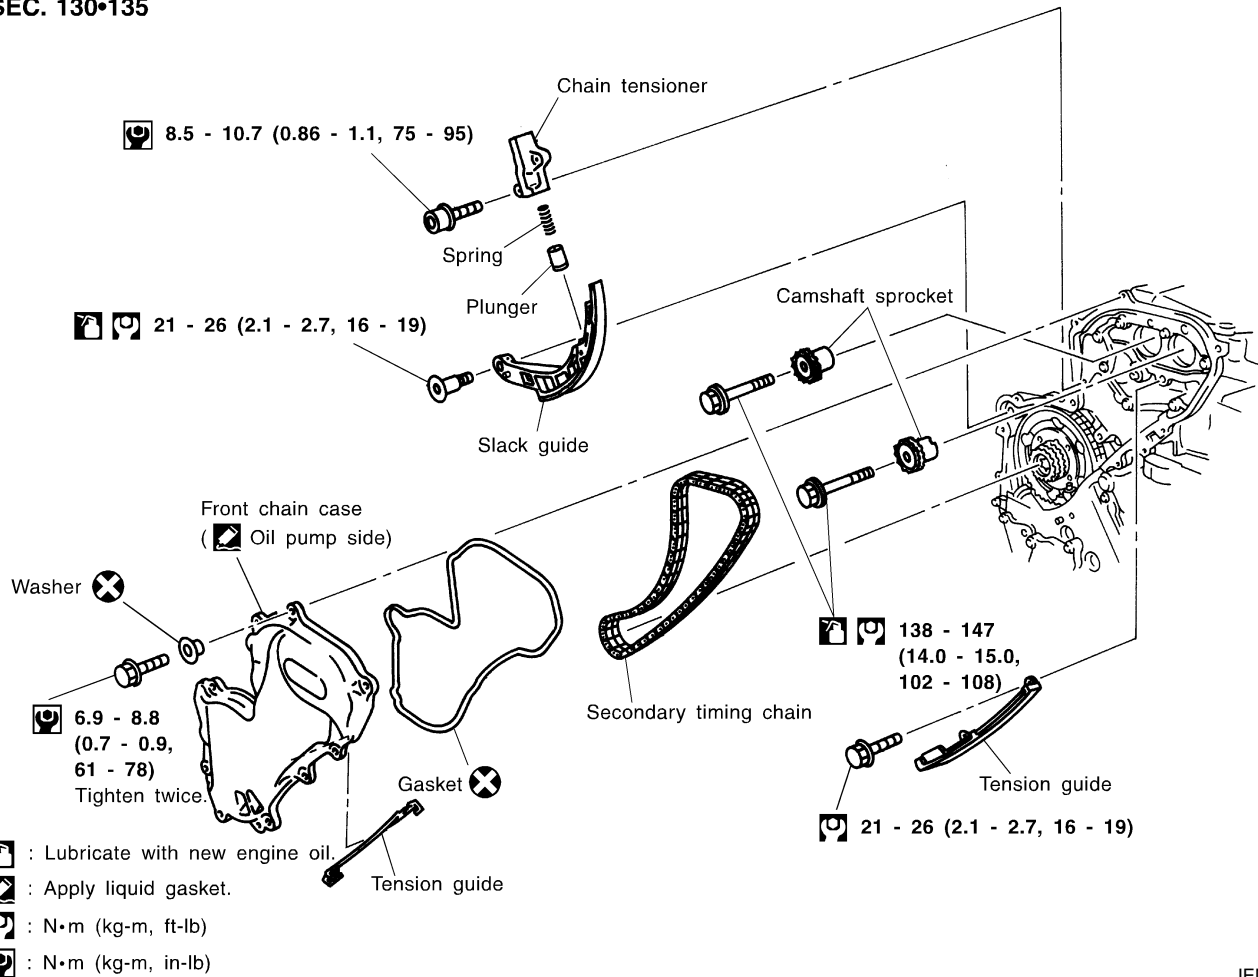


JEM120G

REMOVAL

NJEM0093S01


- For preparative work for removing/installing secondary timing chain to remove/install fuel injection pump, refer to EC-281, "Electronic control fuel injection pump".
 - To prepare for removing/installing secondary timing chain to remove/install camshaft, refer to EM-116, "CAMSHAFT".
1. Drain engine oil.
 2. Drain coolant by removing cylinder block drain plugs. Refer to LC-44, "Changing Engine Coolant".

Secondary Timing Chain (Cont'd)

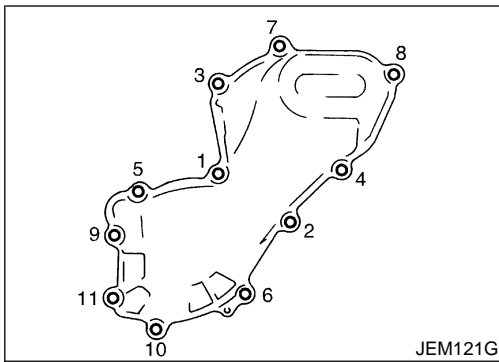


3. Remove front chain case.

- Move power steering fluid reservoir tank from the bracket.
- Loosen fixing bolts in the reverse order of that shown in the figure and remove them.
- Remove No. 6, 10, and 11 bolts with the rubber washer as space is limited for pulling them out.

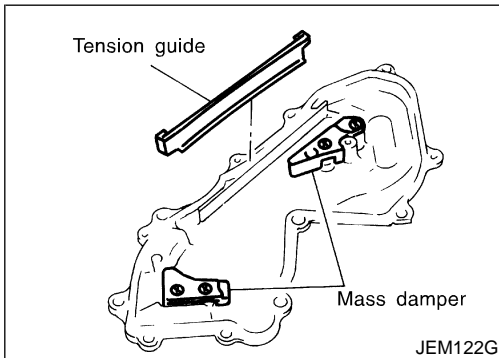
**CAUTION:**

- While front chain case is removed, cover openings to prevent entry of foreign material into engine.
- Do not remove two mass dampers on the back of cover.

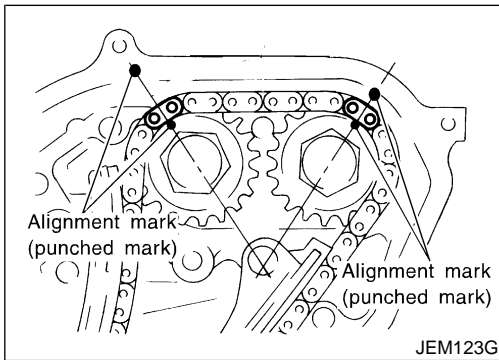


4. Set the No. 1 piston to TDC on its compression stroke.

- Turn crankshaft pulley clockwise so that the alignment mark (punched mark) on each camshaft sprocket is positioned as shown in the figure.
- **No position indicator is provided on the crankshaft pulley.**
- **When installing, color coded links on the secondary timing chain can be used as alignment marks. Marking may not be necessary for removal; however, make alignment marks as required because the alignment mark on fuel injection pump sprocket may not be easy to see.**

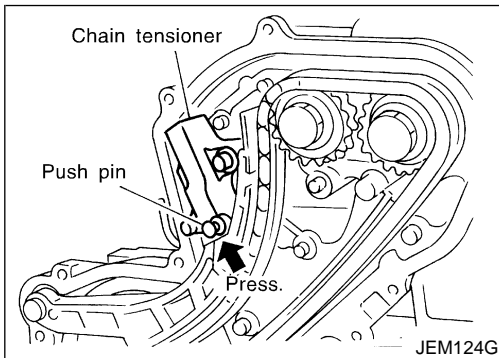


5. Remove chain tensioner.


- Push the plunger of chain tensioner and keep it pressed with a push pin.

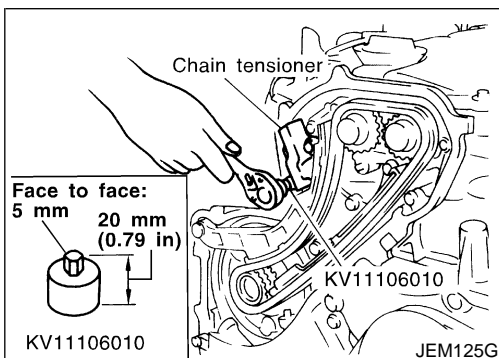


- Using a hexagon-head wrench (face to face: 5 mm, SST), remove bolts to remove chain tensioner.

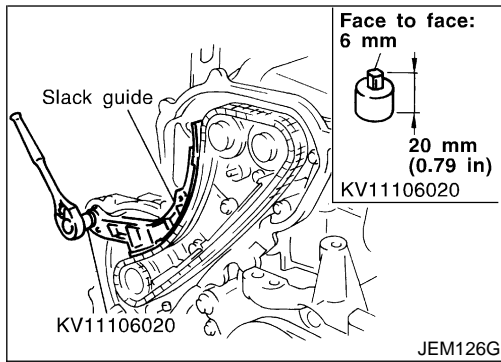

6. Remove timing chain slack guide.
 - Using a hexagon-head wrench (face to face: 6 mm, SST), remove bolt to remove timing chain slack guide.

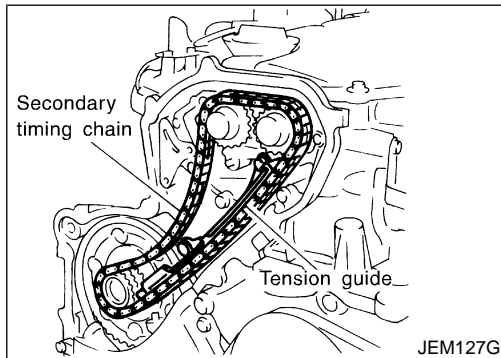


7. Remove timing chain tension guide.
8. Remove secondary timing chain.
 - Timing chain alone can be removed without removing sprockets.

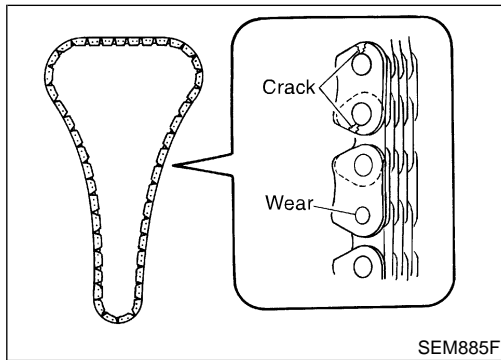

INSPECTION






Check for cracks and excessive wear at roller links. Replace chain if necessary.

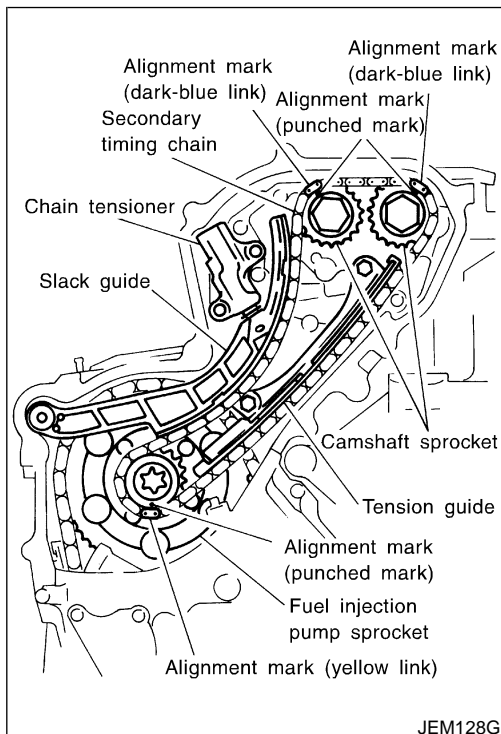

INSTALLATION

1. Install secondary timing chain.
 - When installing, match the alignment marks on sprockets with color coded alignment marks (colored links) on the chain.
2. Install timing chain tension guide.
 - The upper bolt has a longer shank than the lower bolt.

Secondary Timing Chain (Cont'd)

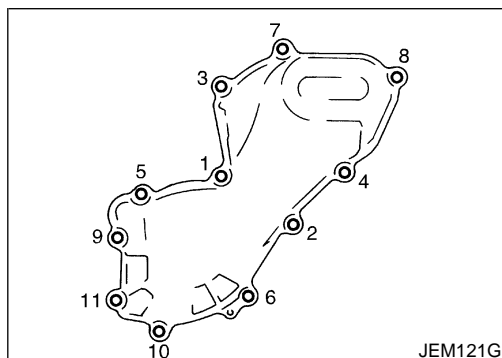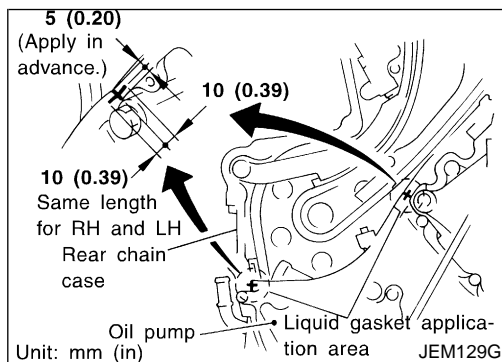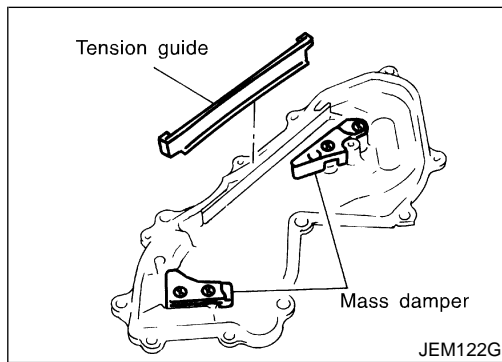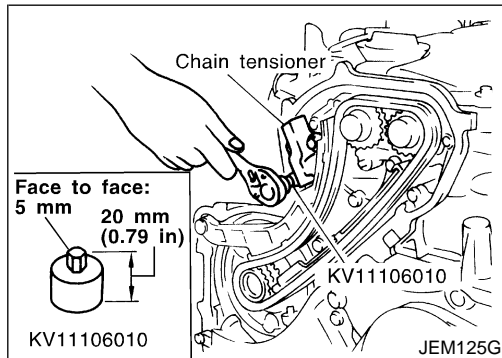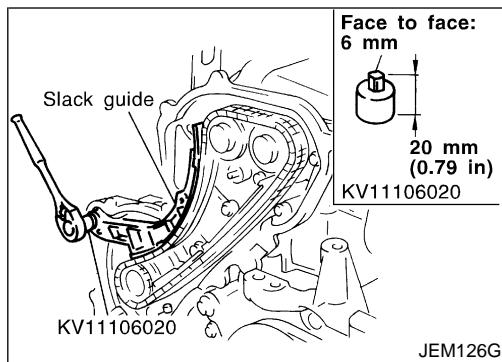

3. Using a hexagon-head wrench (face to face: 6 mm, SST), install timing chain slack guide.
4. Install chain tensioner.
 - a. Push the plunger of the chain tensioner. While holding it with a push pin, install the chain tensioner.
 - b. Using a hexagon-head wrench (face to face: 5 mm, SST), tighten bolts.
 - c. Pull out the push pin, etc. holding the plunger.
 - **Check again that the alignment marks on the sprockets and the colored alignment marks on the timing chain are aligned.**
5. Install front chain case.
 - a. Install tension guide on the back surface of front chain case.
 - Hold front chain case vertically when installing. Tension guide may come off if front chain case is tilted.
 - b. Apply specified liquid gasket (Refer to EM-78, "Liquid Gasket Application Procedure".) on both ends of arched area (locations where rear chain case is adjoined) as shown in the figure.
 - c. Install front chain case.
 - When installing, align dowel pin on oil pump case with the pin hole.
 - Install No. 6, 10, and 11 bolts with the rubber washer to the front chain case.
 - d. Tighten fixing bolts in the numerical order shown in the figure.
 - e. After tightening all the bolts, re-tighten in the same order.

6. Hereafter, install in the reverse order of removal.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL




IDX

[illegible]

REMOVAL


NJEM0094S01

1. Remove engine and transaxle assembly. Refer to EM-133, "ENGINE ASSEMBLY".
2. Remove transaxle from engine. Place engine onto engine stand (SST). Refer to EM-137, "CYLINDER BLOCK", "Disassembly".
3. Remove the following parts:
 - Oil pan (upper and lower)
Refer to EM-90, "OIL PAN".
 - Oil filter bracket
Refer to EM-156, "Oil Filter Bracket".
 - Injection tube
Refer to EC-276, "Injection Tube and Injection Nozzle".
4. Remove secondary timing chain and associated parts. Refer to EM-95, "Secondary Timing Chain".
5. When removing rear chain case, remove camshaft sprockets. Refer to EM-116, "CAMSHAFT".

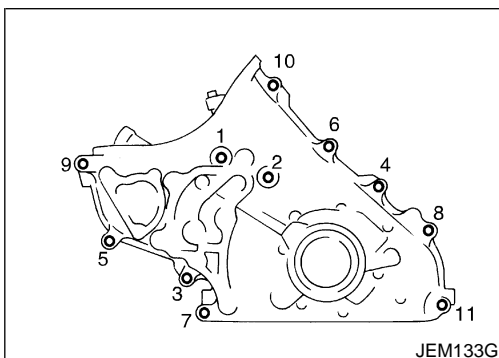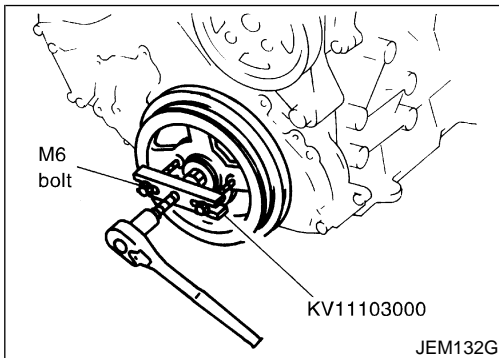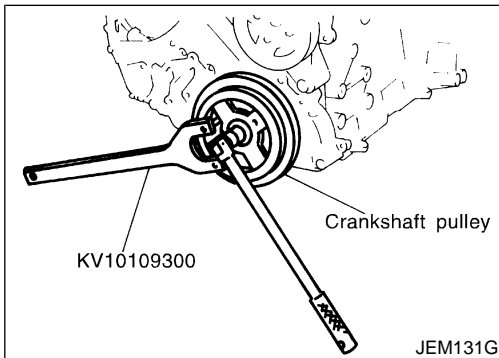


6. Remove crankshaft pulley.
 - a. Hold crankshaft pulley with the pulley holder (SST).
 - b. Loosen crankshaft pulley fixing bolt and pull out the blot approximately 10 mm (39.37 in).
- c. Using pulley puller (SST), remove crankshaft pulley.
 - Use two M6 bolts with approx. 60 mm (2.36 in) shank length for securing crankshaft pulley.
7. Remove oil pump.
 - Loosen bolts in the reverse order of that shown in the figure and remove them.
 - Use seal cutter (SST) etc. for removal.
8. Remove front oil seal from oil pump.
 - Punch out the seal off from the back surface of the oil pump using a flat-bladed screwdriver.
 - **Be careful not to damage the oil pump.**


Primary Timing Chain (Cont'd)

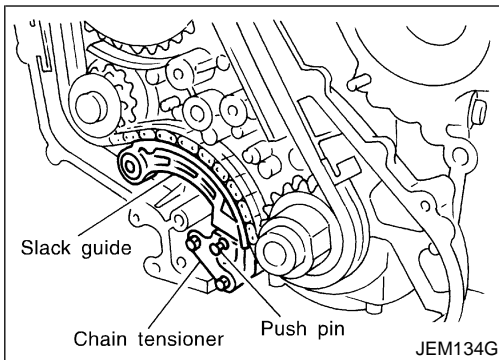


9. Remove chain tensioner.
 - When removing chain tensioner, push the sleeve of chain tensioner and keep it pressed with a push pin, etc.
10. Remove timing chain slack guide.

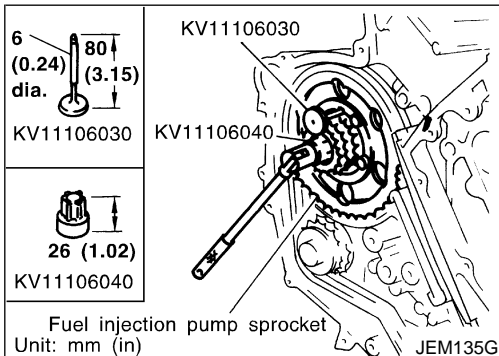


11. Hold fuel injection pump sprocket and remove bolt.
 - a. Insert positioning stopper pin (SST) into the hole 6 mm (0.24 in) in the diameter on the fuel injection pump sprocket.
 - b. Using a torque-wrench (SST), turn pump shaft little by little to adjust the position of fuel injection pump sprocket so that the holes align.
 - c. Push positioning stopper pin (SST) through pump sprocket to fuel injection pump body to hold pump sprocket, and remove bolt.

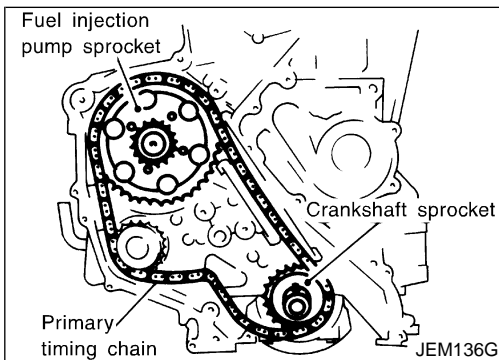

12. Remove primary timing chain with fuel injection pump sprocket and crankshaft sprocket.

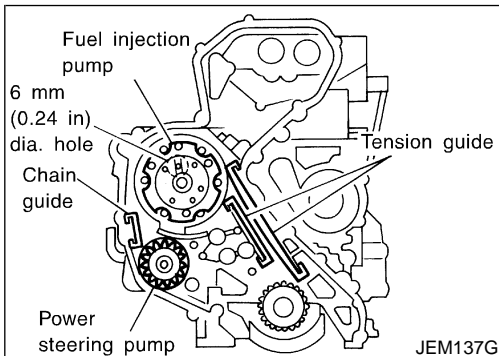

13. Remove chain guide and tension guides.
14. Remove fuel injection pump.
15. Remove power steering pump.

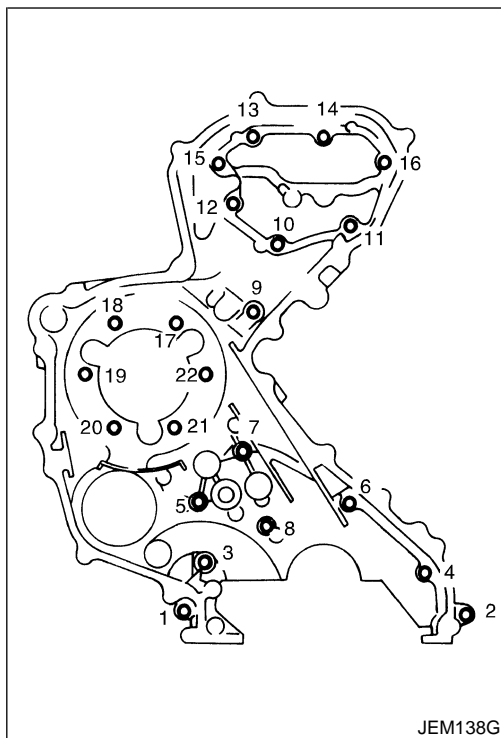


16. Remove rear chain case.

- Loosen fixing bolts in the reverse order of that shown in the figure and remove them.
- Use seal cutter (SST) for removal.


INSPECTION

Check for cracks and excessive wear at roller links. Replace chain if necessary.


INSTALLATION

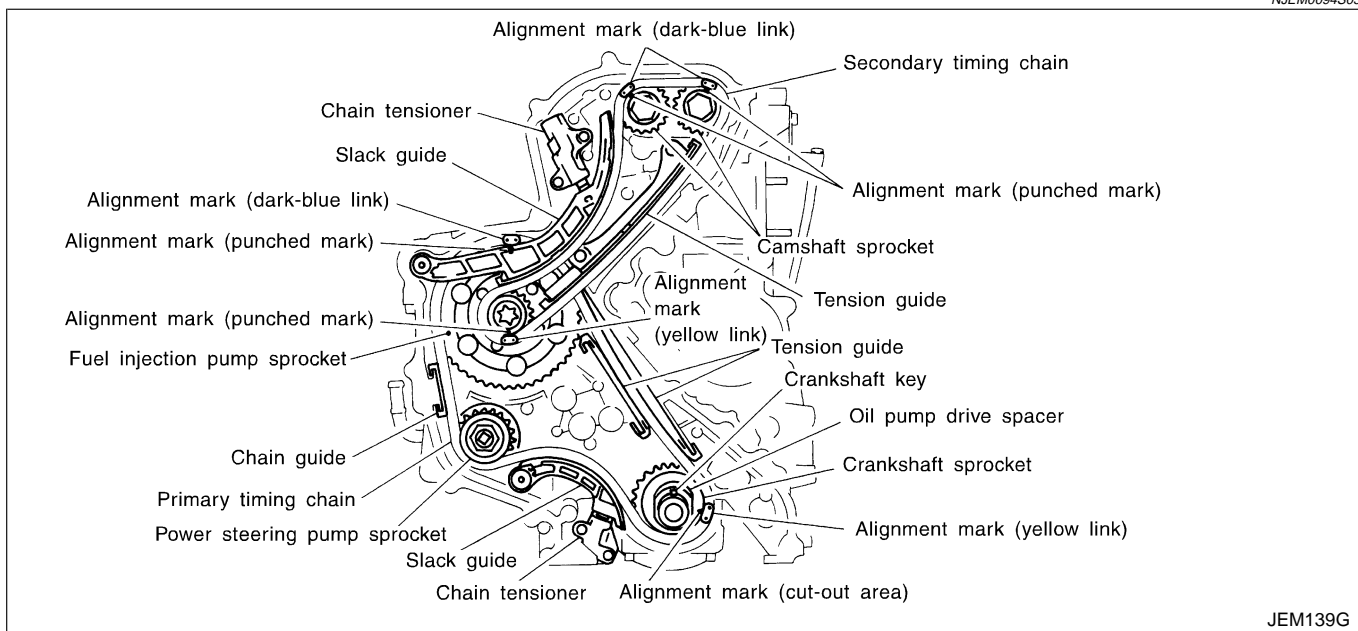


Primary Timing Chain (Cont'd)

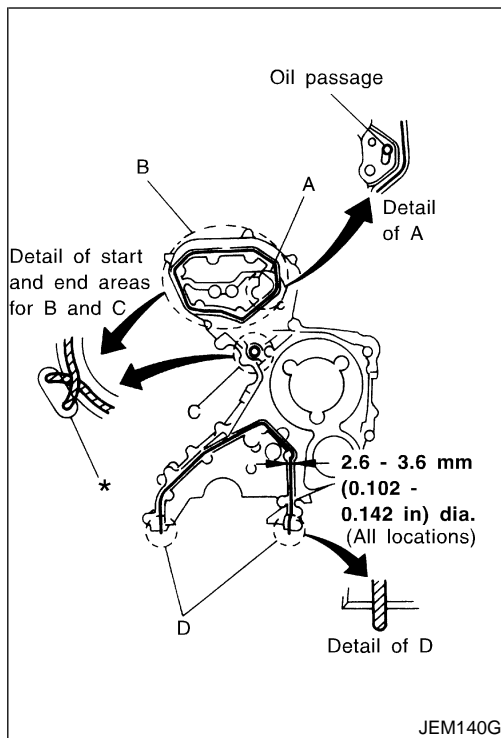

JEM140G

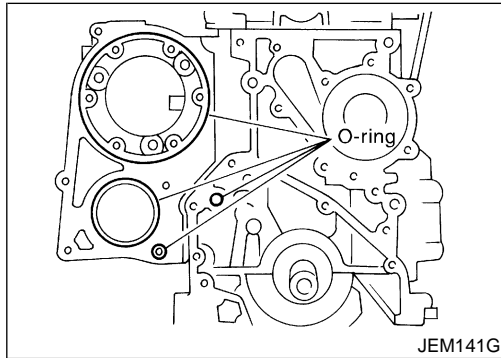

JEM141G

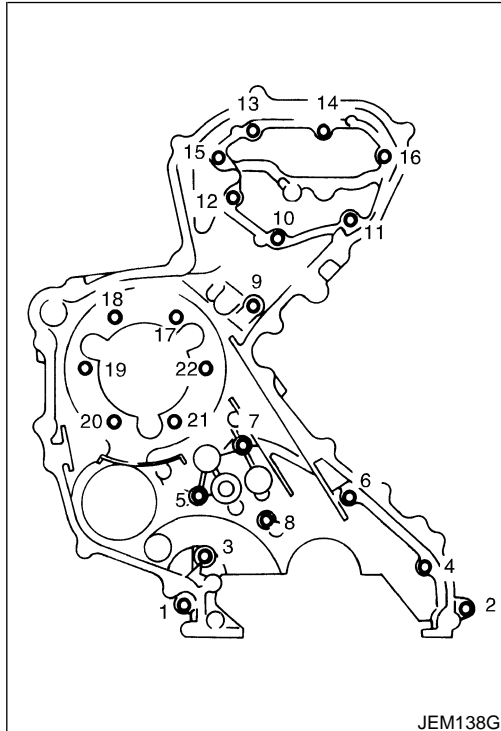

JEM138G

1. Install rear chain case.
 - a. Apply a continuous bead of specified liquid gasket (Refer to EM-78, "Liquid Gasket Application Procedure".) on locations shown in the figure.

A: Apply bead so that it does not protrude into the oil passage.

B, C: Minimize overlapping area of bead, by start and end areas of bead as shown in the figure. Apply so that the portion marked * comes at an external location but cannot be viewed externally after engine assembly.






D: Leave the start and end areas of the bead slightly protruding from the case surface.
 - b. Install four O-rings to the grooves of the cylinder block, fuel injection pump bracket.
 - c. Install rear chain case.
 - When installing, align the dowel pin with the pin hole.
 - d. Tighten bolts in the numerical order shown in the figure.
 - Install the following four types of bolts, referring to the figure.

16 mm (0.63 in): Bolt No. 1, 2, 17, 18, 19, 20, 21, 22

20 mm (0.79 in): Bolt No. 3, 4, 6, 9, 10, 11, 13, 14, 16

25 mm (0.98 in): Bolt No. 12, 15

35 mm (1.38 in): Bolt No. 5, 7, 8
 - The shank length under the bolt neck above is the length of threaded part (pilot portion not included).
 - e. After tightening all the bolts, re-tighten in the same order.

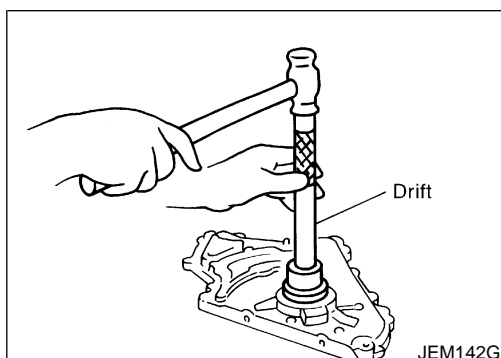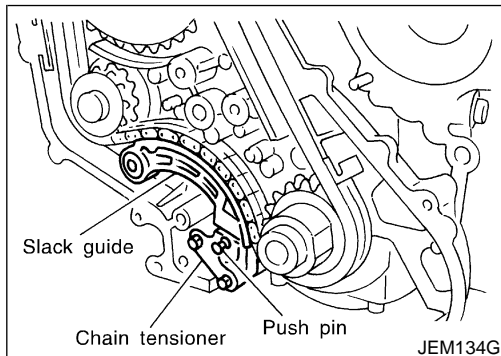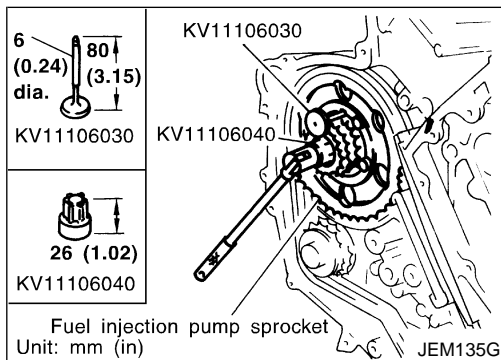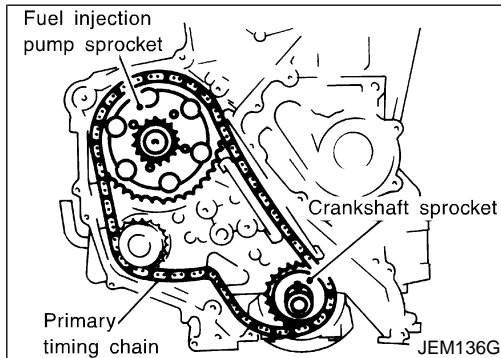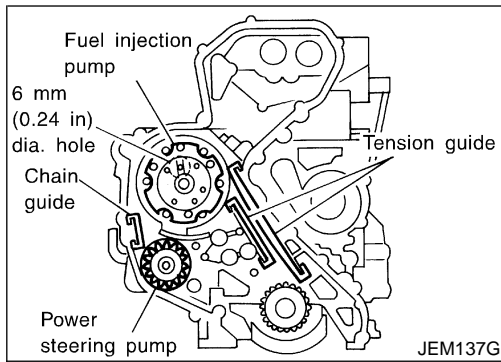

2. Install power steering pump.
3. Install fuel injection pump.
 - Before installing, make sure the notch on the fuel injection pump flange and the hole 6 mm (0.24 in) in diameter on the pump body are aligned.
4. Install chain guide and tension guides.
5. Install crankshaft sprocket, aligning it with the crankshaft key on the far side.






6. Install primary timing chain with fuel injection pump sprocket.
 - When installing, match the alignment marks on sprockets with color coded alignment marks (colored links) on the chain.
 - Install fuel injection pump sprocket washer with the surface marked "F" (front mark) facing the front of the engine.
7. Install timing chain onto power steering pump sprocket and through chain guide.

8. Use the positioning stopper pin (SST) to hold the fuel injection pump sprocket and install the bolt.
 - Using a torque wrench (SST), turn the pump shaft little by little to adjust the position of the pump flange. Insert positioning stopper pin (SST) into the hole 6 mm (0.24 in) in diameter on the fuel injection pump sprocket so that the stopper pin goes through the pump flange to the pump body. While the stopper pin is in place, install the bolt.

9. Install timing chain slack guide.
10. Install chain tensioner.
 - Push the plunger of the chain tensioner. While keeping plunger pressed down with a push pin, etc., install the chain tensioner.
 - After installation, pull out the push pin holding the plunger.
 - **Check again that the alignment marks on the sprockets and the colored alignment marks on timing chain are aligned.**

11. Install front oil seal to oil pump.
 - Using a suitable drift [62 mm (2.44 in) dia.], force fit the seal until it hits the bottom.
 - **Do not touch lips of oil seal. Make sure seal surfaces are free of foreign materials.**

Primary Timing Chain (Cont'd)

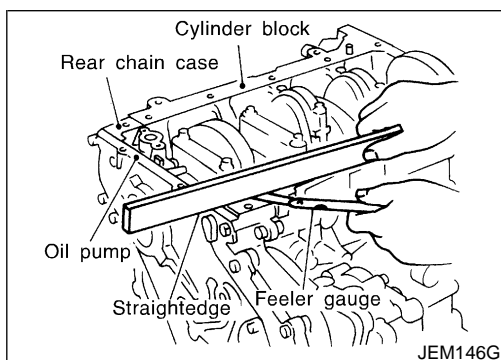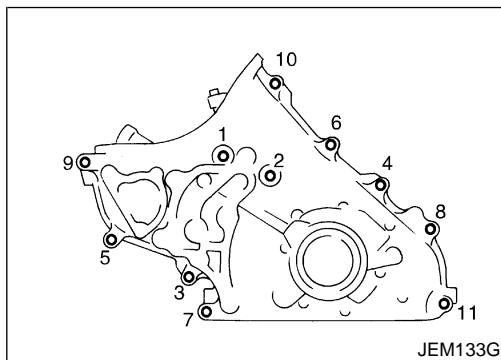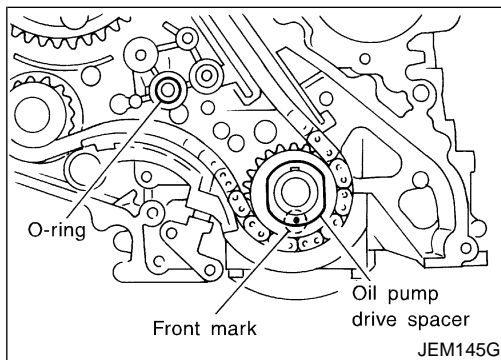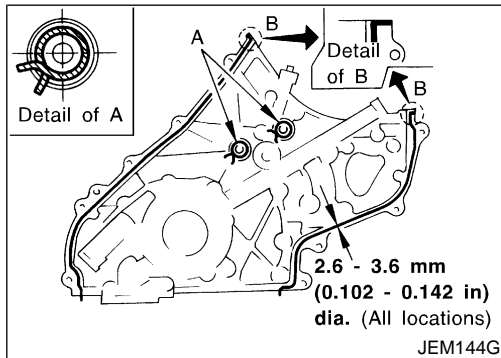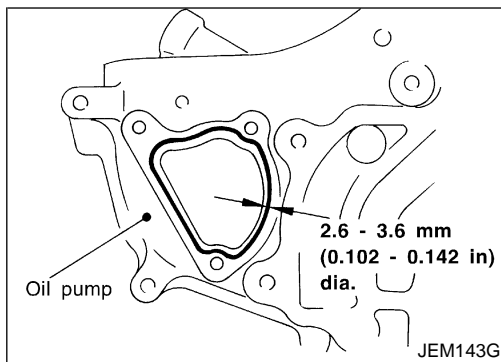

12. Install chain case cover (for opening for power steering pump removal/installation) to oil pump.
 - Apply a continuous bead of specified liquid gasket (Refer to EM-78, "Liquid Gasket Application Procedure".) as shown in the figure.
 - Apply liquid gasket on oil pump-side surface.
13. Install oil pump.
 - a. Apply a continuous bead of specified liquid gasket (Refer to EM-78, "Liquid Gasket Application Procedure".) on locations shown in the figure.


A: Leave the start and end areas of the bead slightly protruding from the surface.

B: Apply liquid gasket along upper end surface of oil pump.
 - b. Install oil pump drive spacer to crankshaft.
 - Install with the front mark (punched mark) facing the front of the engine.
 - c. Install O-ring into the groove of rear chain case.
 - d. Install oil pump.
 - When installing, align the inner rotor in the direction of the two facing flats of the oil pump drive spacer.
 - When installing, align the dowel pin with the pin hole.
 - e. Tighten fixing bolts in the numerical order shown in the figure.
 - f. After tightening all the bolts, re-tighten in the same order.
14. Check gaps on upper oil pan mounting surface.
 - Using straightedge and feeler gauge, measure gaps between the locations of the following parts:

Standard:

Oil pump and rear chain case
-0.14 to 0.14 mm (-0.0055 to 0.0055 in)

Rear chain case and cylinder block
-0.25 to 0.13 mm (-0.0098 to 0.0051 in)
 - If the measured value is out of the above range, install again.

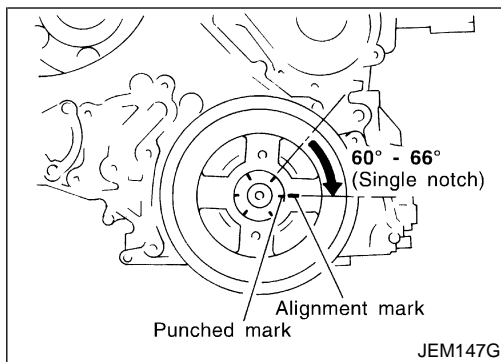

15. Install crankshaft pulley.
 - a. Install crankshaft pulley to crankshaft.
 - b. Hold crankshaft pulley with the pulley holder (SST).
 - c. Tighten bolt to 20 to 29 N·m (2.0 to 3.0 kg-m, 15 to 21 ft-lb).
 - d. Put an alignment mark on crankshaft pulley that aligns with one of the punched marks on the bolt.
 - e. Tighten fixing bolt another 60° - 66° [target: 60° (turn by one notch)].
16. Install secondary timing chain and the associated parts.
Refer to EM-97, "Secondary Timing Chain", "INSTALLATION".
17. Install in the reverse order of removal hereafter.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS



BT

HA

SC

EL

IDX

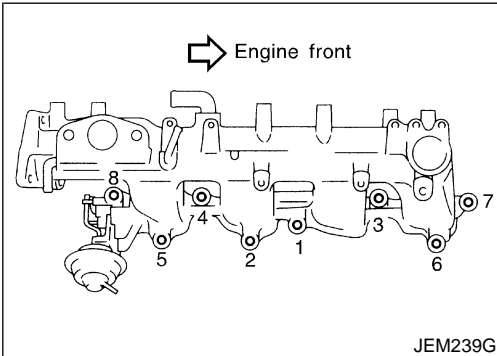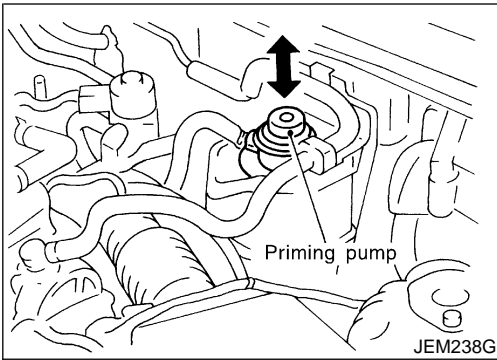

FUEL PIPING

Removal

- To prevent fuel from flowing out, plug the opening of the hose with a blind plug after disconnection.
- **Be careful not to spill fuel in the engine compartment.**

Installation

After repairing, bleed air in pipes by shifting priming pump up and down until the touch is heavy.

INTAKE MANIFOLD

Removal


- Loosen bolts and nuts in the reverse order of that shown in the figure.
- **Do not disassemble or adjust swirl control valve and actuator.**

Installation

- When stud bolts come off, install with the following torque:
🔧 : 10 - 11 N·m (1.0 - 1.2 kg-m, 87 - 104 in-lb)
- Tighten fixing bolts in the numerical order shown in the figure.

EGR VOLUME CONTROL VALVE

- **Handle with care avoiding any shocks.**
- **Do not disassemble or adjust.**

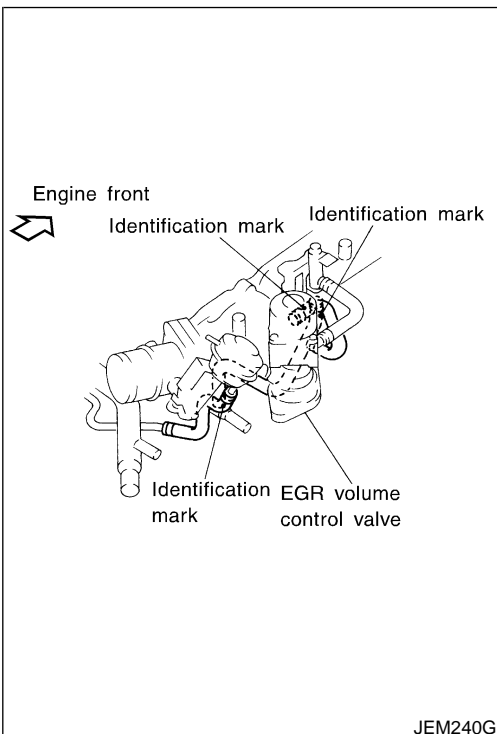


WATER HOSE

Installation

- Install water hose by referring to identification marks; avoiding twisting.
- When an insert stopper is not provided with the pipe, insert the hose up to dimension A. When the pipe is shorter than dimension A, insert hose fully until it reaches the end.
Dimension A: 25 - 30 mm (0.984 - 1.181 in)
- When an insert stopper is provided on the pipe side, insert the hose until it reaches the bulge.
- When marking is provided on the pipe, insert hose until it covers half of the marking.

Inspection

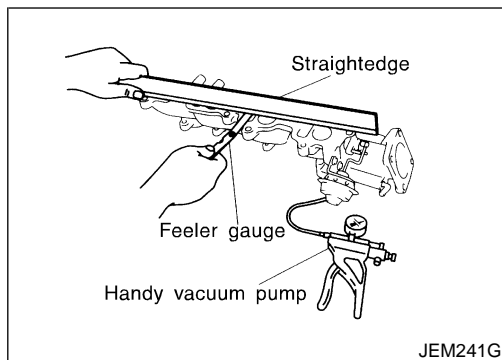

Inspection


INTAKE MANIFOLD

NJEM0096

NJEM0096S01

1. Connect the handy vacuum pump to the actuator. Apply negative pressure to close the swirl control valves.
2. Check distortion on the mounting surface with a straightedge and feeler gauge.

Limit: 0.1 mm (0.004 in)

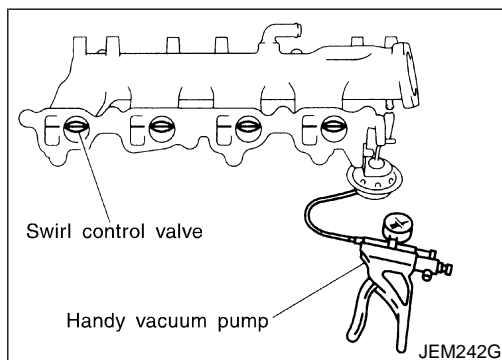

SWIRL CONTROL VALVE

NJEM0096S02

Connect the portable vacuum pump to the actuator. Then, make sure that rods move smoothly when the negative pressure shown below is applied and that the pressure is maintained.

Negative pressure reference value:

Rod motion start

Approx. -8.0 kPa (-80 mbar, -60 mmHg, -2.36 inHg)


Rod motion end

Approx. -26.7 kPa (-267 mbar, -200 mmHg, -7.87 inHg)

Removal and Installation

NJEM0097

SEC. 140•147

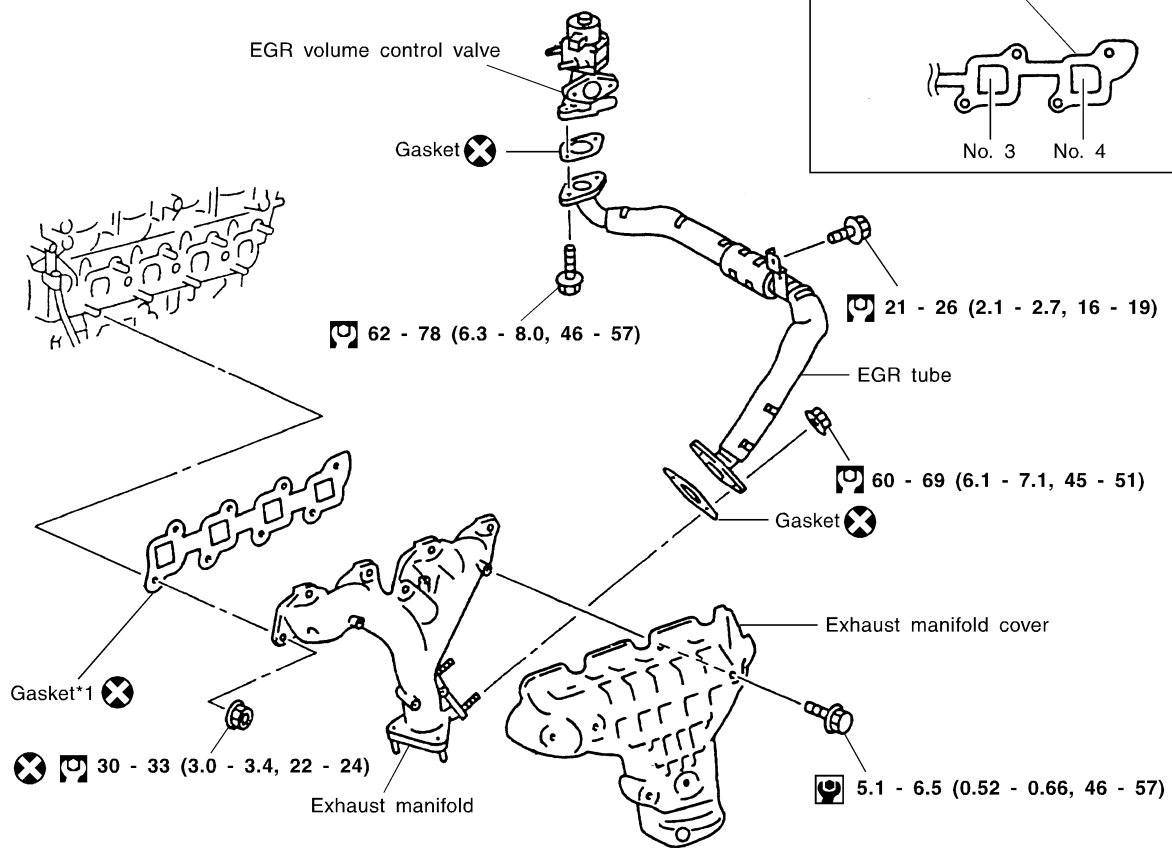

: N•m (kg-m, in-lb)


: N•m (kg-m, ft-lb)

JEM243G

PREPARATIVE WORK

1. Remove engine cover.
2. Remove air cleaner case (upper), and air duct.
3. Remove glow plate.
4. Remove exhaust front tube manifold nuts.

NJEM0097S01

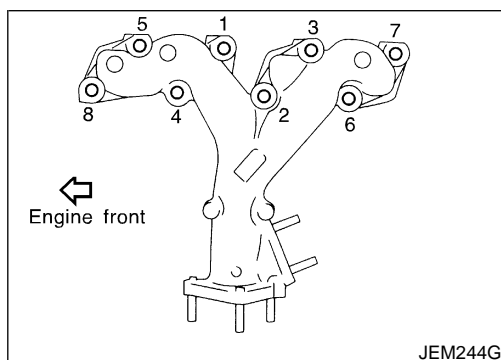

EXHAUST MANIFOLD

Removal

1. Remove all the bolts holding the exhaust manifold cover and bring the cover toward the front of the vehicle.
2. Loosen nuts holding the exhaust manifold in the reverse order of that shown in the figure.
3. Remove exhaust manifold with exhaust manifold cover.

Installation

- When stud bolts come off, install with the following torque:

: 18 - 21 N•m (1.8 - 2.2 kg-m, 13 - 15 ft-lb)

NJEM0097S0202

- Tighten exhaust manifold holding nuts in the numerical order shown in the figure above.
- Tighten only 1 to 4 nuts to the specified torque again.


EXHAUST MANIFOLD GASKET

NJEM0097S03

Installation

NJEM0097S0301

Install gasket so that the protruding tab (mark for correct installation) is positioned on the side of No. 4 port (rear side). Refer to component structure diagram on the previous page.

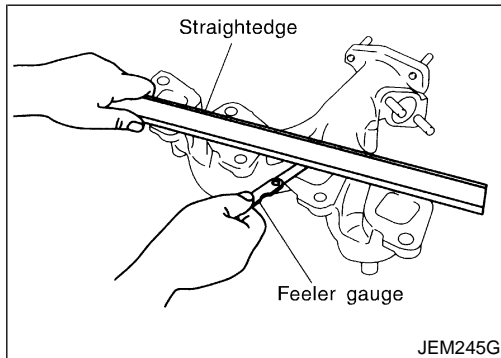**Inspection**

NJEM0098

EXHAUST MANIFOLD

NJEM0098S01

Check distortion on mounting surface with straightedge and feeler gauge.

Limit: 0.3 mm (0.012 in)


Removal and Installation

NJEM0099

SEC. 111•118



6.9 - 8.8 N•m
(0.7 - 0.9 kg-m, 61 - 78 in-lb)
Tighten twice.

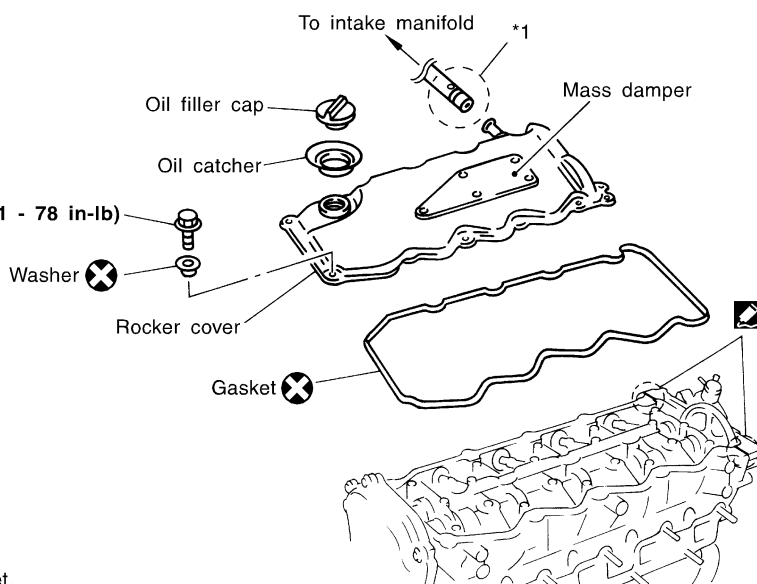


: Apply liquid gasket.

JEM246G

PREPARATIVE WORK

Remove engine cover.

NJEM0099S01

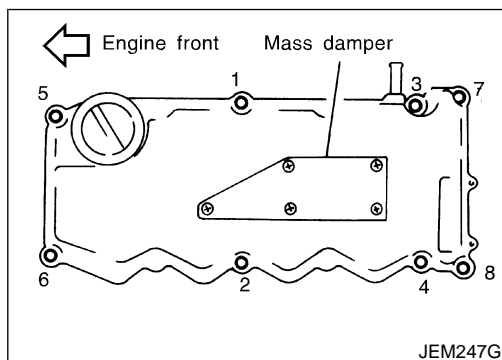

ROCKER COVER

Removal

Loosen holding bolts in the reverse order of that shown in the figure and remove.

CAUTION:


Do not remove mass damper on top. If damper must be removed, remove all traces of old locking sealant from threads of bolts and holes, and apply new locking sealant on the bolts before tightening.

Installation

- Tighten holding bolts in the numerical order shown in the figure.
- Re-tighten to the same torque in the same order as above.

NJEM0099S0202

Removal and Installation (Cont'd)

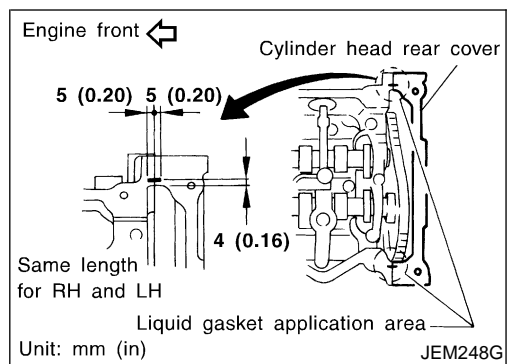


- Apply 3.0 mm (0.118 in) dia. of specified liquid gasket (Refer to EM-78, "Liquid Gasket Application Procedure".) on locations shown in the figure.

Components

NJEM0062

SEC. 111•210•220•253

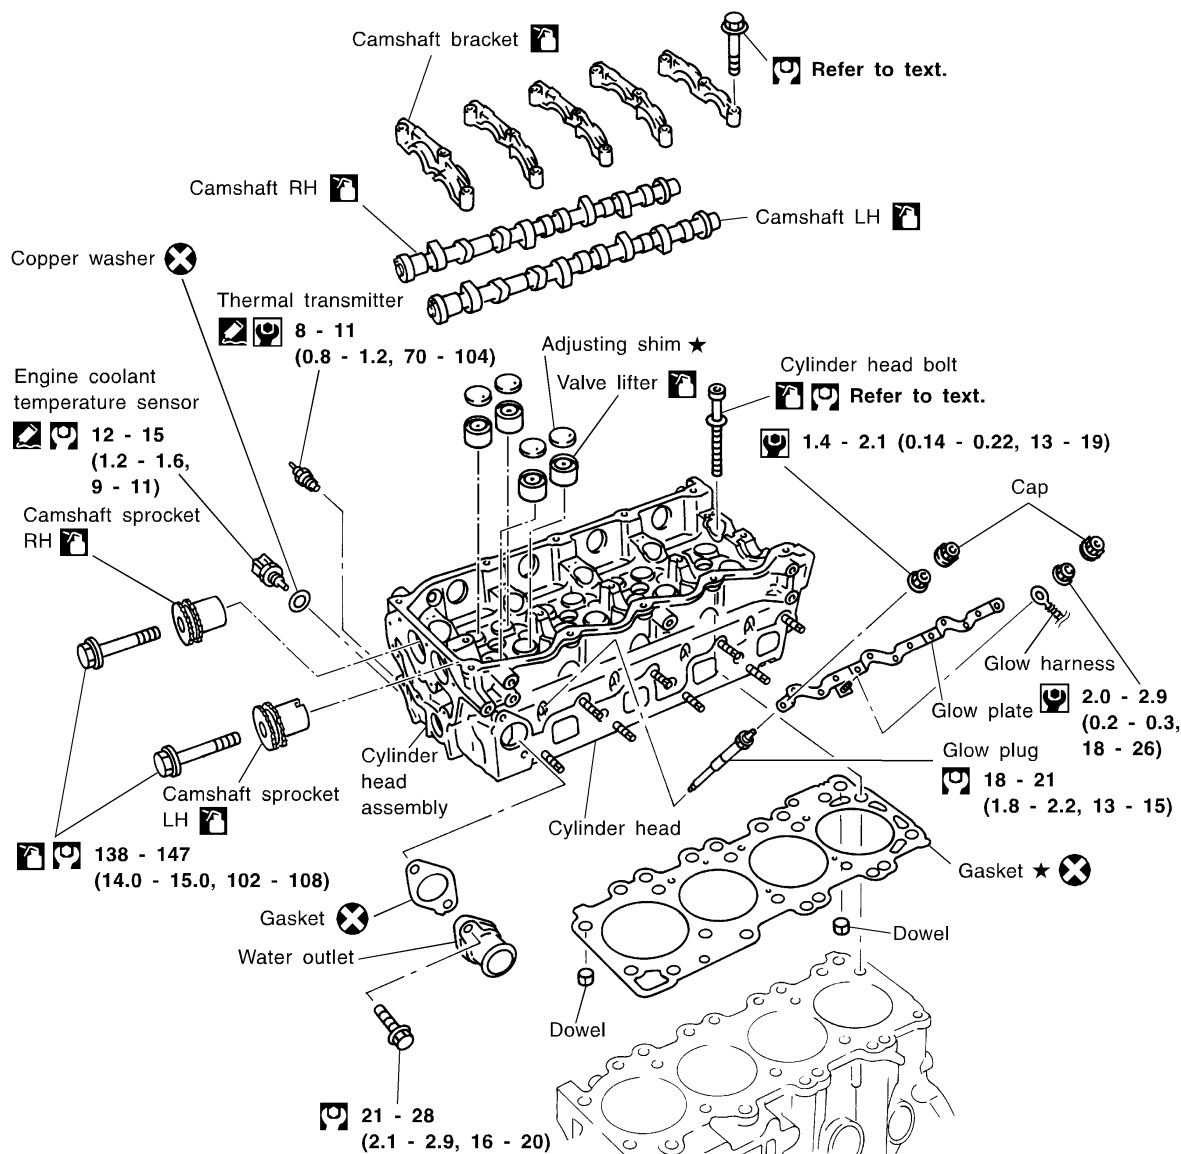

★ : Select appropriate part.

: Lubricate with new engine oil.

: Apply liquid gasket.

: N•m (kg-m, ft-lb)

: N•m (kg-m, in-lb)

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

JEM148G

CAUTION:




- When installing camshafts, chain tensioners, oil seals, or other sliding parts, lubricate contacting surfaces with new engine oil.
- Apply new engine oil to threads and seat surfaces when installing cylinder head, camshaft sprocket, crankshaft pulley, and camshaft bracket.
- Attach tags to valve lifters so as not to mix them up.

Removal**PREPARATIVE WORK**

NJEM0063


NJEM0063S01

1. Drain engine coolant. Refer to LC-44, "Changing Engine Coolant".
 2. Remove exhaust manifold. Refer to EM-111, "Removal".
 3. Remove intake manifold. Refer to EM-109, "Removal".
- **Apply paint to camshaft sprockets for alignment during installation.**

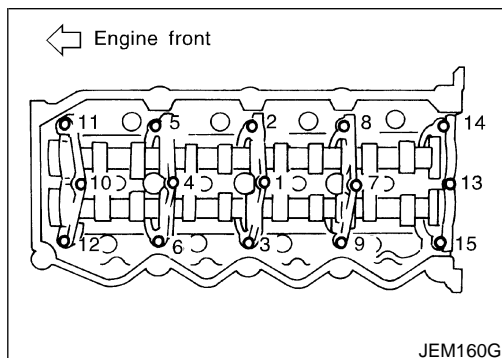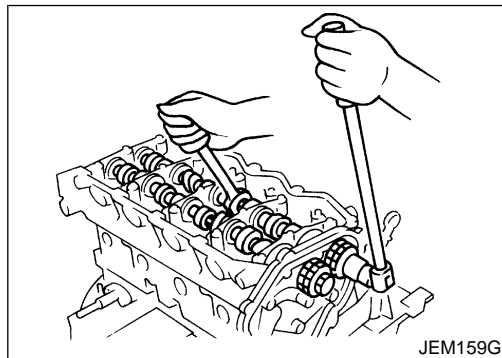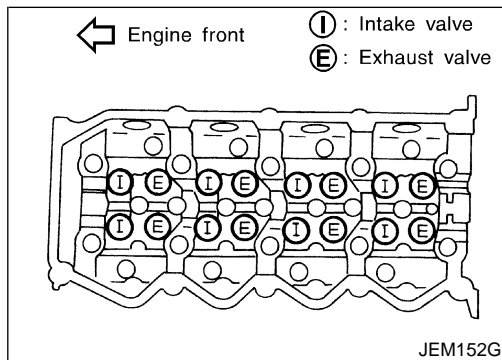**CAMSHAFT**

NJEM0063S02

1. Remove the following parts:
 - Air duct, air cleaner case
 - Engine cover
 - Rocker cover
 - Vacuum pump and cylinder head rear cover assembly
 - Injection tube
 - Spill tube
 - High pressure injection nozzle assembly
 - Secondary timing chain and associated parts
2. Remove camshaft sprockets.
 - Holding the hexagonal part of the camshaft with a wrench having 21 mm (0.83 in) width between facing flats, loosen the bolt holding the camshaft sprocket.
3. Remove camshafts.
 - Loosen bolts holding the camshaft bracket in several stages in the reverse order of that shown in the figure, and remove them.
4. Remove adjusting shims and valve lifters.
 - Confirm the correct location of each part removed. Store them so they do not get mixed up.
 - **For re-installation, be sure to put mark on camshaft bracket before removal.**

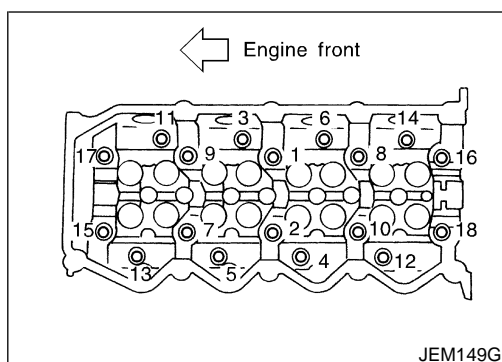


CYLINDER HEAD

NJEM0063S03


- Loosen bolts in the reverse order of that shown in the figure and remove them.
- Be careful not to damage the tips of glow plugs projecting out of the bottom surface of the cylinder head. To avoid damage to glow plugs, either remove them beforehand, or support cylinder head with wooden blocks to create a space below the bottom surface.

Disassembly

NJEM0100


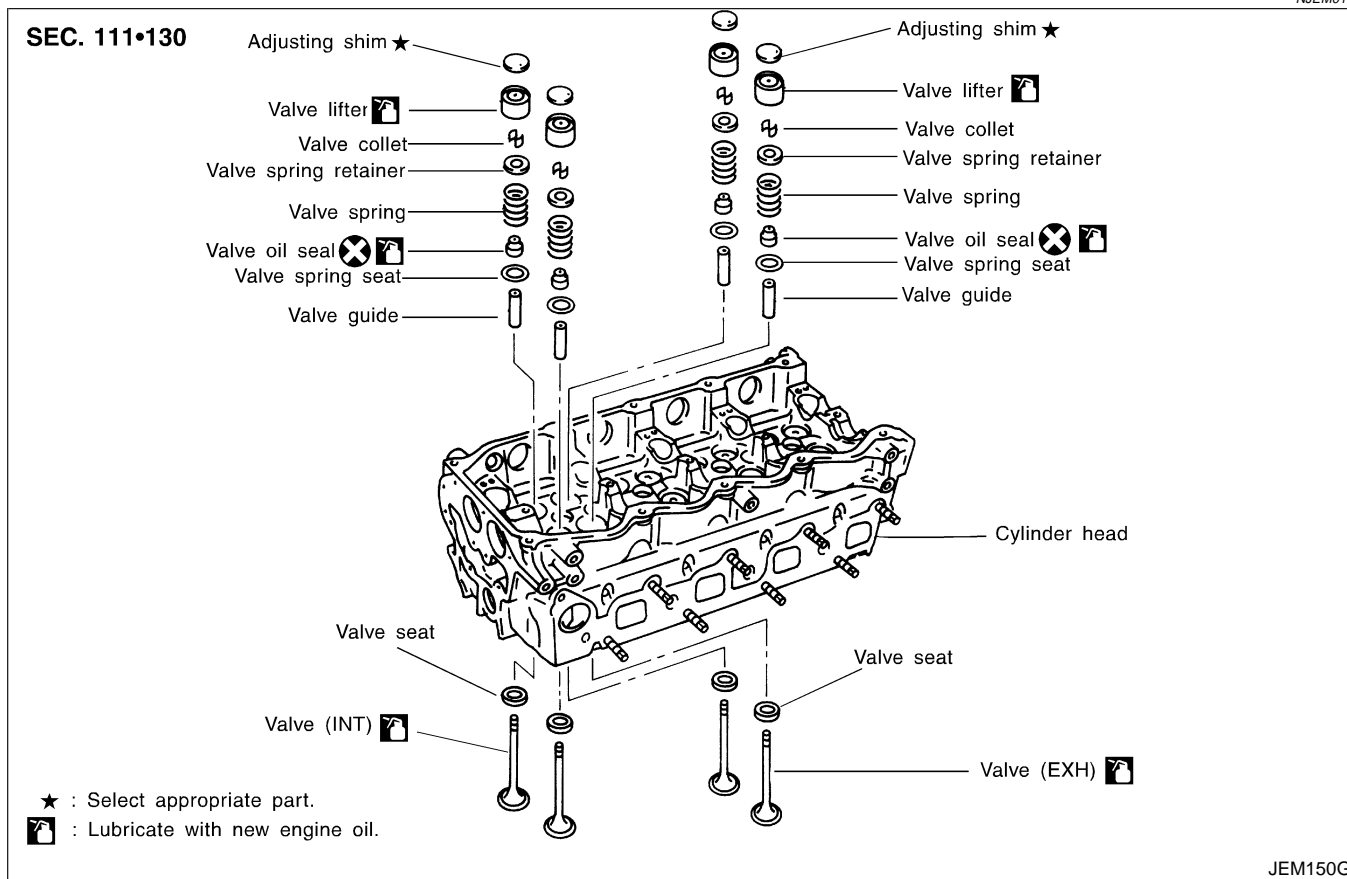


- Remove adjusting shims and valve lifters. Confirm the correct location of each part removed. Store them in order to avoid mixing them up.

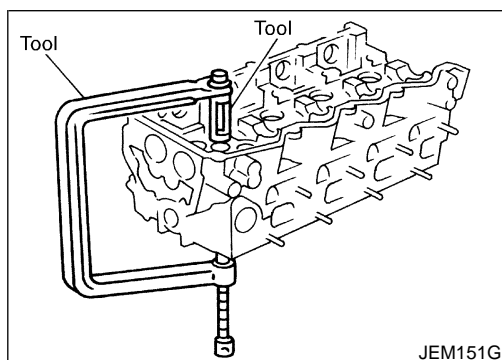


- Remove valve collets.
 - Compress valve spring with a valve spring compressor, and remove valve collet with a magnet hand.
- Remove valve spring retainers, and valve springs.
- Push valve stem toward combustion chamber and remove valve.
 - Before removing valves, check valve guide clearance. Refer to EM-120, "VALVE GUIDE CLEARANCE".
 - Confirm the correct location of each valve. Store them so they do not get mixed up.

Disassembly (Cont'd)

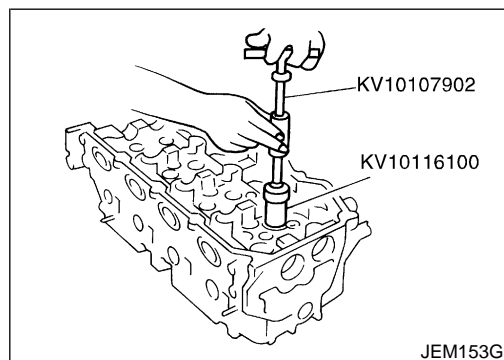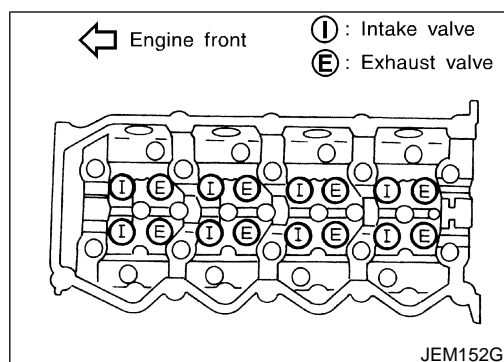

- For the locations and arrangement of intake and exhaust valves, refer to the figure.
5. Remove valve oil seals.
 - Use a valve oil seal puller (SST) for removal.
 6. Remove valve spring seats.
 7. When removing valve seats, check valve seat contact. Refer to EM-122.
 8. Before removing valve guides, check valve guide clearance. Refer to EM-120, "VALVE GUIDE CLEARANCE".
 9. Remove glow plugs.
 - To avoid damage, glow plugs should be removed only when required.
 - Handle with care to avoid applying shock. (When dropped from approx. 100 mm (3.94 in) or higher, always replace with a new one.)

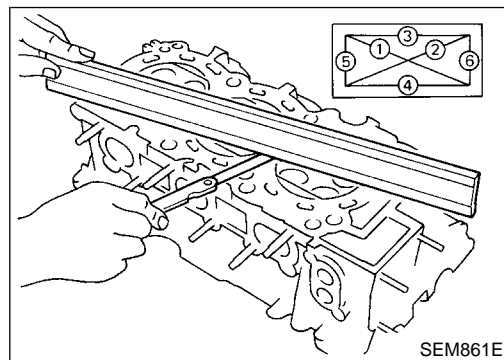

Inspection

CYLINDER HEAD DISTORTION

NJEM0065

NJEM0065S01

Clean surface of cylinder head.

Use a reliable straightedge and feeler gauge to check the flatness of cylinder head surface.

Check along six positions shown in the figure.

Head surface flatness: Limit 0.1 mm (0.004 in)

If beyond the specified limit, resurface or replace it.

The limit for cylinder head resurfacing is determined by the cylinder block resurfacing.

Resurfacing limit:

Amount of cylinder head resurfacing is "A".

Amount of cylinder block resurfacing is "B".

The maximum limit: $A + B = 0.2 \text{ mm (0.008 in)}$

After resurfacing cylinder head, check that camshaft rotates freely by hand. If resistance is felt, cylinder head must be replaced.

Nominal cylinder head height:

153.9 - 154.1 mm (6.059 - 6.067 in)

CAMSHAFT VISUAL CHECK

Check camshaft for scratches, seizure and wear.

NJEM0065S02

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS


BT

HA

SC

EL

IDX

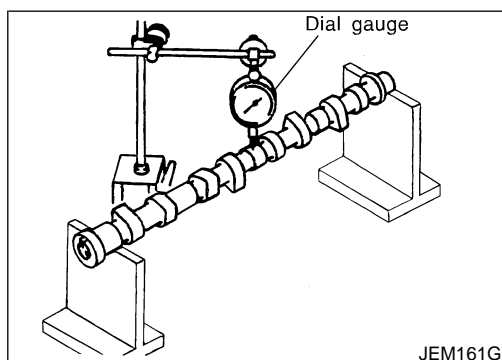
**CAMSHAFT RUNOUT**

NJEM0065S03

1. Place V-blocks on a work bench and support camshaft at No. 1 and No. 5 journal.
2. Set dial gauge perpendicularly at camshaft No. 3 journal.
3. Turn camshaft by hand in one direction and read runout on dial gauge.

Runout (Total indicator reading):**Limit 0.02 mm (0.0008 in)**

4. If it exceeds the limit, replace camshaft.

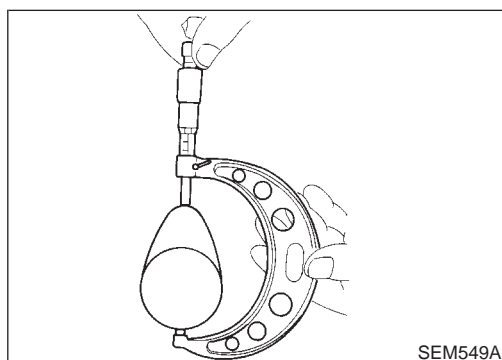
**CAMSHAFT CAM HEIGHT**

NJEM0065S04

1. Measure camshaft cam height.


Standard cam height:**Intake and Exhaust****39.905 - 40.095 mm (1.5711 - 1.5785 in)****Cam wear limit:****0.2 mm (0.008 in)**

2. If wear is beyond the limit, replace camshaft.

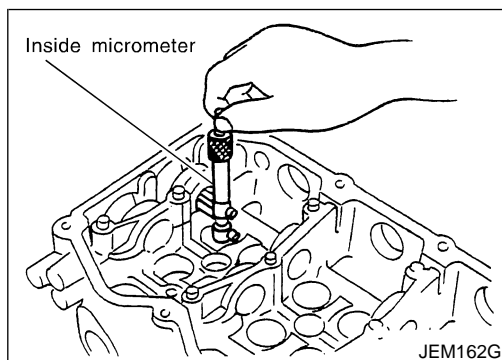**CAMSHAFT JOURNAL CLEARANCE**

NJEM0065S05

1. Install camshaft bracket and tighten bolts to the specified torque.
2. Measure inner diameter of camshaft bearing.

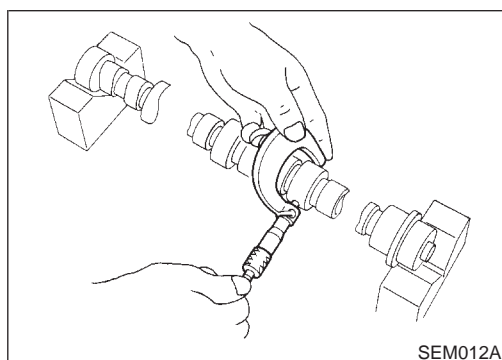Standard inner diameter:**No. 1: 30.500 - 30.521 mm (1.2008 - 1.2016 in)****No. 2, 3, 4, 5: 24.000 - 24.021 mm (0.9449 - 0.7882 in)**


3. Measure outer diameter of camshaft journal.

Standard outer diameter:**No. 1: 30.435 - 30.455 mm (1.1982 - 1.1990 in)****No. 2, 3, 4, 5: 23.935 - 23.955 mm (0.9423 - 0.9431 in)**

4. If clearance exceeds the limit, replace camshaft and/or cylinder head.

Camshaft journal clearance:**Standard****No. 1 - 5: 0.045 - 0.086 mm (0.0018 - 0.0034 in)****Limit**

0.1 mm (0.004 in)

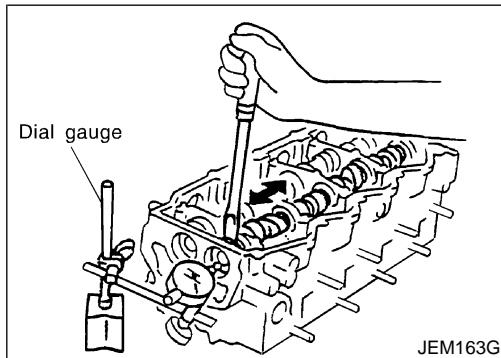
**CAMSHAFT END PLAY**

NJEM0065S06

1. Install camshaft in cylinder head.
2. Measure camshaft end play.


Camshaft end play:**Standard****0.070 - 0.148 mm (0.0028 - 0.0058 in)****Limit****0.24 mm (0.0094 in)**

- If the value exceeds the limit, replace camshaft and measure again.
- If the measurement exceeds the limit again, replace cylinder head.

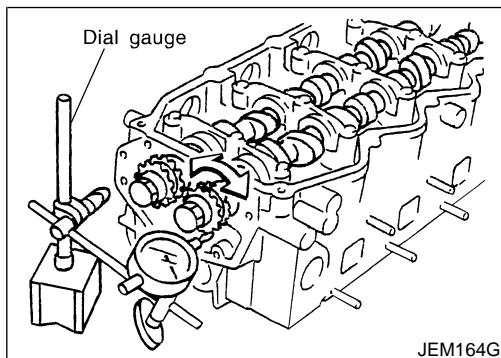**CAMSHAFT SPROCKET RUNOUT**

NJEM0065S07

1. Install sprocket on camshaft.
 2. Measure camshaft sprocket runout.
- Runout (Total indicator reading):**
Less than 0.15 mm (0.0059 in)
3. If it exceeds the limit, replace camshaft sprocket.

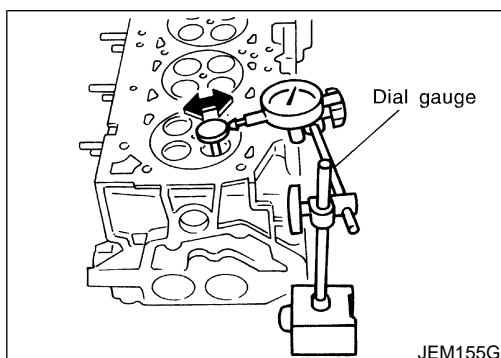**VALVE GUIDE CLEARANCE**

NJEM0065S08

1. Check that valve stem diameter is within the specified range.
 2. Push out valve approx. 25 mm (0.98 in) toward combustion chamber. Swing valve in the direction of the dial gauge to measure the runout.
- This inspection should be performed before removing valve guides.
 - Half of the runout reading on the dial gauge is the valve guide clearance.


Standard:**Intake 0.020 - 0.053 mm (0.0008 - 0.0209 in)**

Exhaust 0.040 - 0.073 mm (0.0016 - 0.0029 in)

3. If it exceeds the limit, check valve to valve guide clearance.
 - a. Measure valve stem diameter and valve guide inner diameter.
 - b. Check that clearance is within specification.


Valve to valve guide clearance limit:**Intake 0.08 mm (0.0031 in)****Exhaust 0.1 mm (0.004 in)**

- c. If it exceeds the limit, replace valve or valve guide.

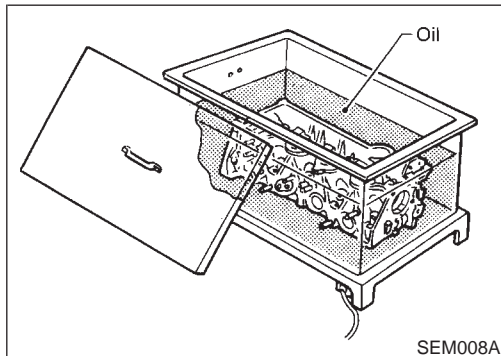
**VALVE GUIDE REPLACEMENT**

NJEM0065S09


- When a valve guide is removed, replace with an oversized [0.2 mm (0.008 in)] valve guide.
1. To remove valve guide, heat cylinder head to 110 to 130°C (230 to 266°F) by soaking in heated oil.

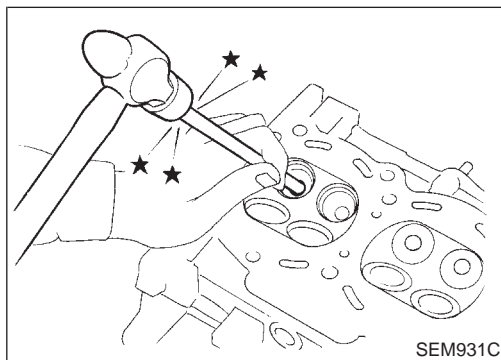

2. Drive out valve guide with a press [under a 20 kN (2 ton, 2.2 US ton, 2.0 Imp ton) pressure] or hammer and suitable tool.

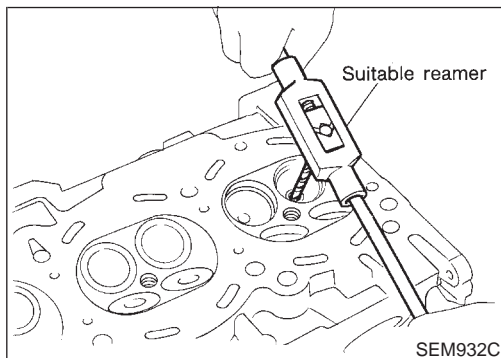

3. Ream cylinder head valve guide hole.

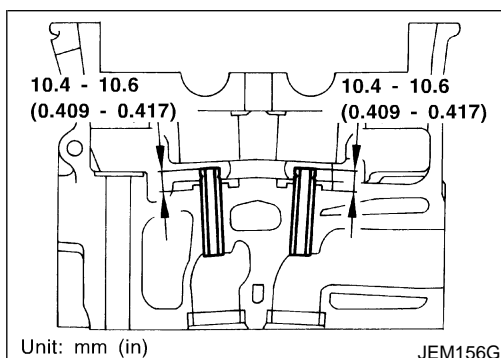Valve guide hole diameter (for service parts):**10.175 - 10.196 mm (0.4006 - 0.4014 in)**


4. Heat cylinder head to 110 to 130°C (230 to 266°F) and press service valve guide onto cylinder head.

Projection "L":**10.4 - 10.6 mm (0.409 - 0.417 in)**

5. Ream valve guide.



Finished size:**6.000 - 6.018 mm (0.2362 - 0.2369 in)**

Inspection (Cont'd)

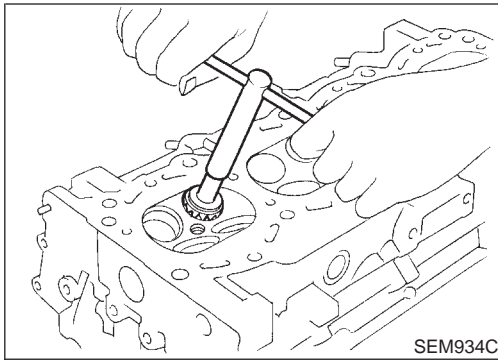**VALVE SEATS**

NJEM0065S10

- Before starting this check, confirm that the dimensions of valve guides and valves are as specified.
- Apply red lead primer on contacting surfaces of valve seat and of valve face to examine the conditions of contacting surfaces.
- Check that the paint on contacting surfaces is continuous along the entire circumference.
- If there are abnormal indications, grind the valve and check the contact again. If abnormal indications still persist, replace valve seat.

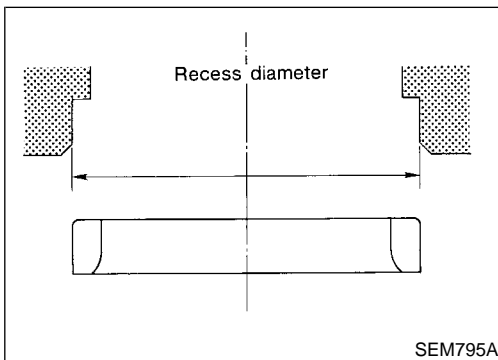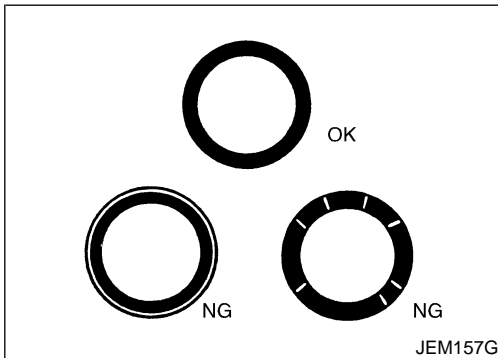**REPLACING VALVE SEAT FOR SERVICE PARTS**

NJEM0065S11

1. Bore out old seat until it collapses. Boring should not continue beyond the bottom face of the seat recess in cylinder head. Set the machine depth stop to ensure this.
2. Ream cylinder head recess for service valve seat.


Oversize [0.5 mm (0.020 in)]:**Intake 30.500 - 30.516 mm (1.2008 - 1.2014 in)****Exhaust 29.500 - 29.516 mm (1.1614 - 1.1620 in)**

Be sure to ream in circles concentric to the valve guide center.

This will enable valve seat to fit correctly.

Intake


Unit: mm (in)

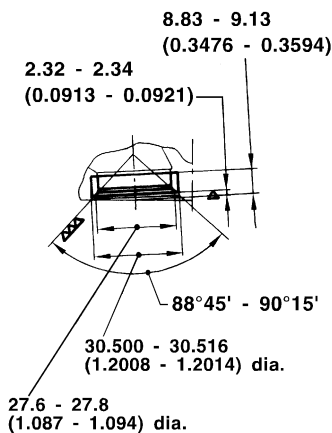


JEM158G

Exhaust

Unit: mm (in)

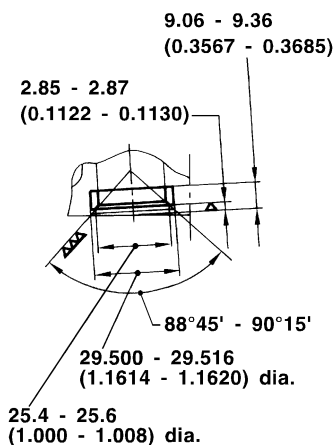

SEM301G

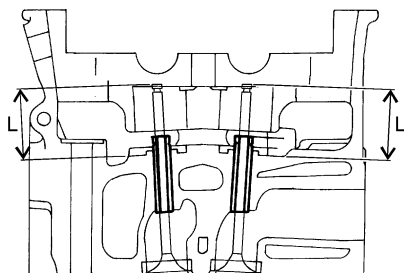

JEM253G

- Heat cylinder head to 110 to 120°C (230 to 248°F) by soaking in heated oil.
- Sufficiently cool valve seat with dry ice. Force fit valve seat into cylinder head.

WARNING:**Do not touch cold valve seat with your bare hands.**

- Cut or grind valve seat using suitable tool to the specified dimensions as shown in SDS (EM-160).


CAUTION:

Use the valve seat cutter properly. Securely gripping the cutter handle with both hands, press the cutter down onto the entire circumference of the contacting surface and finish cutting at one time. Improper pressing of the cutter or cutting in several steps may result in staged surface on the valve seat.

- After cutting, lap valve seat with abrasive compound.
- Check valve seating condition. Refer to EM-122, "Valve Seats".

- Use a depth gauge to measure the distance between the mounting surface of the cylinder head spring seat and the valve stem end. If the distance is shorter than specified, repeat step 5 above to adjust it. If it is longer, replace the valve seat with a new one.


Valve seat resurface limit "L":**Intake 36.53 - 36.98 mm (1.4382 - 1.4559 in)****Exhaust 36.53 - 37.01 mm (1.4382 - 1.4571 in)**

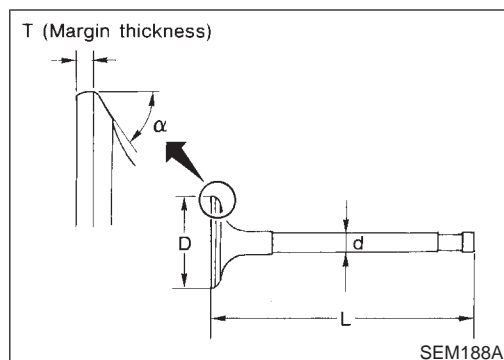**VALVE DIMENSIONS**

Check dimensions of each valve. For dimensions, refer to SDS (EM-157). NJEM0065S12

When valve head has been worn down to 0.5 mm (0.020 in) in margin thickness, replace valve.

Grinding allowance for valve stem tip is 0.2 mm (0.008 in) or less.

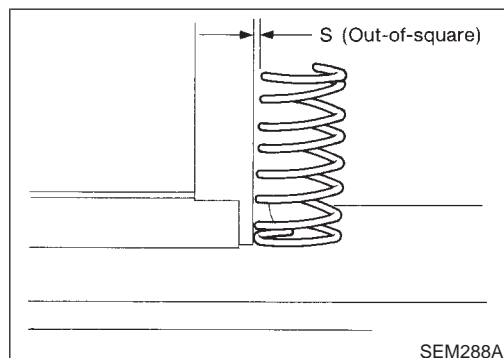
**VALVE SPRING****Squareness**

1. Measure dimension "S".

Out-of-square "S":

Limit 2.1 mm (0.083 in)

2. If it exceeds the limit, replace spring.

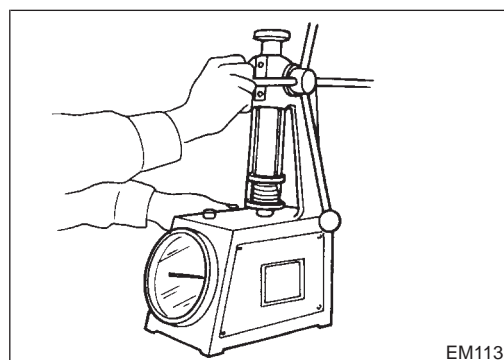**Pressure**

Check valve spring pressure at specified spring height. NJEM0065S1302

Standard:


Installation height 32.82 mm (1.2921 in)

Installation load 166 - 188 N (16.93 - 19.17 kg, 37.3 - 42.2 lb)


Height during valve open 24.82 mm (0.9772 in)

Load with valve open 345 - 376 N (35.18 - 38.34 kg, 77.5 - 84.5 lb)

If it exceeds the standard, replace spring.

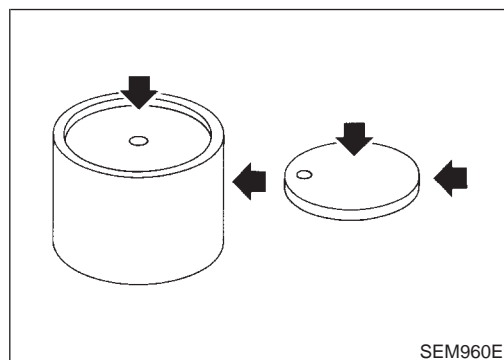**VALVE LIFTER**


1. Check contact and sliding surfaces for wear or scratches. NJEM0065S14

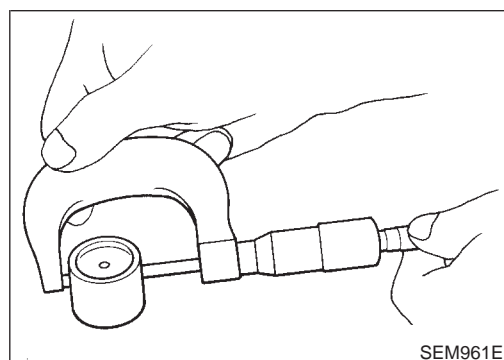



2. Check diameter of valve lifter and valve lifter guide bore.

Valve lifter outer diameter:

29.960 - 29.975 mm (1.1795 - 1.1801 in)

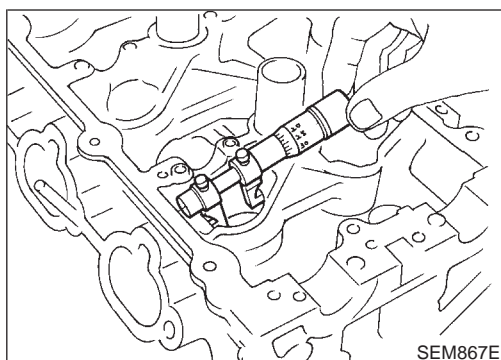**Lifter guide bore diameter:****30.000 - 30.021 mm (1.1811 - 1.1819 in)****Clearance between lifter and lifter guide:****Standard 0.025 - 0.061 mm (0.0010 - 0.0024 in)**

- If the value is out of the range, replace valve lifter and/or cylinder head, referring to the specified values for the outer diameter and bore diameter.

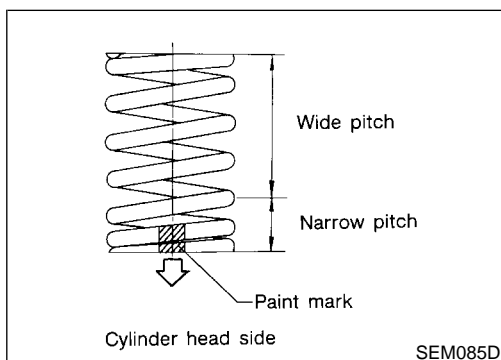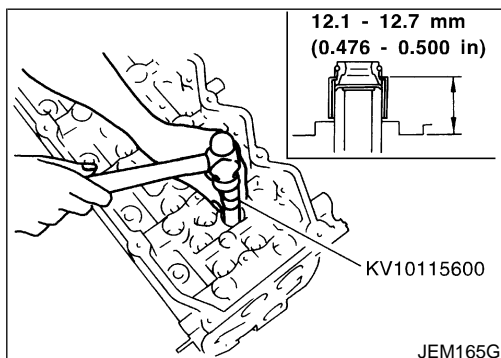**Assembly**

NJEM0066

- Install valve oil seal.
 - Using valve oil seal drift (SST), install so that the dimension shown in the figure is obtained. The dimension in the figure shows the dimension before the valve spring seat is installed.
 - Different parts should be used depending on the valve oil seal location. Identify by the rubber color.


For intake: Black**For exhaust: Brown**

- Always use new valve oil seal.
 - Before installing valve oil seal, install valve spring seat.
- Install other valve component parts. Refer to "Disassembly", EM-117.
 - Install valve spring (uneven pitch type) with its narrow pitch side toward cylinder head side (paint mark).
 - After installing valve collets, tap valve stem tip with plastic hammer to assure a proper fit.

Installation

NJEM0067

- Before installation, remove old liquid gasket from mating surface of all liquid gasket applied parts.

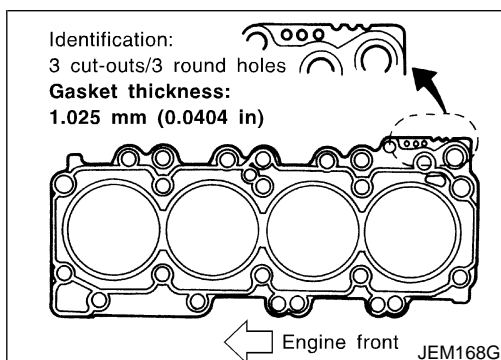**CYLINDER HEAD GASKET SELECTION**

NJEM0067S01

- Select and install cylinder head gasket with appropriate thickness according to the following procedure:



When replacing gasket alone:

- Install a gasket with the same thickness as that of the one removed.
- Identify the thickness of gasket by the number of cut-outs and holes on the rear RH side.

Gasket thickness* mm (in)	Number of cut-outs	Number of holes
------------------------------	--------------------	-----------------

0.900 (0.0354)	1	2
0.925 (0.0364)	2	2
0.950 (0.0374)	3	2
0.975 (0.0384)	1	3
1.000 (0.0394)	2	3
1.025 (0.0404)	3	3

*: Measured with head bolts tightened

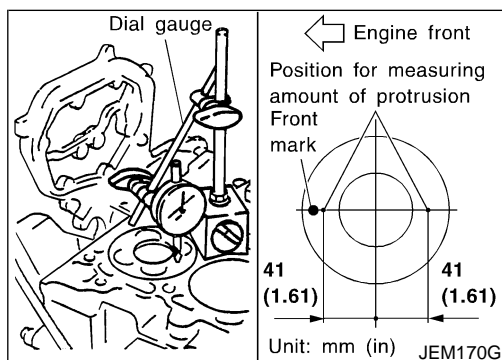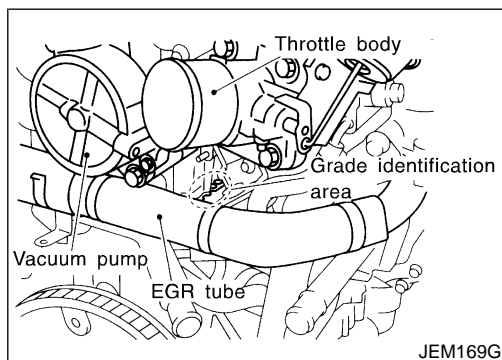


- Gasket thickness can be identified at the location shown in the figure by the numbers of cut-outs and holes before removal.

When the following parts have been repaired/replaced:

- With cylinder block upper surface and/or crankshaft pin journal ground
 - With cylinder block, pistons, connecting rods, and/or crankshaft replaced
- Set piston at a point close to TDC.
 - Set a dial gauge at the location as shown in the figure. Turning crankshaft gradually, set the gauge scale to "0" where the piston protrusion is maximized.
 - Move the dial gauge stand so that the tip of dial gauge can contact the cylinder block. Read the difference.
 - Measure at two locations per cylinder, that is eight locations for four cylinders. Select gasket based on the maximum protrusion of eight measurements.

Piston protrusion mm (in)	Gasket thickness* mm (in)	Identification	
		Number of cut-outs	Number of holes
Less than 0.255 (0.0100)	0.900 (0.0354)	1	2
Less than 0.255 - 0.280 (0.0100 - 0.0110)	0.925 (0.0364)	2	2
Less than 0.280 - 0.305 (0.0110 - 0.0120)	0.950 (0.0374)	3	2
Less than 0.305 - 0.330 (0.0120 - 0.0130)	0.975 (0.0384)	1	3
Less than 0.330 - 0.355 (0.0130 - 0.0140)	1.000 (0.0394)	2	3
More than 0.355 (0.0140)	1.025 (0.0404)	3	3

*: Measured with head bolts tightened

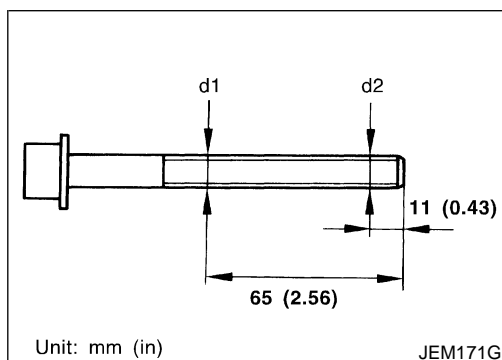


CYLINDER HEAD BOLT DEFORMATION CHECK

NJEM0067S02

- Measure the outer diameter of threaded area, d1 and d2, at the points specified in the figure.
- When the necked point is identified at a point other than specified points, measure at the point as d1.
- Calculate the difference between d1 and d2. If the value exceeds the limit, replace with new ones.

Limit: 0.15 mm (0.0059 in)

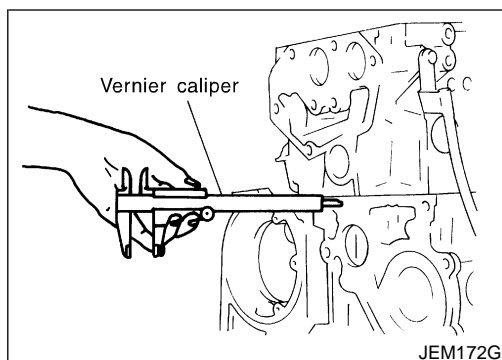
**CYLINDER HEAD-TO-BLOCK DIFFERENCE CHECK**

NJEM0067S03

- After installing cylinder head, measure dimension from the front end surface of cylinder block to that of cylinder head.

Standard: 23.53 - 24.07 mm (0.9264 - 0.9476 in)

- If the difference is out of the range, check fitting of dowel pins and cylinder head.

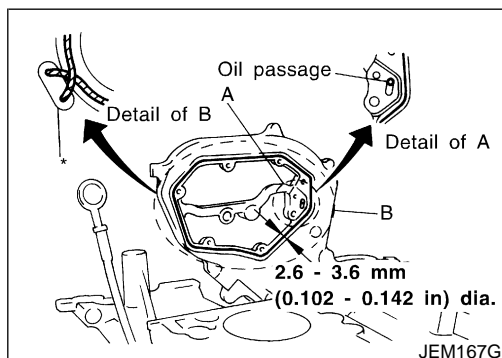**LIQUID GASKET APPLICATION ON REAR CHAIN CASE**


NJEM0067S04

Apply a continuous bead of specified liquid gasket (Refer to EM-78, "Liquid Gasket Application Procedure".) on the surface shown in the figure.

A: Apply bead so that it does not protrude into oil passage.

B: Minimize the overlapping area of the bead, with start and end areas of bead as shown in the figure.


Apply so that the portion marked * comes at an external location but cannot be viewed externally after engine is assembled.

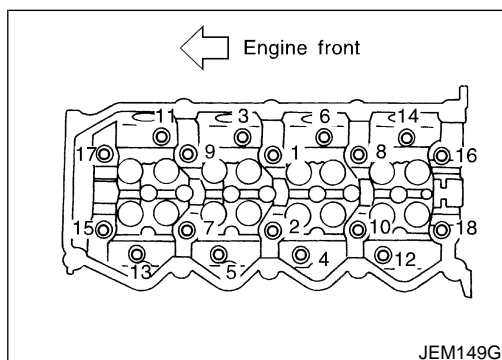**CYLINDER HEAD INSTALLATION**

NJEM0067S05





- Tighten bolts in numerical order as shown in the figure according to the following procedure:

- Apply engine oil to bolt threads and seat surfaces.
 - Tighten bolts to 29 to 38 N·m (2.9 to 3.9 kg-m, 21 to 28 ft-lb).
 - Tighten 180° to 185° [target: 180°] (angular tightening).
 - Loosen completely to 0 N·m (0 kg-m, 0 ft-lb) in the reverse order of that shown in the figure.
 - Tighten bolts to 35 to 44 N·m (3.5 to 4.5 kg-m, 26 to 32 ft-lb).
 - Tighten 90° to 95° [target: 90°] (angular tightening).
 - Tighten another 90° to 95° [target: 90°] (angular tightening).
- When an angle wrench is not used, paint an alignment mark on the head of cylinder head bolt and cylinder head surface before tightening. Check the angle with a protractor.**

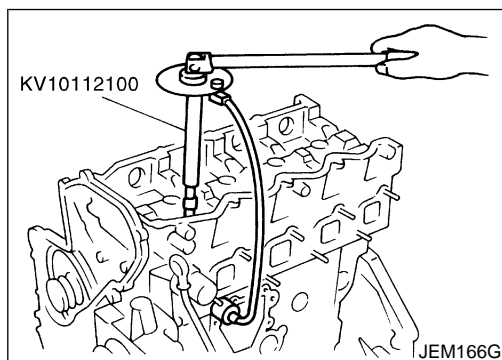**GLOW PLUG INSTALLATION**

NJEM0067S06

- To avoid damage, glow plugs should be removed only when required.
- Handle with care to avoid applying shock. (When dropped from approx. 100 mm (3.94 in) or higher, always replace with a new one.)
- Before installing, remove carbon depositing on mounting hole of glow plug with a reamer.

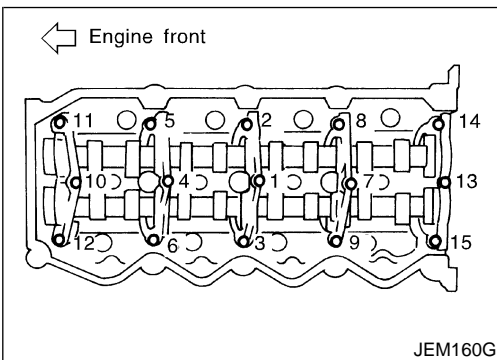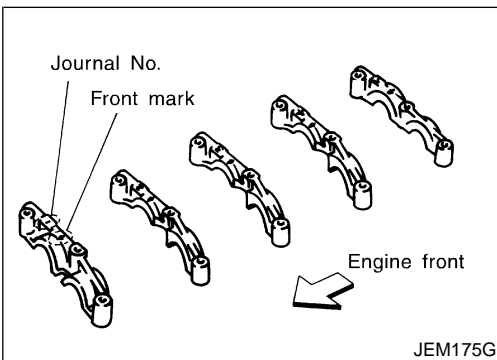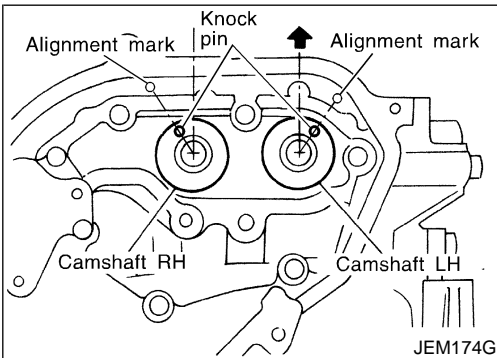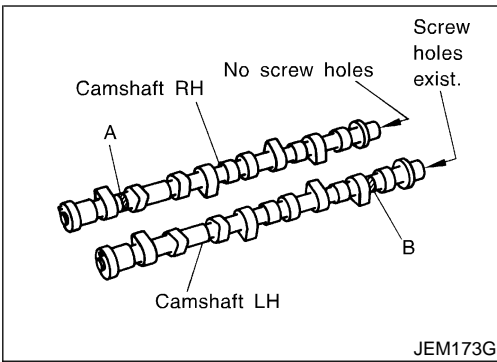

CAMSHAFT INSTALLATION

NJEM0067S07

1. Install valve lifters and adjusting shims.
 - Install in the correct locations (the same places as before removal).
2. Install camshafts.
 - Identify camshafts by the paint position and screw hole at the rear end.

Camshaft RH: Paint is at position A without screw hole.

Camshaft LH: Paint is at position B with screw hole.






- Install so that knock pins are positioned in the directions shown in the figure.

3. Install camshaft brackets.
 - Install correctly, identifying brackets by the journal No. and front mark on top surface.

4. Tighten bolts in the order shown in the figure according to the following procedure:
 - a. Tighten to 2.0 N·m (0.2 kg-m, 17 in-lb).
 - Make sure camshaft thrusting parts (on rear side) securely fit in their mating parts on the cylinder head.
 - b. Tighten to 6 N·m (0.6 kg-m, 52 in-lb).
 - c. Tighten to 12 to 13 N·m (1.2 to 1.4 kg-m, 9 to 10 ft-lb).
5. Install camshaft sprockets.
 - Camshaft sprockets are commonly used for RH and LH.
 - Align camshaft sprocket and dowel pin on camshaft, and install.
 - Holding the hexagonal part of camshaft with a wrench, tighten bolt securing camshaft sprocket.
6. Before installing spill tube after installing secondary timing chain, check and adjust valve clearance. Refer to EM-129, "Valve Clearance".
7. Hereafter, install in the reverse order of removal.

NJEM0068

NJEM0068S01

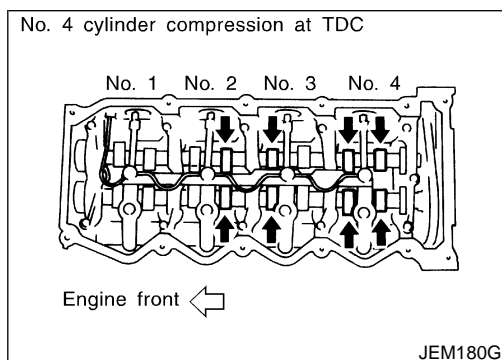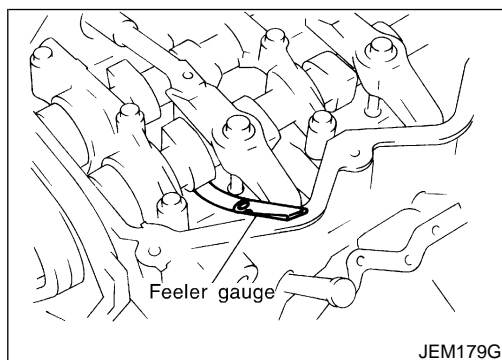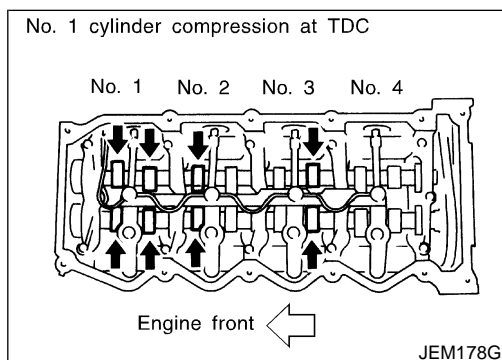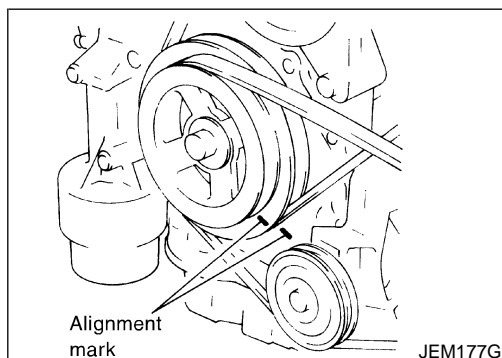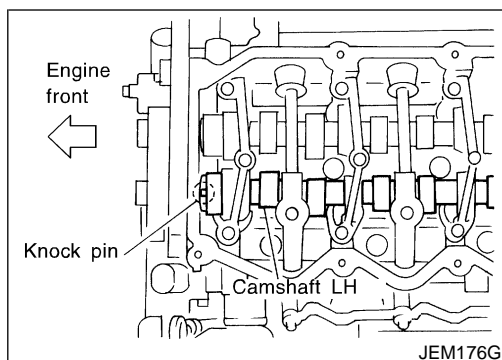

Valve Clearance

CHECKING

Check valve clearance while engine is cold and not running.

- Set the No. 1 piston to TDC on its compression stroke.
 - Turn crankshaft pulley clockwise so that the knock pin on camshaft LH faces straight above. (No position indicator, etc. is provided on the crankshaft pulley.)
- Put an alignment mark with paint, etc. on the crankshaft pulley and on the oil pump as an angle indicator.

- Check only those valves shown in the figure.

Crank position	Valve							
	No. 1		No. 2		No. 3		No. 4	
	INT	EXH	INT	EXH	INT	EXH	INT	EXH
No. 1 TDC (Compression stroke)	○	○	○			○		

- Using a feeler gauge, measure clearance between valve lifter and camshaft.
- Record any valve clearance measurements which are out of specification. They will be used later to determine the required replacement adjusting shim.

Valve clearance for checking (Cold):

Intake


0.24 - 0.32 mm (0.0094 - 0.0126 in)

Exhaust

0.26 - 0.34 mm (0.0102 - 0.0134 in)

- Rotate crankshaft clockwise by one turn to set the No. 4 piston to TDC on the compression stroke.
- Check only those valves shown in the figure.

Crank position	Valve							
	No. 1		No. 2		No. 3		No. 4	
	INT	EXH	INT	EXH	INT	EXH	INT	EXH
No. 4 TDC (Compression stroke)				○	○		○	○




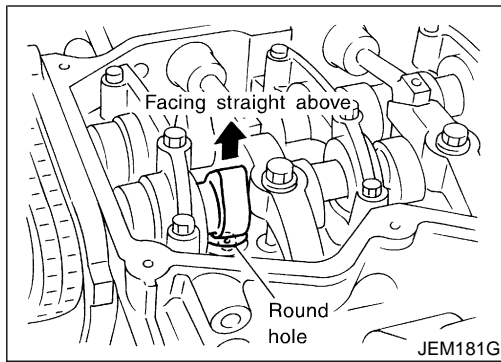
**ADJUSTING**

Adjust valve clearance while engine is cold.

1. Turn crankshaft, to position cam lobe on camshaft of valve that must be adjusted upward.
2. Place Tool (A) around camshaft as shown in figure.
Before placing Tool (A), rotate notch toward center of cylinder head (See figure.), to simplify shim removal later.

CAUTION:

Be careful not to damage cam surface with Tool (A).

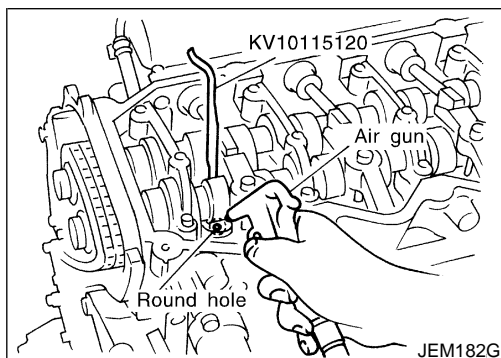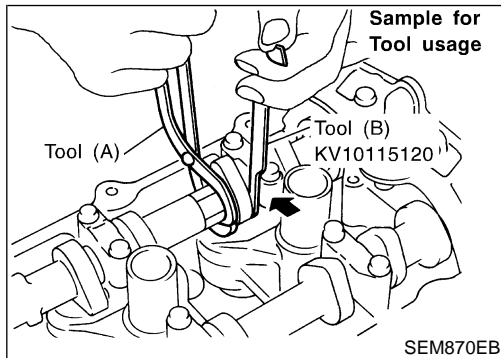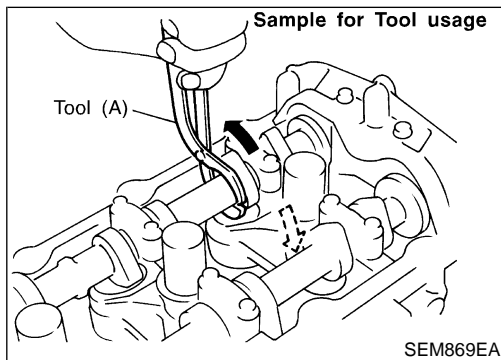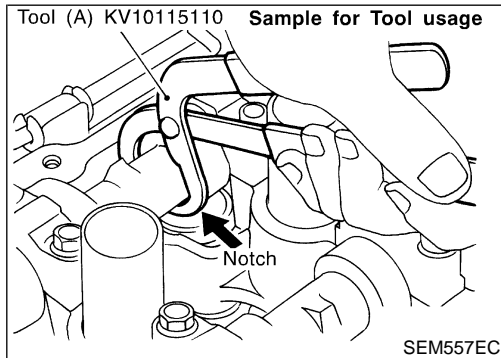






3. Rotate Tool (A) (See figure.) so that valve lifter is pushed down.

4. Place Tool (B) between camshaft and the edge of the valve lifter to retain valve lifter.

CAUTION:

- Tool (B) must be placed as close to camshaft bracket as possible.
 - Be careful not to damage cam surface with Tool (B).
5. Remove Tool (A).

6. Blow air into the hole to separate adjusting shim from valve lifter.
- To avoid engine oil spills, wipe off oil fully beforehand. Wear safety goggles, etc. during work if necessary.

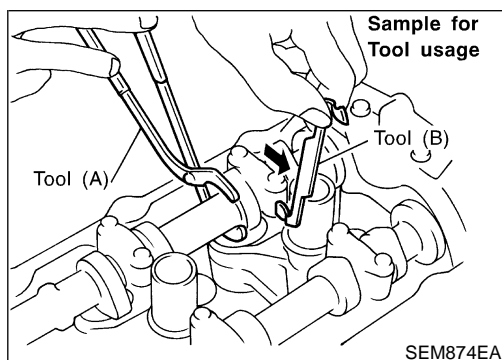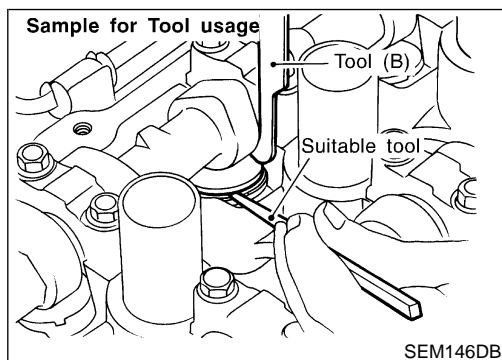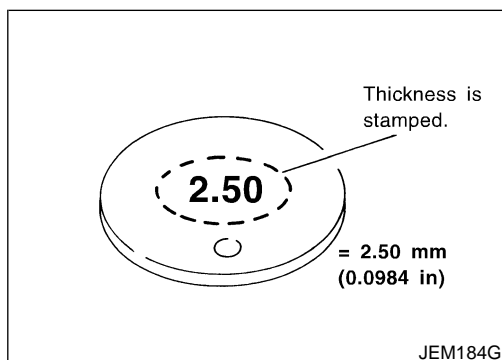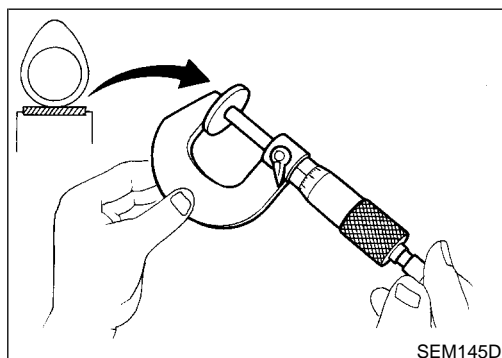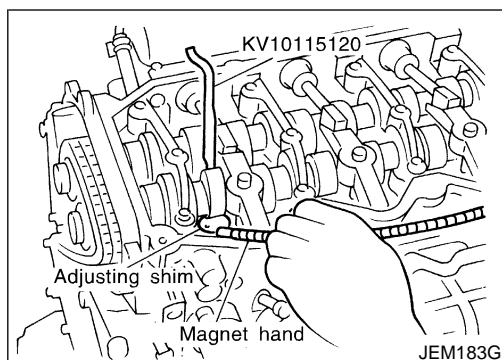

7. Remove adjusting shim using a small screwdriver and a magnetic finger.
 8. Determine replacement adjusting shim size following formula.
 - Using a micrometer determine thickness of removed shim.
 - Calculate thickness of new adjusting shim so valve clearance comes within specified values.
- R = Thickness of removed shim
N = Thickness of new shim
M = Measured valve clearance

Intake:

$$N = R + [M - 0.28 \text{ mm (0.0110 in)}]$$

Exhaust:

$$N = R + [M - 0.30 \text{ mm (0.0118 in)}]$$

Shims are available in 33 sizes from 2.10 mm (0.0827 in) to 2.74 mm (0.1079 in), in steps of 0.02 mm (0.0008 in).

- Select new shim with thickness as close as possible to calculated value.

9. Install new shim using a suitable tool.
 - **Install with the surface on which the thickness is stamped facing down.**

10. Place Tool (A) as mentioned in steps 2 and 3.
11. Remove Tool (B).
12. Remove Tool (A).
13. Recheck valve clearance.

Valve clearance:

Unit: mm (in)


	Cold	Hot* (reference data)
Intake	0.24 - 0.32 (0.009 - 0.013)	0.274 - 0.386 (0.011 - 0.015)
Exhaust	0.26 - 0.34 (0.010 - 0.013)	0.308 - 0.432 (0.012 - 0.017)

*: Approximately 80°C (176°F)

Removal and Installation

NJEM0069

SEC. 112

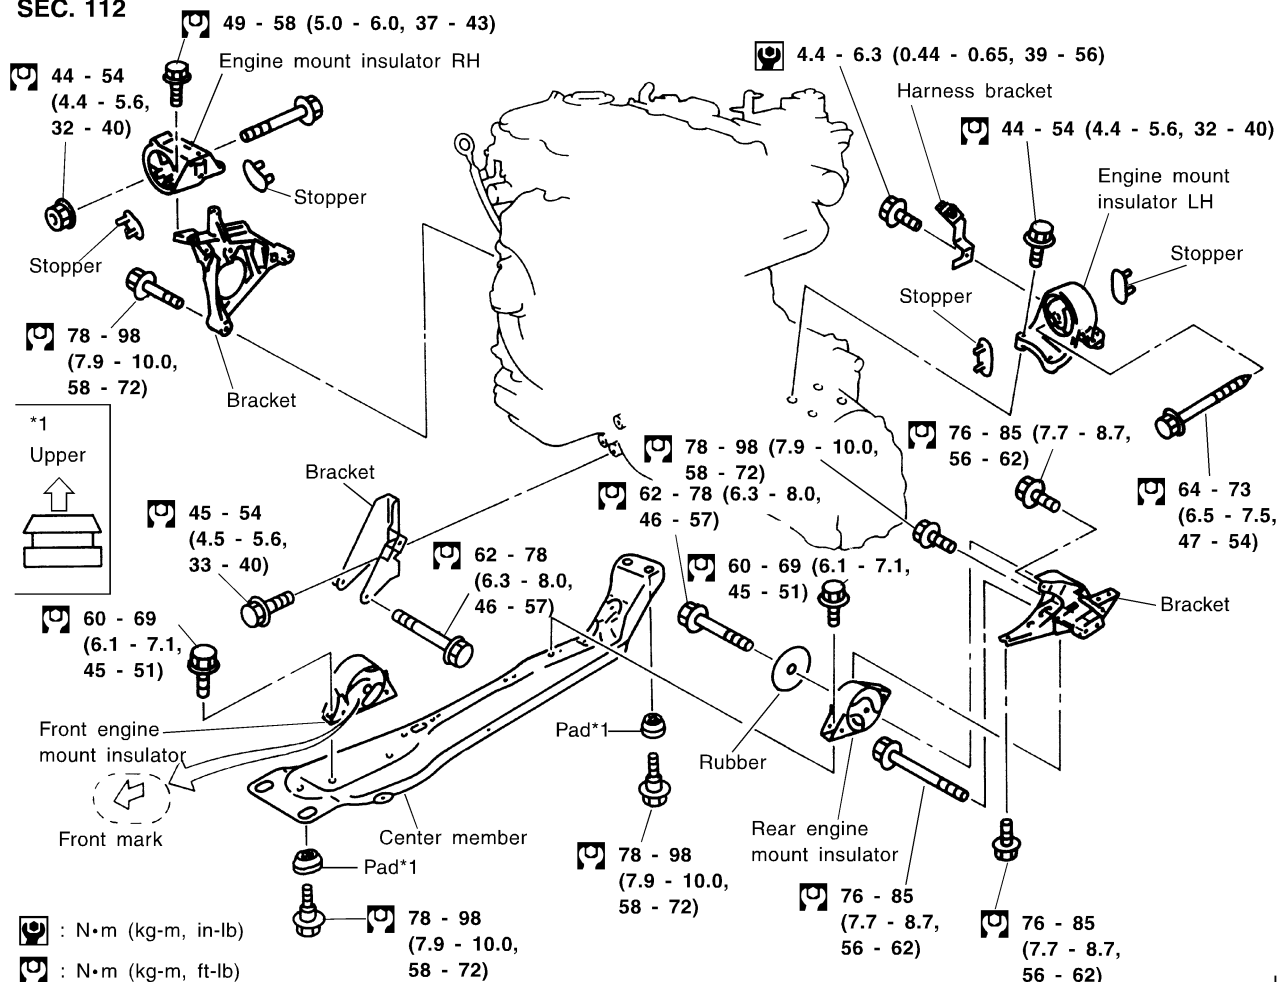

JEM185G

WARNING:

- Situate vehicle on a flat and solid surface.
- Place chocks at front and back of rear wheels.
- Do not remove engine until exhaust system has completely cooled off. Otherwise, you may burn yourself and/or fire may break out in fuel line.
- For safety during subsequent steps, the tension of wires should be slackened against the engine.
- Before removing front axle from transaxle, place safety stands under designated front supporting points. Refer to GI-46, "Garage Jack and Safety Stand".
- Be sure to hoist engine and transaxle in a safe manner.
- For engines not equipped with engine slingers, attach proper slingers and bolts described in PARTS CATALOG.

CAUTION:

- When lifting engine, be careful not to strike adjacent parts, especially the following: Accelerator wire casing, brake lines, and brake master cylinder.
- In hoisting the engine, always use engine slingers in a safe manner.
- In removing drive shaft, be careful not to damage grease seal of transaxle.
- Before separating engine and transaxle, remove the crankshaft position sensor (TDC) from the assembly.

- Always pay extra attention not to damage edge of crankshaft position sensor (TDC) or ring gear teeth.

REMOVAL

NJEM0069S01

1. Remove engine undercover, and hood for hoisting.
2. Drain coolant from both cylinder block and radiator. Refer to LC-44, "Changing Engine Coolant".
3. Remove the following parts:
 - Battery
 - RH and LH front wheels
 - RH and LH splash covers (combined with undercover)
 - Auxiliary belts
 - Alternator
 - Alternator brackets
 - Radiator and cooling fan
 - Engine cover
 - Air ducts and air cleaner case

LH side of engine room:


4. Disconnect all harnesses and grounds that are connected to components on vehicle.
5. Disconnect vacuum hose on vacuum pump side.
6. Disconnect fuel feed and fuel return hoses on engine side.
- Immediately put blind plugs into the openings to prevent fuel from flowing out.
7. Disconnect heater hose. Plug opening of hose to prevent coolant from flowing out.

RH side of engine room:


8. Remove air conditioner compressor from brackets and move it toward vehicle side. Secure compressor on vehicle side with rope.

Vehicle underside:



9. Remove exhaust front tube.
10. Disconnect two hoses from power steering pump and plug to stop fluid.
11. Remove M/T control rod and support rod.
12. Remove ABS wheel sensor, and temporarily hang brake caliper with rope on vehicle side.
13. Remove RH and LH drive shafts from steering knuckles.

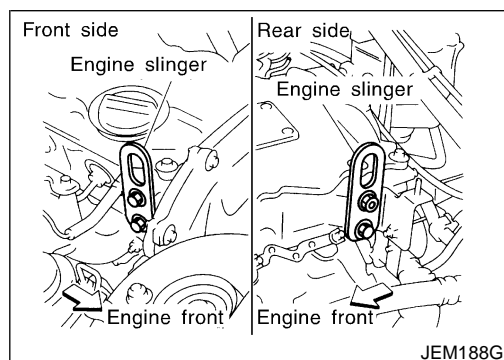

14. Install engine slingers to cylinder head.

 : 30 - 37 N·m (3.0 - 3.8 kg-m, 22 - 27 ft-lb)

- Use engine slingers and securing bolts of the specified service parts.
 - For the securing bolts and nuts for rear side, use those provided on the engine. At this time, remove the attaching washers.
15. Lift up vehicle to appropriate level where work can be performed efficiently. Using two transmission jacks, securely support engine oil pan and bottom surface of transaxle.

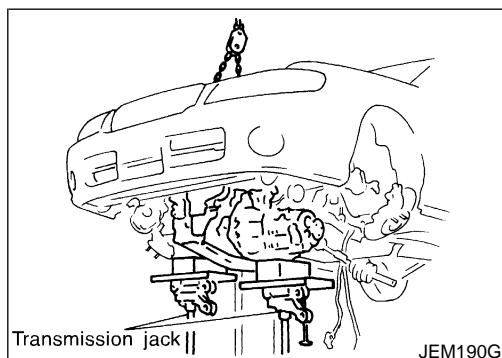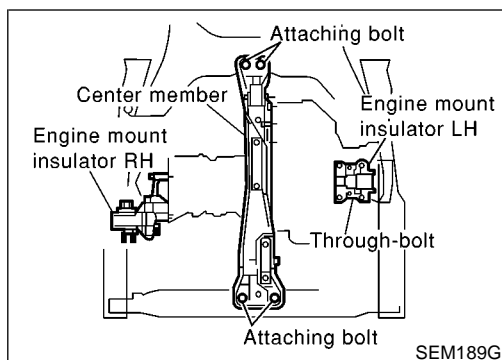

- **Make sure that support is stable with the use of safety blocks.**
16. Install hooks of lifting chain into engine slingers and tighten chain so that engine still remains on transmission jacks without being lifted up.
 17. Remove engine mount insulator RH.
 18. Remove through-bolt of engine mount insulator LH.
 19. Remove bolts securing center member at front and rear.
 20. Carefully lower transmission jacks in accordance with the lowering pace of the hoist, and remove engine and transaxle assembly from vehicle.
 - **While working, check that no parts of engine assembly interfere with adjacent parts on the vehicle.**
 - **While working, make sure that parts requiring disconnection are not left connected, and that no parts interfere with vehicle.**
 - **To prevent vehicle from falling down, perform operation carefully so that the center of gravity of the vehicle will not shift.**
 21. Remove center member.
 - **Before starting removal operation, first place the assembly on a level surface and securely support the bottom surface with wood blocks. Using a hoist, lift engine slingers, and make sure the assembly is stable.**
 22. Separate engine and transaxle.

INSTALLATION

NJEM0069S02


Install in the reverse order of removal, observing the following:

- While installing, be careful to keep mount insulators free of oil smear and damage.
- When parts require specified installation directions/positions, install by using the identifying marks indicating up or front.
- While keeping the mount insulators free of twists or distortions, start tightening from the through-bolt on the engine mount insulator LH. This mount is used as the reference position.

Components

NJEM0070

SEC. 110 • 120 • 144 • 186

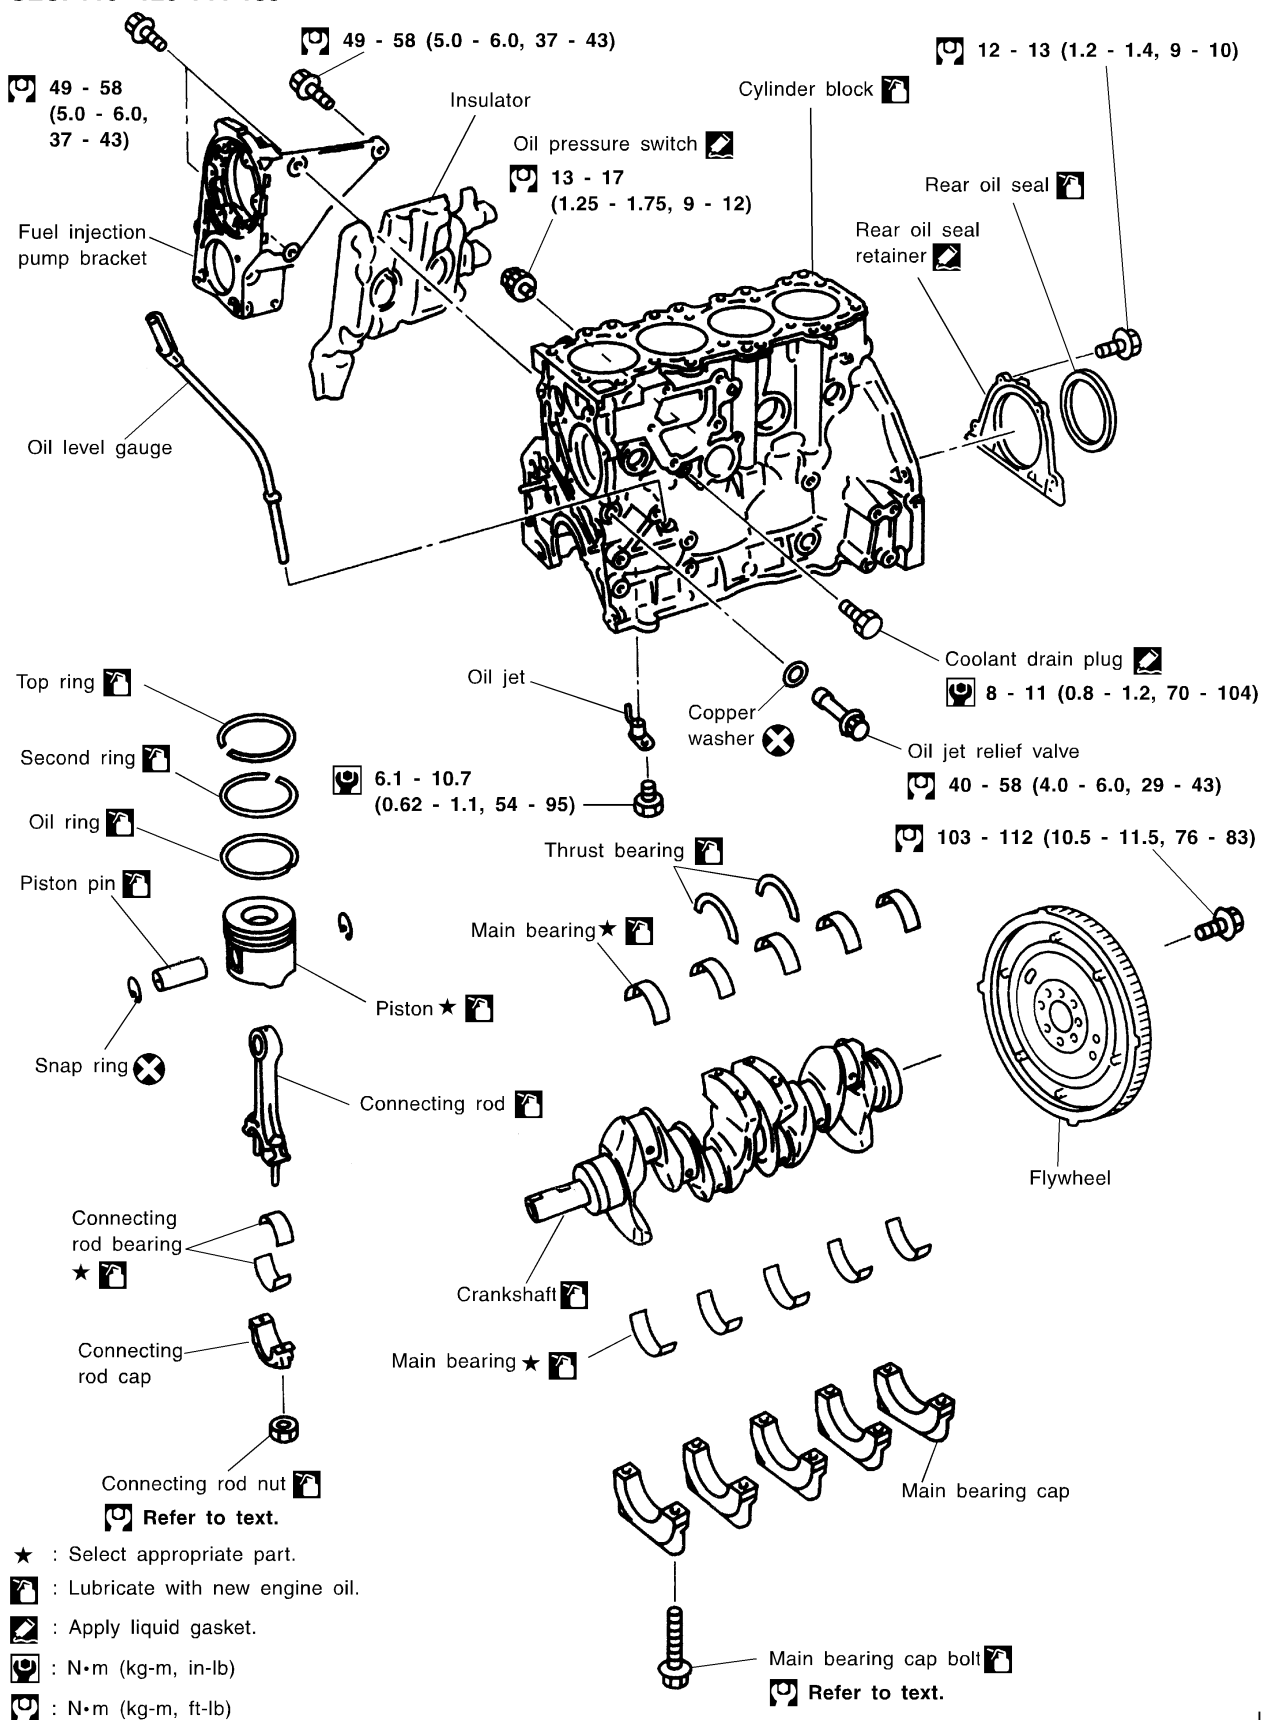

JEM191G

Removal and Installation

NJEM0071

CAUTION:

- When installing bearings, pistons, or other sliding parts, lubricate contacting surfaces with new engine oil.
- Place removed parts such as bearings and bearing caps in their proper order and direction.
- When installing connecting rod nuts, and main bearing cap bolts, apply new engine oil to threads and seating surfaces.
- Do not allow any magnetic materials to contact the signal plate of flywheel.



Disassembly

NJEM0072

PISTON AND CRANKSHAFT



NJEM0072S01

1. Remove engine. Refer to "ENGINE ASSEMBLY", "Removal and Installation", EM-133.
2. Place engine on a work stand.
 - a. Remove flywheel.
 - Hold ring gear with ring gear stopper (KV10105630, KV10105610). Then, loosen securing bolts with torque socket (size: Q8 E20, commercial service tool) and remove them. As an alternative method, hold the crankshaft pulley with a pulley holder (SST) to remove the flywheel.
 - b. Install engine sub-attachment (SST) to rear surface of cylinder block.
 - To install, align the hole on the sub-attachment with the knock pin on the cylinder block.
 - The engine sub-attachment has five bolts.
 - c. Install engine attachment (SST).
 - The four sets of bolts and nuts are multi-purpose products.

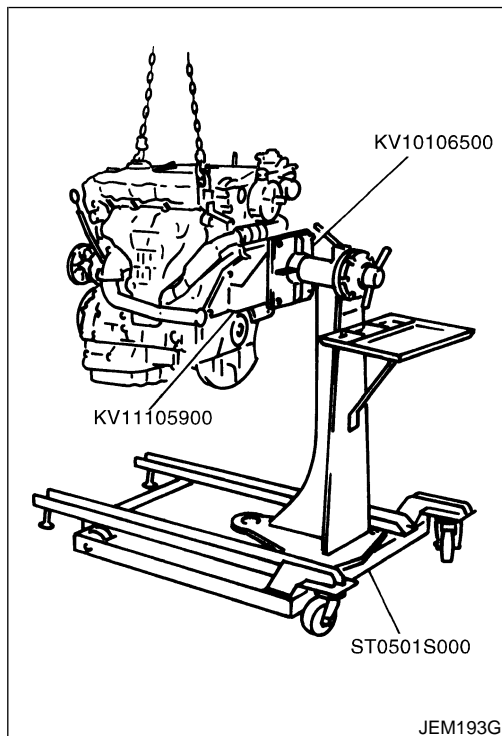
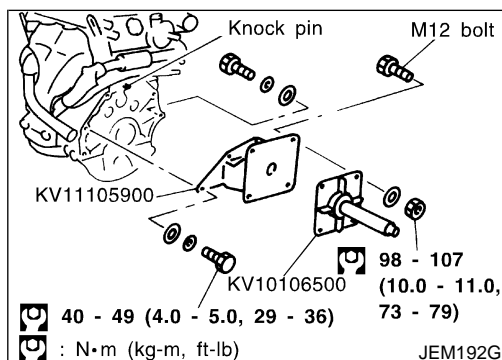


- d. Hoist up engine and install it on the engine stand (SST).
 - Another method is to set engine sub-attachment and engine attachment on engine stand beforehand, and then, install engine.
3. Drain engine oil and coolant from engine.
4. Remove the following and the associated parts:
 - Exhaust manifold
 - Injection tube
 - Intake manifold
 - Oil pan (upper and lower)
 - Secondary timing chain
 - Fuel injection pump
 - Primary timing chain
 - Rocker cover
 - High pressure injection nozzle assembly
 - Camshaft
 - Cylinder head
 - Thermostat, water pipes
 - Oil cooler
 - Auxiliary component brackets
5. Remove fuel injection pump bracket.

Disassembly (Cont'd)

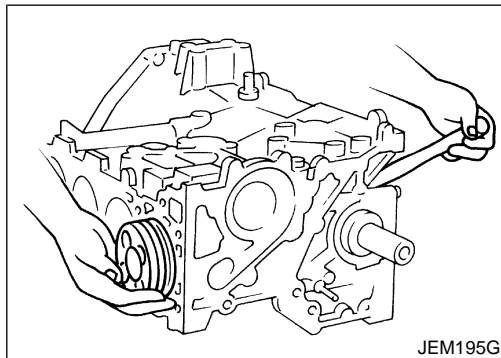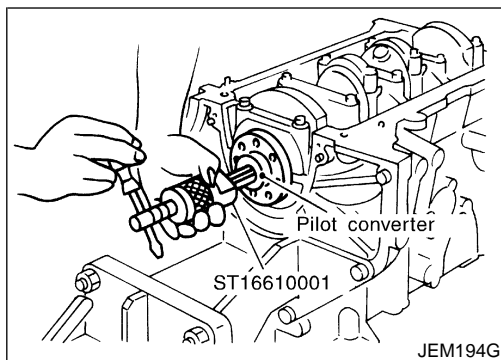


6. If the replacement of pilot bushing is necessary, remove it with pilot bushing puller (SST).
7. Remove rear oil seal retainer.
 - Insert a flat-bladed screwdriver between main bearing cap and rear oil seal retainer to remove retainer.
8. Remove rear oil seal from rear oil seal retainer.
 - Punch out with a flat-bladed screwdriver.
 - **Be careful not to damage rear oil seal retainer.**
9. Remove piston and connecting rod assembly.
 - a. Set crankshaft pin of the removal location at a position close to BDC.
 - b. Remove connecting rod cap.
 - c. Push piston and connecting rod assembly toward cylinder head using a hammer handle.
 - Before removing piston and connecting rod assembly, check connecting rod side clearance. Refer to EM-140, "CONNECTING ROD SIDE CLEARANCE".
10. Remove connecting rod bearings from connecting rod and connecting rod cap.
 - Store the removed parts in sets by the cylinder No. to avoid mixing them up.

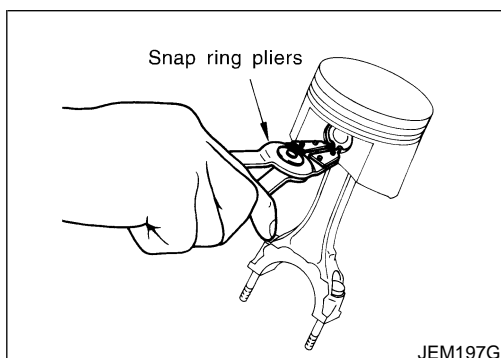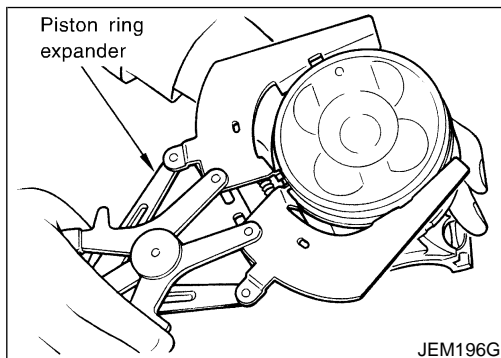


11. Remove piston rings from pistons.
 - Use piston ring expander (Commercial Service Tool).
 - **Avoid scratching pistons during removal.**
 - **Be careful not to damage piston rings by expanding excessively.**

CAUTION:


 - When piston rings are not replaced, make sure that piston rings are mounted in their original positions.
 - When replacing piston rings, if there is no punchmark, install with either side up.
12. Remove piston from connecting rod.
 - a. Remove snap rings using snap ring pliers.

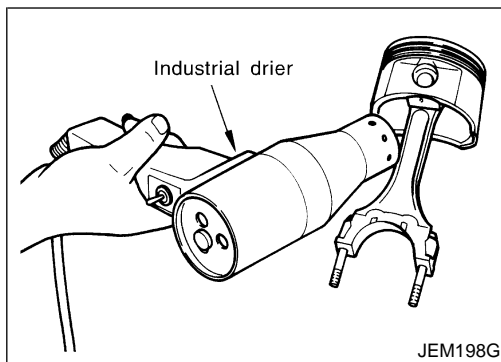

- b. With an industrial drier, heat pistons to 60 to 70°C (140 to 158°F).

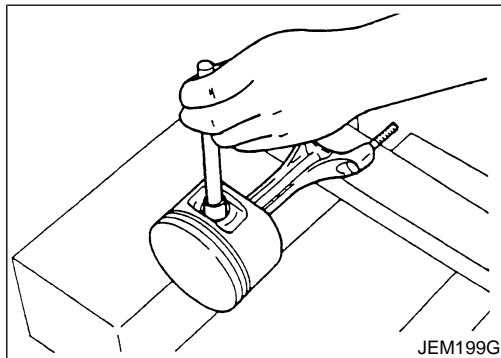


- c. Push out piston pin with a rod approx. 26 mm (1.02 in) in diameter.

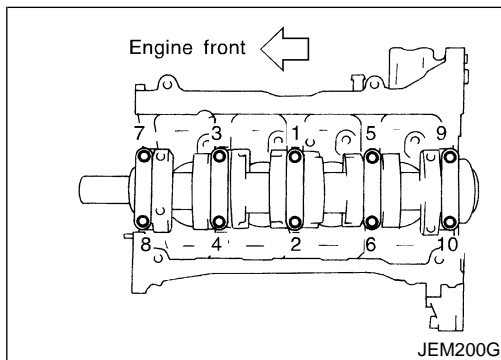

13. Remove main bearing cap bolts.

- With a torque socket (size: E-14), loosen main bearing cap bolts in several stages in the reverse order of that shown in the figure and remove them.
- Before loosening main bearing cap bolts, measure crankshaft end play. Refer to EM-140, "CRANKSHAFT END PLAY".

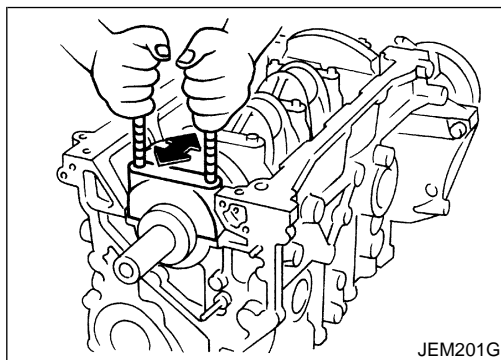

14. Remove main bearing caps.

- Using main bearing cap bolts, remove by rocking bearing cap back and forth.

15. Remove crankshaft.

16. Remove main bearings and thrust bearings from cylinder block and main bearing caps.

- **Check the correct installation locations of removed parts. Store them so they do not get mixed up.**

17. Remove oil jet.

18. Remove oil jet check valve.

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS


BT

HA

SC

EL

IDX

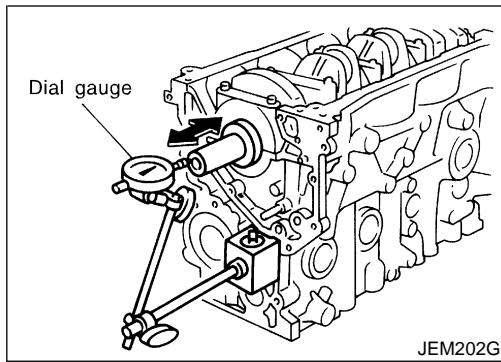

Inspection

CRANKSHAFT END PLAY

NJEM0073


NJEM0073S13

- Measure the moving distance of the crankshaft with the dial gauge when the crankshaft is moved fully forward or backward.

Standard: 0.10 - 0.25 mm (0.0039 - 0.0098 in)

Limit: 0.30 mm (0.0118 in)

- If the value exceeds the limit, replace thrust bearings with new ones and measure again. If the measurement exceeds the limit again, replace crankshaft with a new one.

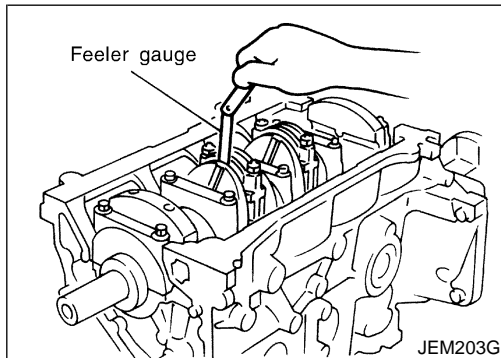

CONNECTING ROD SIDE CLEARANCE


NJEM0073S14

- Measure the side clearance between connecting rod and crank arm with feeler gauge.

Standard: 0.200 - 0.350 mm (0.0079 - 0.0138 in)

Limit: 0.4 mm (0.0157 in)

- If the value exceeds the limit, replace connecting rod and measure again. If the measurement exceeds the limit again, replace the crankshaft.

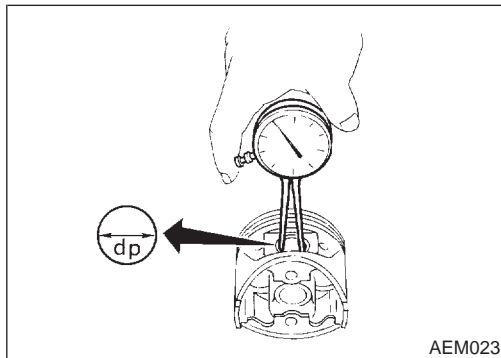


PISTON AND PISTON PIN CLEARANCE

NJEM0073S01

- Measure inner diameter of piston pin hole "dp".

Standard diameter "dp":

27.997 - 28.005 mm (1.1022 - 1.1026 in)

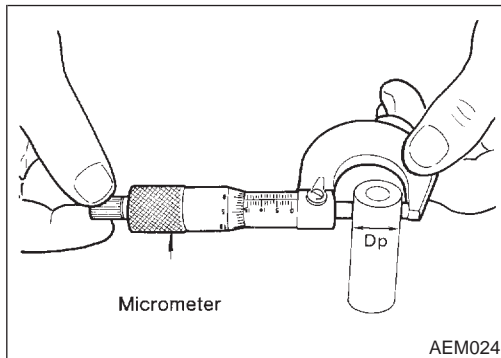

- Measure outer diameter of piston pin "Dp".


Standard diameter "Dp":

27.994 - 28.000 mm (1.1021 - 1.1024 in)

- Calculate interference fit of piston pin to piston.

Dp - dp = 0.002 - 0.06 mm (0.0001 - 0.0024 in)

If it exceeds the above value, replace piston assembly with pin.

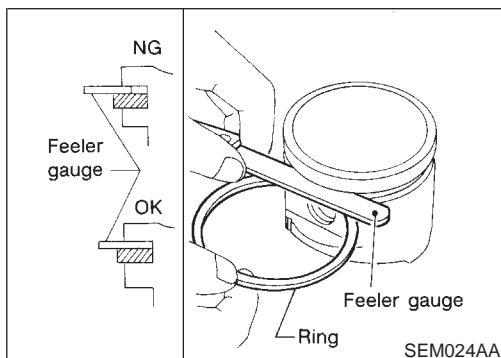

PISTON RING SIDE CLEARANCE

NJEM0073S02

Side clearance:

Top ring

0.050 - 0.090 mm (0.0020 - 0.0035 in)

2nd ring

0.050 - 0.090 mm (0.0020 - 0.0035 in)


Oil ring

0.030 - 0.070 mm (0.0012 - 0.0028 in)


Max. limit of side clearance:

Top ring 0.1 mm (0.004 in)

2nd ring 0.1 mm (0.004 in)

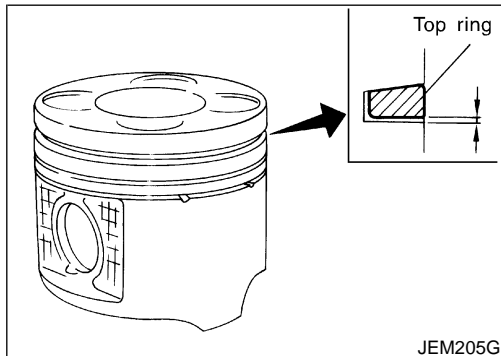

- To measure top ring side clearance, align the outer circumferences of the ring and piston while pressing ring upward against the upper surface of the ring groove. Under this condition, measure the clearance between ring and bottom surface of the ring groove.
- If out of specification, replace piston ring. If clearance exceeds maximum limit with new ring, replace piston.

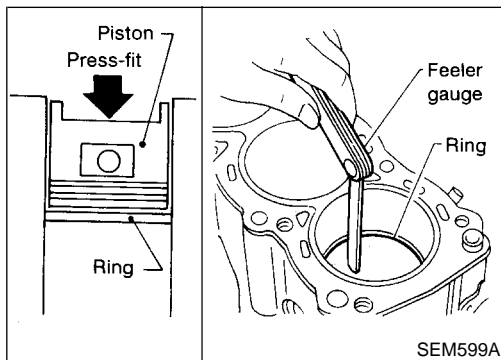

PISTON RING END GAP

NJEM0073S03

End gap:

Top ring 0.21 - 0.31 mm (0.0083 - 0.0122 in)

2nd ring 0.37 - 0.52 mm (0.0146 - 0.0205 in)

Oil ring 0.30 - 0.55 mm (0.0118 - 0.0217 in)

Max. limit of ring gap:

Top ring 1.0 mm (0.039 in)

2nd ring 1.0 mm (0.039 in)


Oil ring 1.0 mm (0.039 in)

If out of specification, replace piston ring. If gap still exceeds the limit even with a new ring, do the following. Rebore cylinder and use oversized piston and piston rings.

Refer to SDS (EM-163).

- When replacing the piston, check the cylinder block surface for scratches or seizure. If scratches or seizure is found, hone or replace the cylinder block.

Inspection (Cont'd)

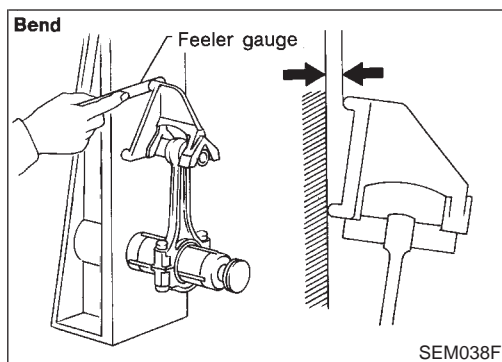**CONNECTING ROD BEND AND TORSION**

NJEM0073S04



Bend:

Limit 0.12 mm (0.0047 in)
per 100 mm (3.94 in) length

Torsion:

Limit 0.12 mm (0.0047 in)
per 100 mm (3.94 in) length

If it exceeds the limit, replace connecting rod assembly.

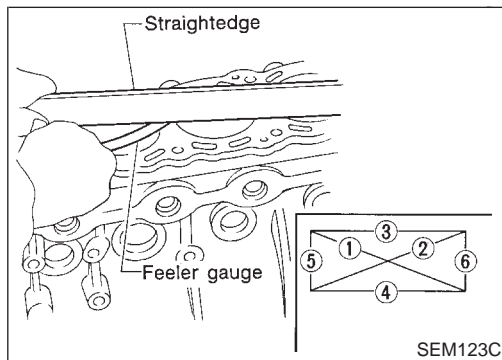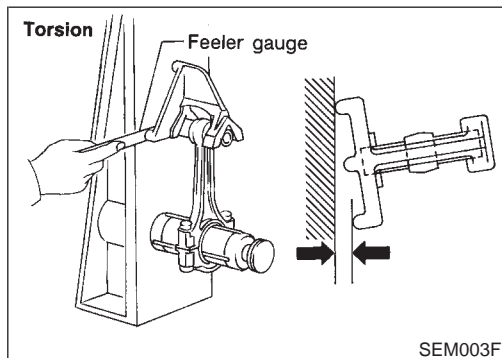**CYLINDER BLOCK DISTORTION AND WEAR**

NJEM0073S05

- Clean upper surface of cylinder block.
Use a reliable straightedge and feeler gauge to check the flatness of cylinder block surface.
Check along six positions shown in the figure.

Distortion limit: 0.10 mm (0.0039 in)

- If out of specification, resurface it. The limit for cylinder block resurfacing is determined by cylinder head resurfacing in engine.

Resurfacing limit:

Amount of cylinder head resurfacing is "A".

Amount of cylinder block resurfacing is "B".

The maximum limit is as follows:




$A + B = 0.2 \text{ mm (0.008 in)}$

Nominal cylinder block height from crankshaft center:

252.95 - 253.05 mm (9.9586 - 9.9626 in)

Refer to SDS (EM-163).

- If necessary, replace cylinder block.

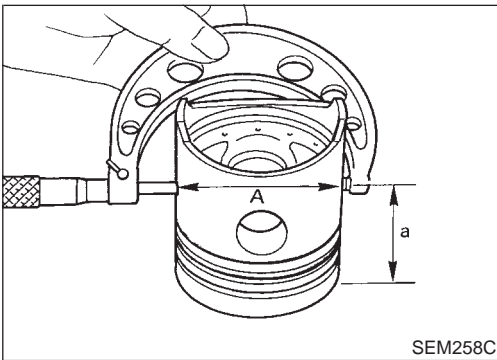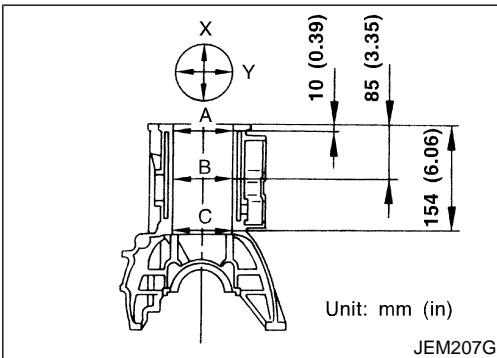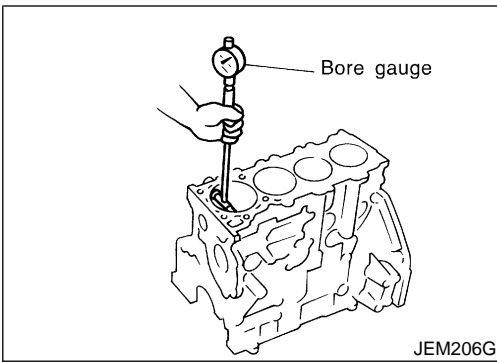

PISTON-TO-BORE CLEARANCE

NJEM0073S06

- Using a bore gauge, measure cylinder bore in X and Y directions at A, B and C for wear, out-of-round and taper.

Cylinder bore inner diameter:

Standard

86.000 - 86.030 mm (3.3858 - 3.3870 in)

Wear limit

0.20 mm (0.0079 in)

If it exceeds the limit, rebore all cylinders. Replace cylinder block if necessary.

Out-of-round (X – Y):

Limit 0.015 mm (0.0006 in)

Taper (A – B – C):

Limit 0.010 mm (0.0004 in)

- Check for scratches and seizure. If seizure is found, hone it.

- Measure piston skirt diameter.

Piston diameter "A":

Standard

85.940 - 85.970 mm (3.3835 - 3.3846 in)

Measuring point "a" (Distance from the top):

58.0 mm (2.28 in)


- Check that piston-to-bore clearance is within specification.
 - Calculate the clearance by using outer diameter at piston skirt and inner diameter of cylinder (direction of X, point B):

Piston-to-bore clearance = Cylinder bore – Piston diameter "A"

Standard [at room temperature 20°C (68°F)]:

0.050 - 0.070 mm (0.0020 - 0.0028 in)

- If the value is out of the specified range, replace piston and piston pin assembly.

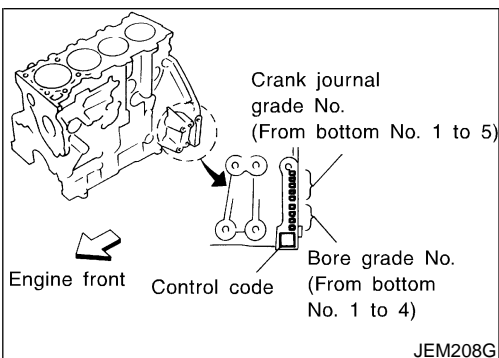


- If cylinder block or pistons are replaced with new ones, select piston as follows:

When using a new cylinder block:

- Identify the cylinder bore grade (No. 1, 2, or 3) on LH surface at the rear of cylinder block and select a piston of the same grade.
- The part No. of piston is specified together with the piston pin as an assembly.

Inspection (Cont'd)

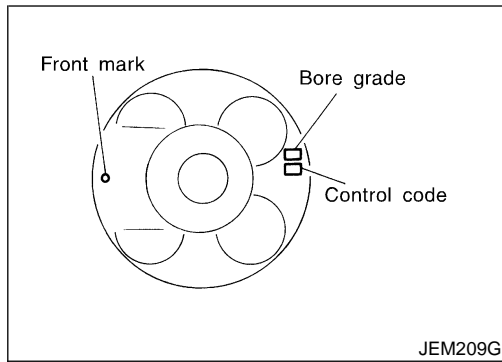**When re-using a removed cylinder block:**

- Measure the inner diameter of the cylinder block bore.
- Determine the bore grade by comparing the measurement with the values under "Cylinder bore ID" of the table below. Choose a piston of the same grade.

Selective fitting for piston


Unit: mm (in)

Grade (punched)	1	2	3
Cylinder bore ID	86.000 - 86.010 (3.3858 - 3.3862)	86.010 - 86.020 (3.3862 - 3.3866)	86.020 - 86.030 (3.3866 - 3.3870)
Piston OD	85.940 - 85.950 (3.3835 - 3.3839)	85.950 - 85.960 (3.3839 - 3.3842)	85.960 - 85.970 (3.3842 - 3.3846)

- Determine piston oversize according to amount of cylinder wear.
- For oversize pistons, 0.25 and 0.5OS [0.25 mm (0.0098 in), 0.5 mm (0.0197 in) oversize] are available as service parts. Refer to SDS, EM-163. When using an oversize piston, hone cylinder so that the clearance between piston and cylinder becomes the specified value. Be sure to use appropriate oversize piston ring for the oversize piston.
- Cylinder bore size is determined by adding piston-to-bore clearance to piston diameter "A".

Rebored size calculation: $D = A + B - C$ **where,****D: Bored diameter****A: Piston diameter as measured****B: Piston-to-bore clearance****C: Honing allowance 0.02 mm (0.0008 in)**

- Cut cylinder bores.
- When any cylinder needs boring, all other cylinders must also be bored.
- Do not cut too much out of cylinder bore at a time. Cut only 0.05 mm (0.0020 in) or so in diameter at a time.
- Hone cylinders to obtain specified piston-to-bore clearance.
- Measure finished cylinder bore for out-of-round and taper.
- Measurement should be done after cylinder bore cools down.

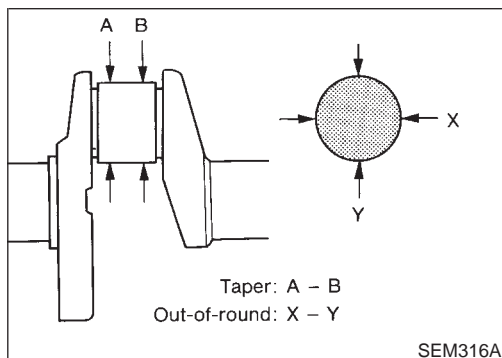
**CRANKSHAFT**

NJEM0073S07

- Check crankshaft main and pin journals for score, wear or cracks.
- With a micrometer, measure journals for taper and out-of-round.

Out-of-round (X - Y):**Standard****0.003 mm (0.0001 in)****Taper (A - B):****Standard**


0.003 mm (0.0001 in)

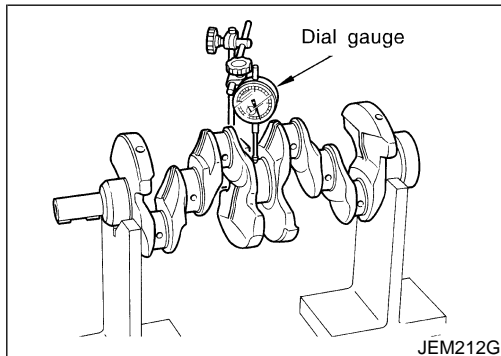

3. Measure crankshaft runout at No. 3 (center) journal.

Runout (Total indicator reading):

Limit 0.05 mm (0.0020 in)

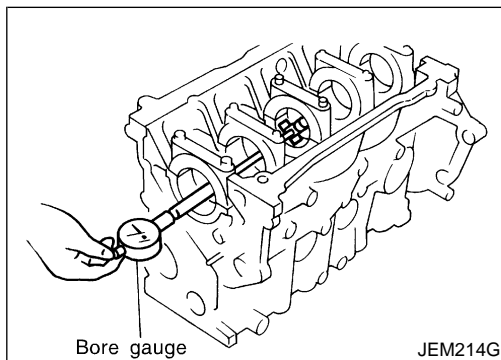

MAIN BEARING HOUSING INNER DIAMETER


NJEM0073S15

- Without installing main bearings, install main bearing caps, and tighten bolts to the specified torque.
- Measure the inner diameter of main bearing housing with a bore gauge.

Standard:

66.654 - 66.681 mm (2.6242 - 2.6252 in) dia.

- If the measurement is out of the specified range, replace cylinder block and main bearing caps.

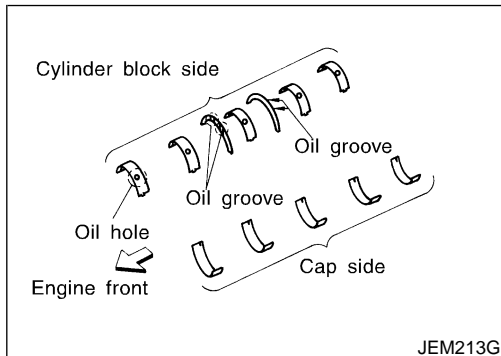

BEARING CLEARANCE

NJEM0073S08

- Use either of the following two methods, however, method "A" gives more reliable results and is preferable.

Method A (Using bore gauge & micrometer)

Main bearing

NJEM0073S0801



- Install main bearings to the cylinder block and bearing cap, and tighten the bolts to the specified torque. Then, measure the inner diameter of the main bearings.

Oil clearance = Bearing ID – Crankshaft journal OD

Standard: 0.039 - 0.066 mm (0.0015 - 0.0026 in)

- If the value is out of the specified range, select main bearings to obtain the specified oil clearance, based on the measurements of the main bearing housing inner diameter and crankshaft journal outer diameter.

Inspection (Cont'd)

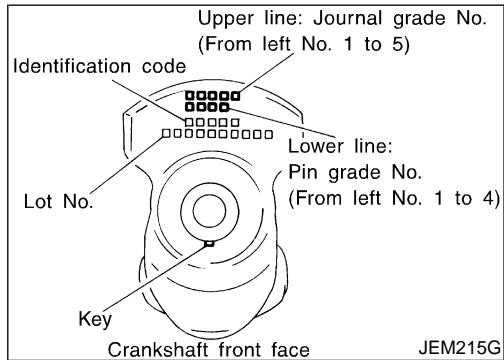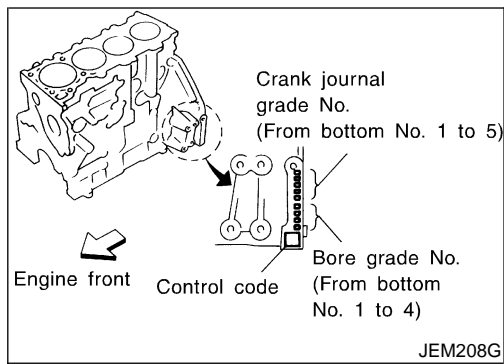**When using a new cylinder block and crankshaft:**

- 1) Identify the bearing housing grade (No. 0, 1, or 2) on LH surface at the rear of the cylinder block, and locate the applicable grade on the "Grade" row in the table below.
- 2) Identify the journal grade (No. 0, 1, or 2) on the front surface of the crankshaft, and locate the applicable grade under the "Grade" column on the table.
- 3) The main bearing to be used (STD 0 to STD 4) can be located in the cell where the row and column cross.

When re-using removed cylinder block and crankshaft:

- 1) Measure the inner diameter of cylinder block main bearing housing.
- 2) Locate the applicable cell where the measurement falls, on "Cylinder block main bearing housing ID" row on the table.
- 3) Measure the outer diameter of the crankshaft journal.
- 4) Locate the applicable cell where the measurement falls, under "Crankshaft journal OD" column on the table.
- 5) The main bearing to be used (STD 0 to STD 4) can be located in the cell where the row and column cross.


Selective fitting for main bearing

Unit: mm (in)

Cylinder block main bearing housing ID			66.654 - 66.663 (2.6242 - 2.6245)	66.663 - 66.672 (2.6245 - 2.6249)	66.672 - 66.681 (2.6249 - 2.6252)
Crankshaft journal OD	Grade (punched)		0	1	2
62.967 - 62.975 (2.4790 - 2.4793)	0	● Bearing grade No.	STD 0	STD 1	STD 2
		● Bearing thickness	1.816 - 1.820 (0.0735 - 0.0717)	1.820 - 1.824 (0.0717 - 0.0718)	1.824 - 1.828 (0.0718 - 0.0720)
		● Oil clearance	0.039 - 0.066 (0.0015 - 0.0026)	0.039 - 0.066 (0.0015 - 0.0026)	0.039 - 0.066 (0.0015 - 0.0026)
		● Identification color	Black	Brown	Green
62.959 - 62.967 (2.4787 - 2.6790)	1	● Bearing grade No.	STD 1	STD 2	STD 3
		● Bearing thickness	1.820 - 1.824 (0.0717 - 0.0718)	1.824 - 1.828 (0.0718 - 0.0720)	1.828 - 1.832 (0.0720 - 0.0721)
		● Oil clearance	0.039 - 0.066 (0.0015 - 0.0026)	0.039 - 0.066 (0.0015 - 0.0026)	0.039 - 0.066 (0.0015 - 0.0026)
		● Identification color	Brown	Green	Yellow
62.951 - 62.959 (2.4784 - 2.4787)	2	● Bearing grade No.	STD 2	STD 3	STD 4
		● Bearing thickness	1.824 - 1.828 (0.0718 - 0.0720)	0.039 - 0.066 (0.0015 - 0.0026)	1.832 - 1.836 (0.0721 - 0.0723)
		● Oil clearance	0.039 - 0.066 (0.0015 - 0.0026)	0.039 - 0.066 (0.0015 - 0.0026)	0.039 - 0.066 (0.0015 - 0.0026)
		● Identification color	Green	Yellow	Blue

3. When the specified oil clearance is not obtained with standard size main bearings, use undersized bearings.

- When an undersized bearing is used, measure the inner diameter of the bearing while the bearing is installed. Grind crankshaft journal so that the specified oil clearance is obtained.

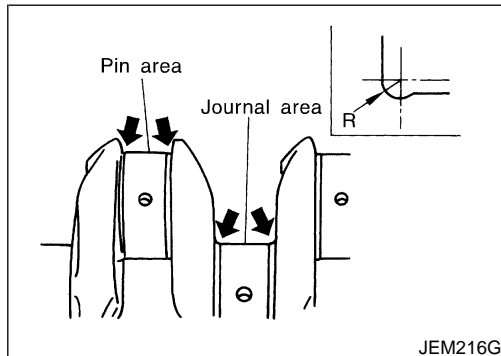


Undersize bearing

Unit: mm (in)

Size	Thickness
US 0.25 (0.0098)	1.949 - 1.953 (0.0767 - 0.0769)

CAUTION:

When grinding the crankshaft journal to use an undersize bearing, avoid damaging the fillet R.

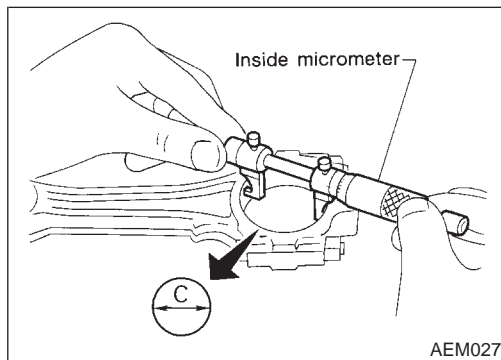


Connecting Rod Bearing (Big end)

NJEM0073S0802


- Install connecting rod bearing to connecting rod and cap.
- Install connecting rod cap to connecting rod.
- Measure inner diameter "C" of connecting rod.

Inner diameter:

Standard 55.000 - 55.013 mm (2.1654 - 2.1659 in)

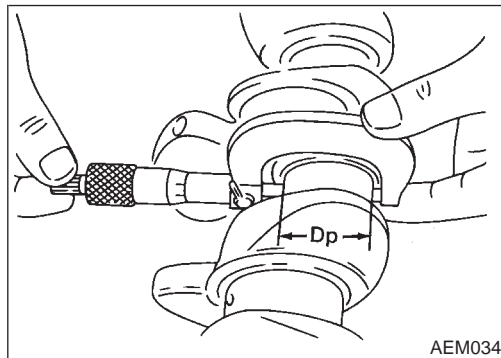

- Measure outer diameter "Dp" of each crankshaft pin journal.
- Calculate connecting rod bearing clearance.
- Connecting rod bearing clearance = $C - Dp$
- Standard: **0.031 - 0.061 mm (0.0012 - 0.0024 in)**
- If it exceeds the standard, replace bearing.

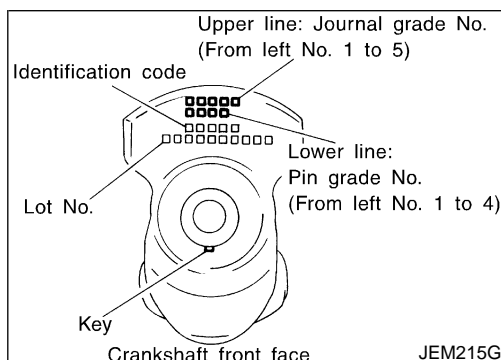

When using a new crankshaft and connecting rods:

- Identify the pin diameter grade (No. 0, 1, or 2) on front surface of crankshaft and select the connecting rod bearings of the same grade.
- There is no grading for the inner diameter of the big end of the connecting rod.

When re-using the removed crankshaft and connecting rods:

- Measure the inner diameter of the big end of the connecting rod and make sure it is within the specified range.
- Measure the outer diameter of the crankshaft pin.


- Determine the crankshaft pin grade by comparing the measurement with the values under the column "Crankshaft pin OD" of the table below. Choose the bearings of the same grade.

Selective fitting for connecting rod bearing

Unit: mm (in)

Connecting rod big end ID		55.000 - 55.013 (2.1654 - 2.1659)	
Crankshaft pin OD	Grade (punched)	0 (no punching)	
51.968 - 51.974 (2.0460 - 2.0462)	0	● Bearing grade No.	STD 0
		● Bearing thickness	1.492 - 1.496 (0.0587 - 0.0589)
		● Oil clearance	0.031 - 0.061 (0.0012 - 0.0024)
		● Identification color	Black
51.961 - 51.968 (2.0457 - 2.0460)	1	● Bearing grade No.	STD 1
		● Bearing thickness	1.496 - 1.500 (0.0589 - 0.0591)
		● Oil clearance	0.031 - 0.061 (0.0012 - 0.0024)
		● Identification color	Brown
51.954 - 51.961 (2.0454 - 2.0457)	2	● Bearing grade No.	STD 2
		● Bearing thickness	1.500 - 1.504 (0.0591 - 0.0592)
		● Oil clearance	0.031 - 0.061 (0.0012 - 0.0024)
		● Identification color	Green

- If clearance cannot be adjusted within the standard of any bearing, grind crankshaft journal and use undersized bearing.
- When an undersized bearing is used, measure the inner diameter of the bearing while the bearing is installed. Grind the pins so that the specified oil clearance is obtained.

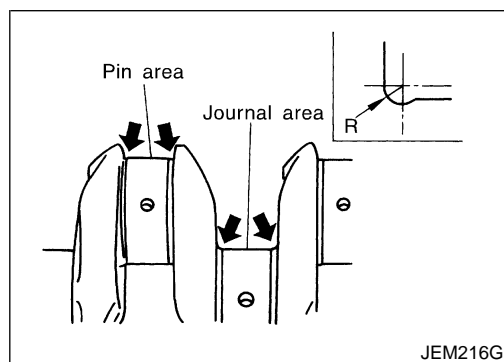**Undersize bearing**

Unit: mm (in)

Size	Thickness
US 0.08 (0.0031)	1.536 - 1.540 (0.0605 - 0.0606)
US 0.12 (0.0047)	1.556 - 1.560 (0.0613 - 0.0614)
US 0.25 (0.0098)	1.621 - 1.625 (0.0638 - 0.0640)

CAUTION:

When grinding the crankshaft journal to use an undersize bearing, avoid damaging the fillet R.

Standard dimension R:

1.5 - 1.7 mm (0.0591 - 0.0669 in)

GI

MA

EM

LC

EC

FE

CL

MT

AT

AX

SU

BR

ST

RS


BT

HA

SC

EL


IDX

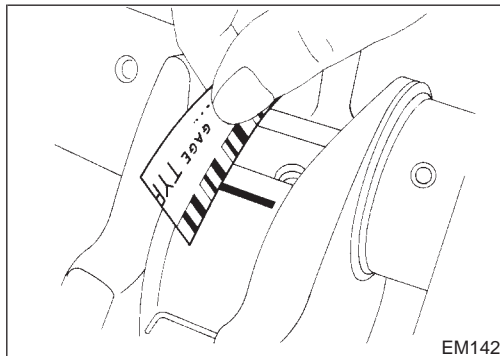

Method B (Using plastigage)

CAUTION:

- Do not turn crankshaft or connecting rod while plastigage is being inserted.
- When bearing clearance exceeds the specified limit, ensure that the proper bearing has been installed. If incorrect bearing clearance exists, use a thicker or undersized main bearing to ensure specified clearance.

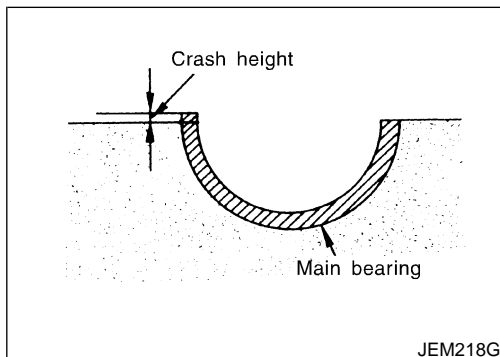


MAIN BEARING CRASH HEIGHT

NJEM0073S16

- When the bearing cap is removed after being tightened to the specified torque with main bearings installed, the tip end of bearing must protrude.

Standard: There must be crush height.


- If the standard is not met, replace main bearings.

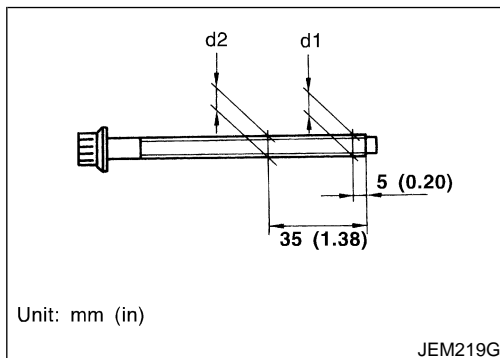

MAIN BEARING CAP BOLT DEFORMATION

NJEM0073S17

- Measure the outer diameter of threaded area, d1 and d2, at the points specified in the figure.
- When the necked point is identified at a point other than where specified, measure at the point as d2.
- Calculate the difference between d1 and d2.

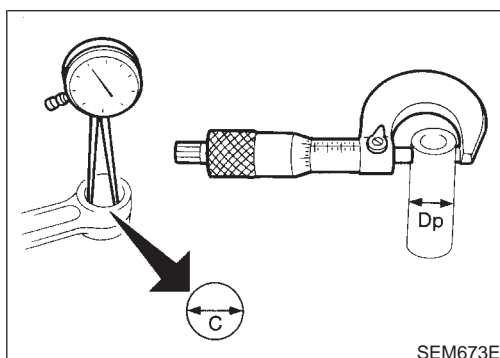Limit: 0.13 mm (0.0051 in)

CONNECTING ROD BUSHING CLEARANCE (SMALL END)

NJEM0073S09

- Measure inner diameter "C" of bushing.

Inner diameter "C":**Standard 28.026 - 28.038 mm (1.1034 - 1.1039 in)**

- Measure outer diameter "Dp" of piston pin.

Outer diameter "Dp":**Standard 27.994 - 28.000 mm (1.1021 - 1.1024 in)**


- Calculate connecting rod bushing clearance.

Connecting rod bushing clearance = C - Dp

Standard: 0.026 - 0.044 mm (0.0010 - 0.0017 in)

Limit: 0.057 mm (0.0022 in)

If it exceeds the limit, replace connecting rod assembly or connecting rod bushing and/or piston set with pin.

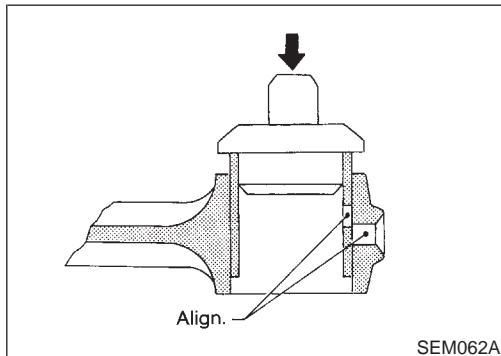

REPLACEMENT OF CONNECTING ROD BUSHING (SMALL END)


NJEM0073S10

1. Drive in small end bushing until it is flush with end surface of rod.

Be sure to align the oil holes.

2. After driving in small end bushing, ream the bushing. This is to ensure the clearance between connecting rod bushing and piston pin is the specified value.


Clearance between connecting rod bushing and piston pin: 0.026 - 0.044 mm (0.0010 - 0.0017 in)

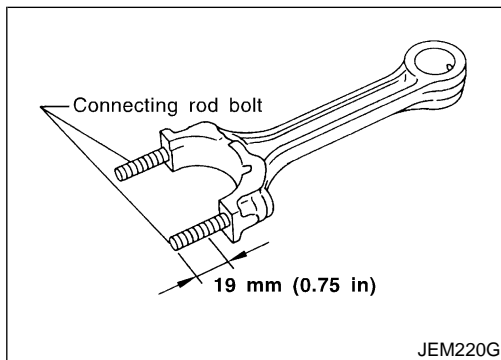

CONNECTING ROD BOLT DEFORMATION

NJEM0073S18

- Install nuts to connecting rod bolts. Check that the nut can be screwed smoothly on bolt threads by hand to the last thread on the bolt.
 - If the nut does not screw in smoothly, measure the outer diameter of the bolt thread at the point specified in the figure.
 - If a necked point is identified, measure at that point.
- Standard: 8.90 - 9.00 mm (0.3504 - 0.3543 in) dia.**
- Limit: 8.75 mm (0.3445 in) dia.**
- If the measurement exceeds the limit, replace connecting rod bolts and nuts.

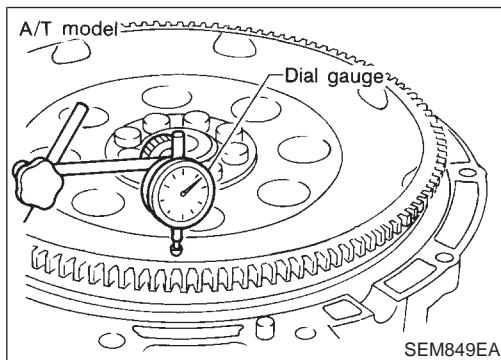

FLYWHEEL RUNOUT

NJEM0073S11

Runout (Total indicator reading):

Flywheel★


Less than 0.15 mm (0.0059 in)

★ Measurement position:

Approximately 145 mm (5.71 in) from the crankshaft center

CAUTION:

- The signal plate is built into the flywheel assembly. Be careful not to damage the signal plate, especially the teeth.
- Check the signal plate for deformation or cracks.
- Never place the flywheel assembly with the signal plate facing down.
- Keep any magnetized objects away from the signal plate.
- Do not allow any magnetic materials to contact the signal plate teeth.
- Do not surface flywheel. Replace as necessary.

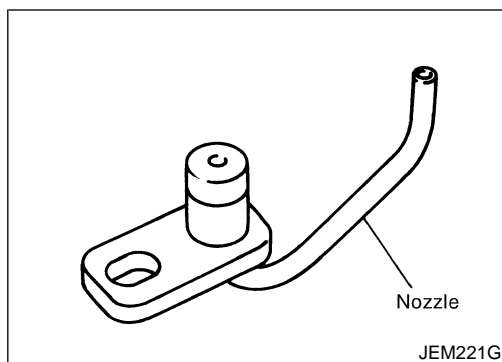**OIL JET**

NJEM0073S19


- Check nozzle for deformation or damage.
- Check oil passage for obstruction by blowing in air on nozzle side.
- If abnormality is found, clean or replace.

GI

MA

EM

LC

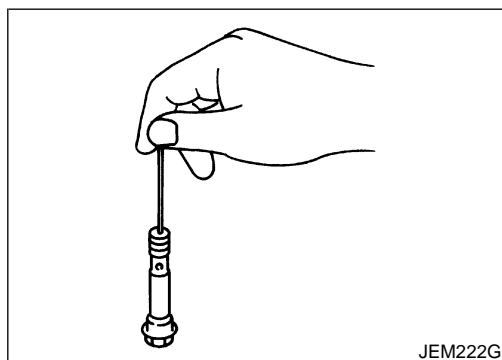**OIL JET RELIEF VALVE**

NJEM0073S20

Using a clean resin rod, press down on the check valve inside relief valve. Check for appropriate bounce/repulsion and smooth operation.

EC

FE

CL

MT

Assembly

NJEM0074

PISTON

NJEM0074S01


1. With using snap ring pliers, install snap rings to grooves at the rear side of the piston.
 - Install securely to fully fit into the groove.
2. Install piston to the connecting rod.
 - Heat the piston with an industrial drier to 60 to 70°C (140 to 158°F) so that the piston pin can be easily inserted by finger. Then, insert the piston pin from the front of the piston into the piston and into the connecting rod.

AT

AX

SU

BR

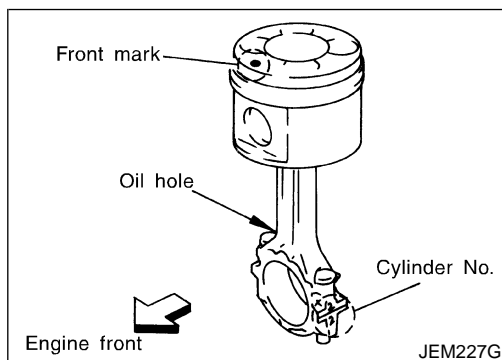


- Assemble so that the front mark on the piston top surface and cylinder No. stamped on connecting rod are positioned as shown in the figure.
3. Install snap ring on piston front.
 - Refer to step 1. above for notes for installation.
 4. Install piston rings using piston ring expander (commercial service tool).
 - **Be extremely careful to avoid any damage to the piston.**

ST

RS

BT

HA

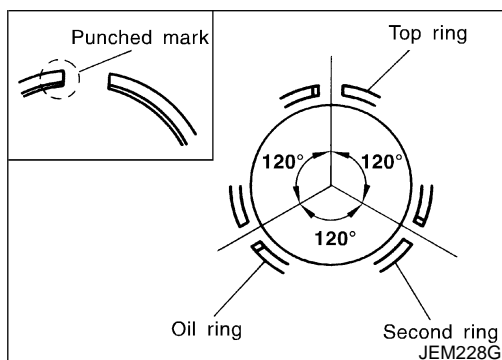

- Install top ring and second ring with the punched surface facing upward.





Identification mark:**Top ring R****Second ring 2R**

SC

EL



- Install rings so that three closed gap position 120° apart one another.
- Closed gaps do not need to face in a specific directions, as long as each are positioned 120° apart.

IDX

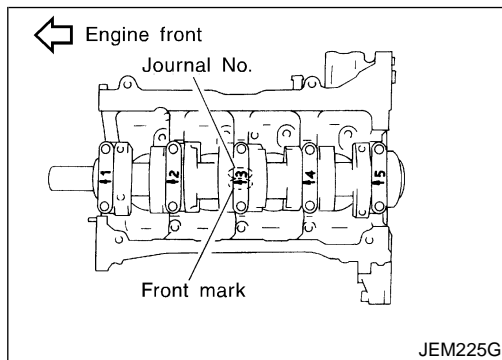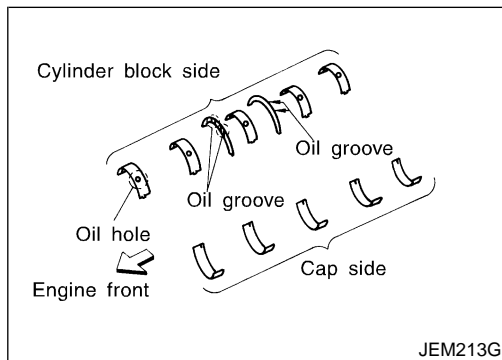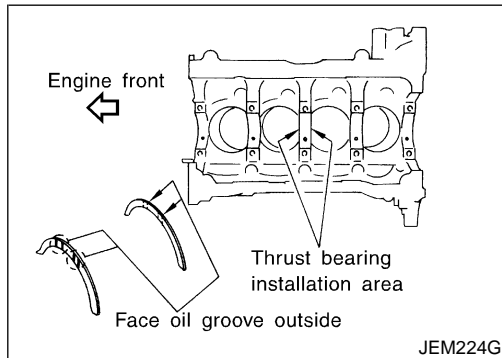
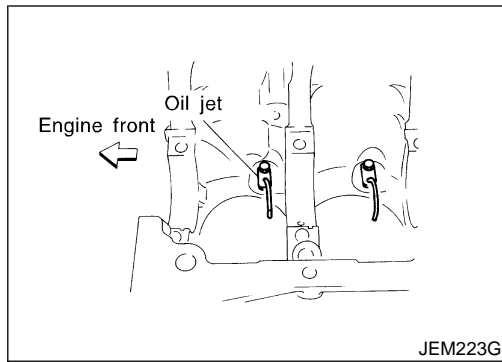
**CRANKSHAFT**

NJEM0074S02

1. Blow air sufficiently into the coolant passage, oil passage in the cylinder block, inside of crankshaft case, and inside of cylinder bores to remove any foreign materials.
2. Install oil jet relief valves.
3. Install oil jets.
4. Install main bearings and thrust bearings.
 - a. Remove debris, dust, and oil from the locations on the cylinder block and main bearing caps where bearings are installed.
 - b. Install thrust bearing on each side of cylinder block No. 3 housing.
 - Install thrust bearings with oil groove facing in the direction of the crankshaft arm (outside).
 - c. Be sure to install main bearings in the correct direction.
 - Make sure those with oil holes or oil grooves are mounted on the cylinder block side, and those without oil holes or oil grooves are on the main cap side.
 - Before installing, apply engine oil on the front (inner) surfaces of bearings. Do not apply oil to the back surfaces, but thoroughly clean them.
 - Align stopper notches on bearings and install.
 - Check the oil holes on cylinder block and those on bearings are aligned.
5. Install crankshaft to cylinder block.
 - Make sure crankshaft rotates smoothly by hand.
6. Install main bearing caps.
 - Identify main bearing caps by the punched mark. Install correctly, matching the journal No. on the bearing cap and the journal, with the front mark facing forward.
 - Main bearing caps are commonly processed with the cylinder block. Therefore, caps and cylinder block should be replaced as a set.

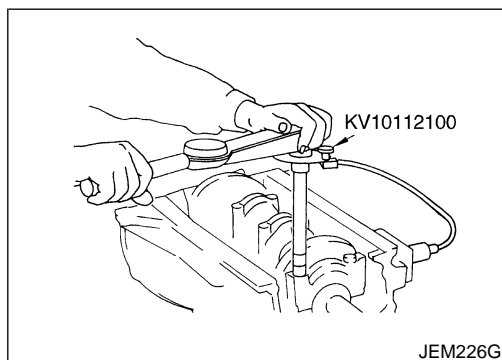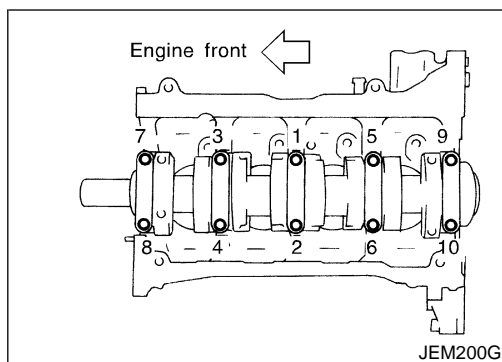


7. Check the main bearing cap bolts for deformation. Refer to EM-149, "MAIN BEARING CAP BOLT DEFORMATION".
8. Tighten the main bearing cap bolts according to the following procedure:
 - a. Apply engine oil to the threaded part and seat surface of each bolt.
 - b. Tighten to 25 to 30 N·m (2.5 to 3.1 kg·m, 18 to 22 ft·lb) in the numerical order shown in the figure.
 - c. Put alignment marks (with paint) on each bolt and the main bearing cap, all in the same direction. (when using a protractor)
 - d. Then, tighten 90° to 95° [target: 90°].
- **Always use either an angle wrench (SST) or protractor during angular tightening. Avoid tightening based on visual checks alone.**
- After tightening bolts to specified torque, make sure that crankshaft rotates smoothly.
- Check crankshaft end play. Refer to EM-140, "CRANKSHAFT END PLAY".
9. Check the outer diameter of connecting rod bolts. Refer to EM-150, "CONNECTING ROD BOLT DEFORMATION".
10. Install piston to connecting rod.

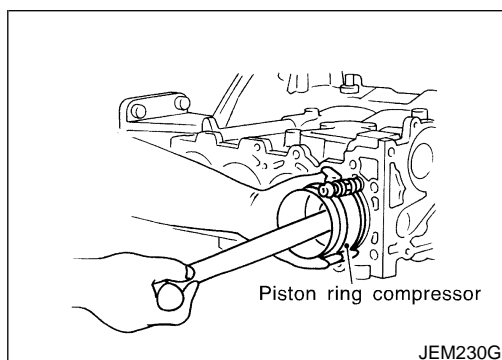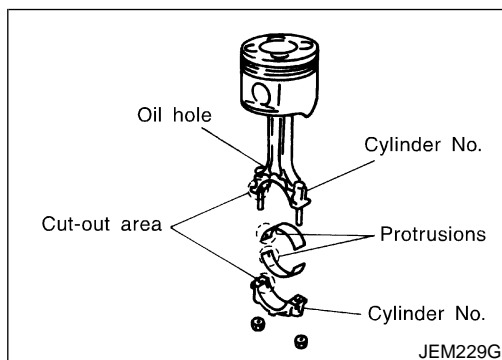


11. Install connecting rod bearing to connecting rod and connecting rod cap.
 - Before installing, apply engine oil on the front (inner) surface of bearing. Do not apply oil to the back surface, but thoroughly clean it.
 - Align stopper notches on connecting rod and protrusions on bearing and install.
12. Install piston and connecting rod assembly to crankshaft.
 - Set crankshaft pin of the installation location at BDC.
 - Match the cylinder No. of connecting rod to the location of cylinder.
 - Using piston ring compressor (Commercial Service Tool), install so that the front mark on the piston top surface faces in the direction of engine front.

Assembly (Cont'd)

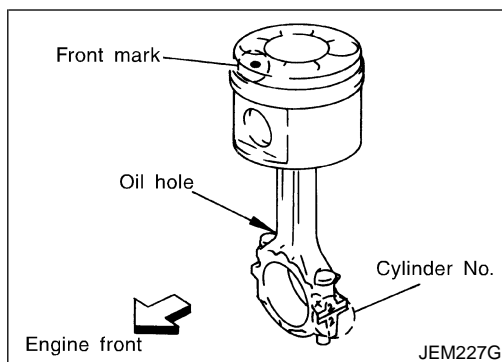


13. Install connecting rod caps.

- Match the cylinder No. punched on connecting rod and that on cap.
- Make sure that the front mark on connecting rod cap faces towards the front of the engine.

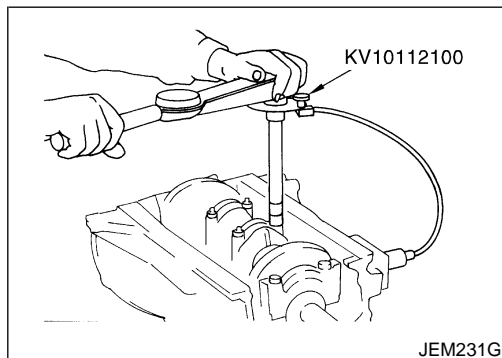

14. Tighten connecting rod nuts according to the following procedure:


- Apply engine oil on bolt threads and seat surface of nuts.
 - Tighten to 29 to 30 N·m (2.9 to 3.1 kg-m, 21 to 22 ft-lb).
 - Loosen completely to 0 N·m (0 kg-m, 0 in-lb).
 - Tighten to 19 to 20 N·m (1.9 to 2.1 kg-m, 14 to 15 ft-lb).
 - Tighten 120° to 125° [target: 120°]. (angular tightening)
- **Always use either an angle wrench (SST) or protractor during angular tightening. Avoid tightening based on visual checks alone.**

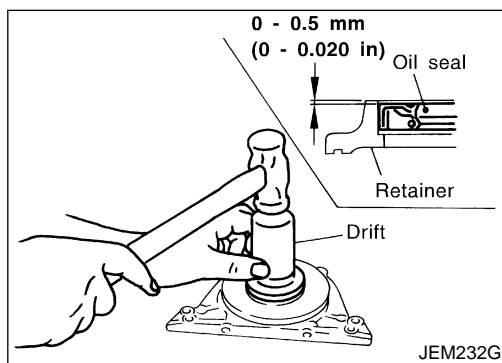

- After tightening nuts, check that crankshaft rotates smoothly.
- Check connecting rod side clearance. Refer to EM-140, "CONNECTING ROD SIDE CLEARANCE".


15. Force fit rear oil seal into rear oil seal retainer.

- Using a drift [105 mm (4.13 in) dia.], force fit so that the dimension is as specified in the figure.
- Avoid inclined fitting. Force fit perpendicularly.

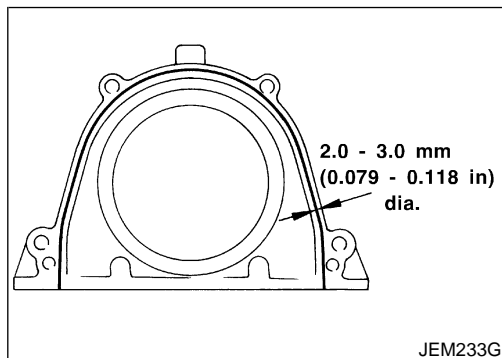


16. Install rear oil seal retainer.

- Apply a continuous bead of specified liquid gasket (Refer to EM-78, "Liquid Gasket Application Procedure".) on locations shown in the figure.

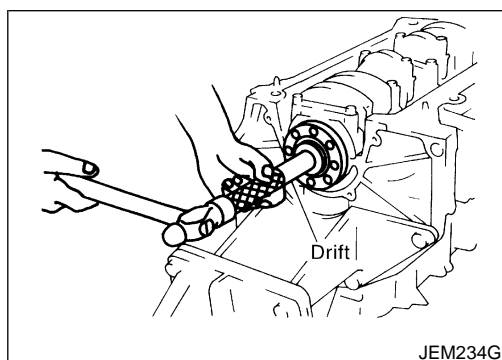

17. Install pilot pushing.

- Force fit with the drift [approx. 19 mm (0.75 in) dia.].

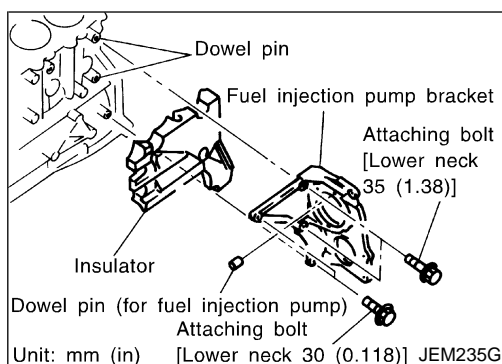

18. Install fuel injection pump bracket.

- Install insulator according to the shape of the block, and secure by placing the bracket against the insulator.
- Align the bracket with the dowel pins on the block to install.
- The two bolts used for dowel pins have a longer shanks than the other two.
- Check the protruding distance of the dowel pin for fuel injection pump.

Standard: 13.0 - 15.0 mm (0.512 - 0.591in)

19. Install parts to the engine in the reverse order of disassembly.

- Tighten bolts securing brackets of auxiliary components (A/C compressor, alternator) to the specified torque.

⚙️ : 57 - 65 N·m (5.8 - 6.7 kg-m, 42 - 48 ft-lb)

20. Remove engine from engine stand in the reverse order of assembly.


21. Install flywheel.

- Holding ring gear with ring stopper (SST), tighten securing bolts with torque-socket (size: Q8 E20, commercial service tool).
- Tighten bolts uniformly in a crisscross manner.


REPLACEMENT OF PILOT BUSHING

NJEM0074S03

1. Remove pilot bushing using tool or suitable tool.

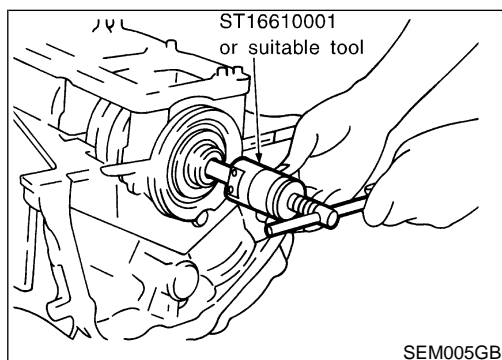

2. Install pilot bushing as shown.

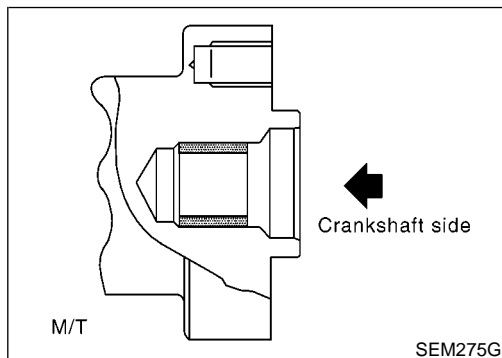

General Specifications

NJEM0075

Cylinder arrangement		In-line 4
Displacement cm ³ (cu in)		2,184 (133.27)
Bore and stroke mm (in)		86 x 94 (3.39 x 3.70)
Valve arrangement		DOHC
Firing order		1-3-4-2
Number of piston rings	Compression	2
	Oil	1
Number of main bearings		5
Compression ratio		18.0

Compression Pressure

Unit: kPa (bar, kg/cm², psi)/200 rpm ^{NJEM0076}

Compression pressure	Standard	2,844 (28.4, 29.0, 412)
	Minimum	2,452 (24.5, 25.0, 356)
	Differential limit between cylinders	490 (4.9, 5.0, 71)

Belt Deflection

NJEM0101


Applied belt	Belt specification	Belt deflection with 98 N (10 kg, 22 lb) force applied* mm (in)		
		New	Adjusted	Limit for re-tightening
Air conditioner compressor belt	HA type low edge belt	4 - 5 (0.16 - 0.20)	6 - 7 (0.24 - 0.28)	8.5 (0.335)
Alternator & water pump belt	HA type low-edge wide angle belt	9.0 - 10.5 (0.354 - 0.413)	11.0 - 12.5 (0.433 - 0.492)	16.5 (0.650)

*: Main engines cooled down

Cylinder Head

Unit: mm (in) ^{NJEM0077}

	Standard	Limit
Head surface distortion	Less than 0.03 (0.0012)	0.1 (0.004)

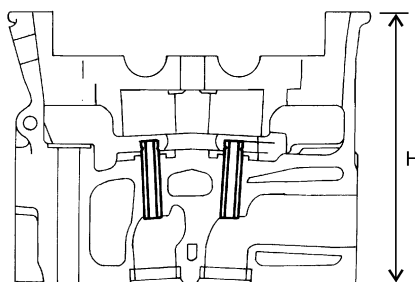


Nominal cylinder head height:
H = 153.9 - 154.1 mm (6.059 - 6.067 in)

JEM204G

Valve

VALVE

NJEM0078

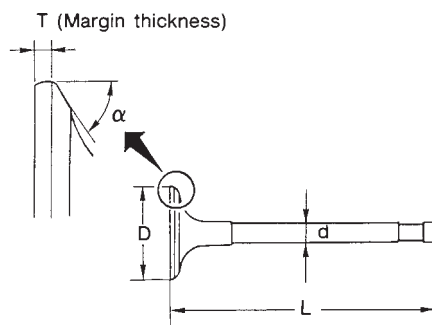NJEM0078S01
Unit: mm (in)

SEM188

Valve head diameter "D"	Intake	28.0 - 28.3 (1.102 - 1.114)
	Exhaust	26.0 - 26.3 (1.024 - 1.035)
Valve length "L"	Intake	106.72 (4.2016)
	Exhaust	106.36 (4.1874)
Valve stem diameter "d"	Intake	5.965 - 5.980 (0.2348 - 0.2354)
	Exhaust	5.945 - 5.960 (0.2341 - 0.2346)
Valve seat angle "α"	Intake	45°15' - 45°45'
	Exhaust	
Valve margin "T"	Intake	1.38 (0.0543)
	Exhaust	1.48 (0.0583)
Valve margin "T" limit		More than 0.5 (0.020)
Valve stem end surface grinding limit		Less than 0.2 (0.008)

VALVE CLEARANCE

NJEM0078S02
Unit: mm (in)

	Cold	Hot* (reference data)
Intake	0.24 - 0.32 (0.009 - 0.013)	0.274 - 0.386 (0.011 - 0.015)
Exhaust	0.26 - 0.34 (0.010 - 0.013)	0.308 - 0.432 (0.012 - 0.017)

*: Approximately 80°C (176°F)

AVAILABLE SHIMS

NJEM0078S03


Thickness mm (in)	Identification mark
2.10 (0.0827)	2.10
2.12 (0.0835)	2.12
2.14 (0.0843)	2.14
2.16 (0.0850)	2.16
2.18 (0.0858)	2.18
2.20 (0.0866)	2.20
2.22 (0.0874)	2.22
2.24 (0.0882)	2.24
2.26 (0.0890)	2.26
2.28 (0.0898)	2.28

SERVICE DATA AND SPECIFICATIONS (SDS)

YD

Valve (Cont'd)

Thickness mm (in)	Identification mark
2.30 (0.0906)	2.30
2.32 (0.0913)	2.32
2.34 (0.0921)	2.34
2.36 (0.0929)	2.36
2.38 (0.0937)	2.38
2.40 (0.0945)	2.40
2.42 (0.0953)	2.42
2.44 (0.0961)	2.44
2.46 (0.0969)	2.46
2.48 (0.0976)	2.48
2.50 (0.0984)	2.50
2.52 (0.0992)	2.52
2.54 (0.1000)	2.54
2.56 (0.1008)	2.56
2.58 (0.1016)	2.58
2.60 (0.1024)	2.60
2.62 (0.1031)	2.62
2.64 (0.1039)	2.64
2.66 (0.1047)	2.66
2.68 (0.1055)	2.68
2.70 (0.1063)	2.70
2.72 (0.1071)	2.72
2.74 (0.1079)	2.74

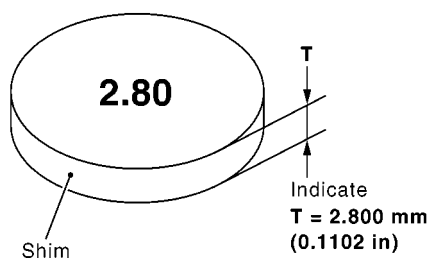

SEM252G

VALVE SPRING

NJEM0078S04

Free height mm (in)	Outer	42.3 (1.6654)
Pressure N (kg, lb) at height mm (in)	Outer	366 (37.3, 82.2) at 24.82 (0.9772)
Out-of-square mm (in)	Outer	1.5 (0.059)

VALVE LIFTER

NJEM0078S05
Unit: mm (in)

Valve lifter outer diameter	29.96 - 29.975 (1.1795 - 1.1801)
-----------------------------	----------------------------------

SERVICE DATA AND SPECIFICATIONS (SDS)

YD

Valve (Cont'd)


Lifter guide inner diameter	30.000 - 30.021 (1.1181 - 1.1819)
Clearance between lifter and lifter guide	0.025 - 0.061 (0.0010 - 0.0024)

GI

VALVE GUIDE

NJEM0078S06
Unit: mm (in)

MA

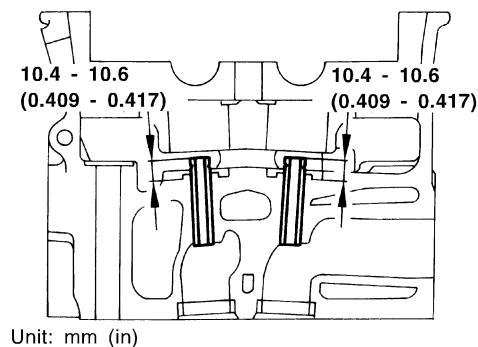

JEM156G

EM

LC

EC

FE

		Standard	Service
Valve guide	Outer diameter	10.023 - 10.034 (0.3946 - 0.3950)	10.223 - 10.234 (0.4025 - 0.4029)
Valve guide	Inner diameter (Finished size)	6.000 - 6.018 (0.2362 - 0.2369)	
Cylinder head valve guide hole diameter		9.975 - 9.996 (0.3927 - 0.3935)	10.175 - 10.196 (0.4006 - 0.4014)
Interference fit of valve guide		0.027 - 0.059 (0.0011 - 0.0023)	
		Standard	Max. tolerance
Stem to guide clearance	Intake	0.020 - 0.053 (0.0008 - 0.0021)	0.08 (0.0031)
	Exhaust	0.040 - 0.073 (0.0016 - 0.0029)	0.1 (0.004)
Valve deflection limit		0.2 (0.0079)	
Projection length		10.4 - 10.6 (0.4094 - 0.4173)	

CL

MT

AT

AX

SU

BR

ST

RS

BT

HA


SC

EL


IDX

Valve Seat




NJEM0079
Unit: mm (in)

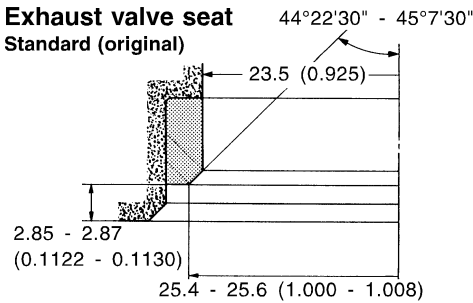

SEM260G

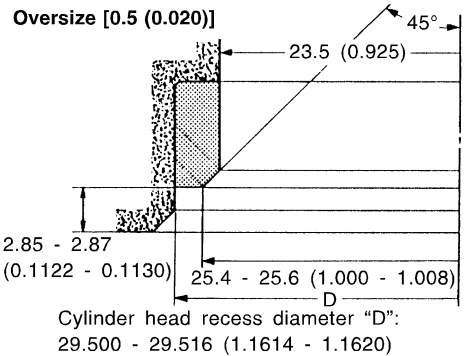

SEM261G

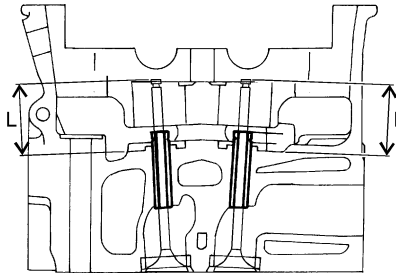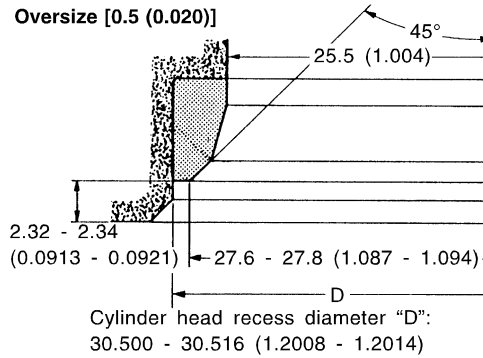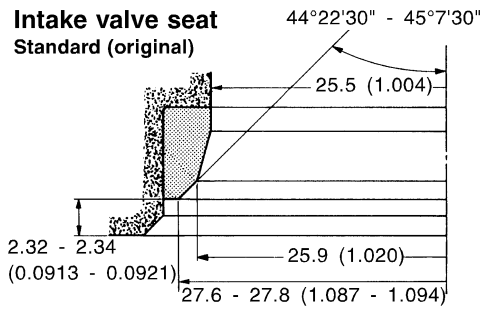

SEM262G

SEM263G

JEM253G


		Standard	Service
Cylinder head seat recess diameter (D)	Intake	37.000 - 37.016 (1.4567 - 1.4573)	37.500 - 37.516 (1.4764 - 1.4770)
	Exhaust	32.200 - 32.216 (1.2677 - 1.2683)	32.700 - 32.716 (1.2874 - 1.2880)
Valve seat interference fit	Intake	0.081 - 0.113 (0.0032 - 0.0044)	
	Exhaust	0.064 - 0.096 (0.0025 - 0.0038)	
Valve seat outer diameter (d)	Intake	37.097 - 37.113 (1.4605 - 1.4611)	37.597 - 37.613 (1.4802 - 1.4808)
	Exhaust	32.280 - 32.296 (1.2709 - 1.2715)	32.780 - 32.796 (1.2905 - 1.2912)
Height (h)	Intake	5.9 - 6.0 (0.232 - 0.236)	5.05 - 5.15 (0.1988 - 0.2028)
	Exhaust	5.9 - 6.0 (0.232 - 0.236)	4.95 - 5.05 (0.1949 - 0.1988)
Depth (H)		5.9 - 6.1 (0.232 - 0.240)	
Depth (L)	Intake	36.53 - 36.98 (1.4382 - 1.4559)	
	Exhaust	36.53 - 37.01 (1.4382 - 1.4571)	

Camshaft and Camshaft Bearing

=NJEM0080
Unit: mm (in)


	Standard	Limit
Camshaft journal to bearing clearance	0.045 - 0.086 (0.0018 - 0.0034)	0.1 (0.004)
Inner diameter of camshaft bearing	No. 1 30.500 - 30.521 (1.2008 - 1.2016) No. 2, 3, 4, 5 24.000 - 24.021 (0.9449 - 0.9457)	—
Outer diameter of camshaft journal	No. 1 30.435 - 30.455 (1.1982 - 1.1990) No. 2, 3, 4, 5 23.935 - 23.955 (0.9423 - 0.9431)	—
Camshaft runout [TIR*]	—	0.02 (0.0008)
Camshaft sprocket runout [TIR*]	Less than 0.15 (0.0059)	—
Camshaft end play	0.070 - 0.148 (0.0028 - 0.0058)	0.24 (0.0094)

*: Total indicator reading

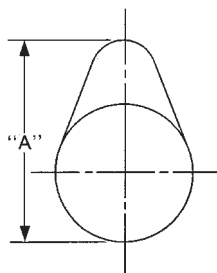

EM671


Cam height "A"	Intake	39.905 - 40.095 (1.5711 - 1.5785)
	Exhaust	39.905 - 40.905 (1.5711 - 1.6104)
Wear limit of cam height		0.15 (0.0059)

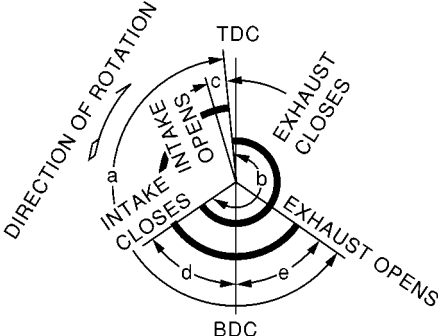Valve timing	 <p>The diagram illustrates the valve timing sequence for a four-stroke engine. It shows a circular camshaft rotation with a vertical line representing the Top Dead Center (TDC) position at the top and the Bottom Dead Center (BDC) position at the bottom. The camshaft rotates clockwise, as indicated by the 'DIRECTION OF ROTATION' arrow. The intake valve opens at point 'a' (just before TDC) and closes at point 'd' (just after BDC). The exhaust valve opens at point 'e' (just before BDC) and closes at point 'b' (just after TDC). The camshaft profile is shown with two lobes: the intake lobe and the exhaust lobe. The intake lobe is labeled 'INTAKE OPENS' and 'INTAKE CLOSING'. The exhaust lobe is labeled 'EXHAUST CLOSING' and 'EXHAUST OPENS'. The points 'a', 'b', 'c', 'd', and 'e' are marked on the camshaft profile. The 'TDC' label is at the top, and the 'BDC' label is at the bottom.</p>
	SEM254G

Unit: degree

a	b	c	d	e
220	224	4	42	46

Cylinder Block

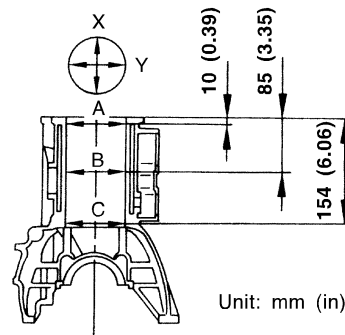NJEM0081
Unit: mm (in)


JEM207G

Surface flatness	Standard			Less than 0.03 (0.0012)
	Limit			0.10 (0.0039)
Cylinder bore	Inner diameter	Standard	Grade No. 1	86.000 - 86.010 (3.3858 - 3.3862)
			Grade No. 2	86.010 - 86.020 (3.3862 - 3.3866)
			Grade No. 3	86.020 - 86.030 (3.3866 - 3.3870)
		Wear limit	0.20 (0.0079)	
Out-of-round (X – Y)				Less than 0.015 (0.0006)
Taper (A – B – C)				Less than 0.010 (0.0004)
Main journal inner diameter grade (Without bearing)	Grade No. 0 Grade No. 1 Grade No. 2			66.654 - 66.663 (2.6242 - 2.6245) 66.663 - 66.672 (2.6245 - 2.6249) 66.672 - 66.681 (2.6249 - 2.6252)
Difference in inner diameter between cylinders	Limit			Less than 0.05 (0.0020)

Piston, Piston Ring and Piston Pin

NJEM0082

AVAILABLE PISTON

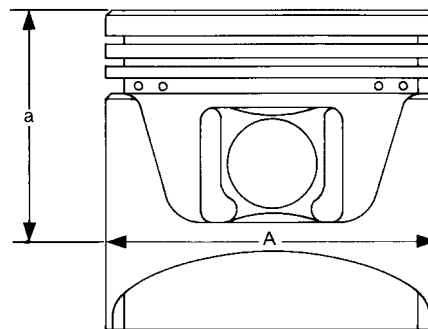NJEM0082S01
Unit: mm (in)

SEM882E

Piston skirt diameter “A”	Standard	Grade No. 1	85.940 - 85.950 (3.3835 - 3.3839)
		Grade No. 2	85.950 - 85.960 (3.3839 - 3.3842)
		Grade No. 3	85.960 - 85.970 (3.3842 - 3.3846)
		0.25 (0.0098) oversize (Service)	86.190 - 86.220 (3.3933 - 3.3945)
		0.50 (0.0197) oversize (Service)	86.440 - 86.470 (3.4031 - 3.4043)
“a” dimension			48.83 (1.9224)
Piston pin hole diameter			27.997 - 28.005 (1.1022 - 1.1026)

SERVICE DATA AND SPECIFICATIONS (SDS)

YD

Piston, Piston Ring and Piston Pin (Cont'd)

Piston clearance to cylinder block	0.050 - 0.070 (0.0020 - 0.0028)
------------------------------------	---------------------------------

PISTON RING

NJEM0082S02
Unit: mm (in)

		Standard	Limit
Side clearance	Top	0.05 - 0.09 (0.0020 - 0.0035)	0.1 (0.004)
	2nd	0.05 - 0.09 (0.0020 - 0.0035)	0.1 (0.004)
	Oil ring	0.03 - 0.07 (0.0012 - 0.0028)	—
End gap	Top	0.21 - 0.31 (0.0083 - 0.0122)	1.0 (0.039)
	2nd	0.37 - 0.52 (0.0134 - 0.0205)	1.0 (0.039)
	Oil (rail ring)	0.30 - 0.55 (0.0118 - 0.0217)	1.0 (0.039)

PISTON PIN

NJEM0082S03
Unit: mm (in)

Piston pin outer diameter		27.994 - 28.000 (1.1021 - 1.1024)
Interference fit of piston pin to piston		0.002 - 0.006 (0.0001 - 0.0002)
Piston pin to connecting rod bushing clearance	Standard	0.026 - 0.044 (0.0010 - 0.0017)
	Limit	0.057 (0.0022)

*: Values measured at ambient temperature of 20°C (68°F)

Connecting Rod

NJEM0083
Unit: mm (in)

Center distance		157.5 (6.201)
Bend [per 100 (3.94)]	Limit	0.12 (0.0047)
Torsion [per 100 (3.94)]	Limit	0.12 (0.0047)
Connecting rod small end inner diameter		30.080 - 31.000 (1.1842 - 1.2205)
Piston pin bushing inner diameter*		28.026 - 28.038 (1.1034 - 1.1039)
Connecting rod big end inner diameter		55.000 - 55.013 (2.1654 - 2.1659)
Side clearance	Standard	0.20 - 0.35 (0.0079 - 0.0138)
	Limit	0.35 (0.0138)

*: After installing in connecting rod

Crankshaft



NJEM0084
Unit: mm (in)

Main journal dia. "Dm" grade	Grade No. 0 Grade No. 1 Grade No. 2	62.967 - 62.975 (2.4790 - 2.4793) 62.959 - 62.967 (2.4787 - 2.4790) 62.951 - 62.959 (2.4784 - 2.4787)
Pin journal dia. "Dp"	Grade No. 0	51.968 - 51.974 (2.0460 - 2.0462)
	Grade No. 1	51.961 - 51.968 (2.0457 - 2.0460)
	Grade No. 2	51.954 - 51.961 (2.0454 - 2.0457)
Center distance "r"		46.97 - 47.03 (1.8492 - 1.8516)
Out-of-round (X - Y)	Standard	Less than 0.005 (0.0002)
Taper (A - B)	Standard	Less than 0.005 (0.0002)
Runout [TIR*]	Standard	Less than 0.05 (0.0020)
	Limit	Less than 0.10 (0.0039)

SERVICE DATA AND SPECIFICATIONS (SDS)

YD


Crankshaft (Cont'd)

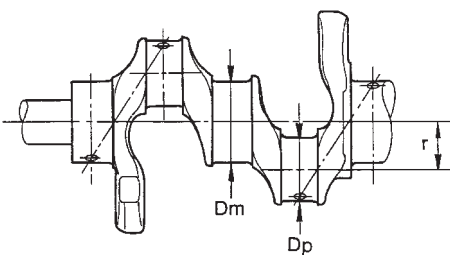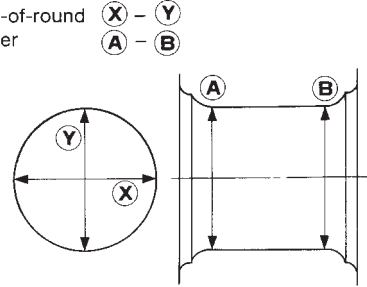Free end play	Standard	0.10 - 0.25 (0.0039 - 0.0098)
	Limit	0.30 (0.0118)
		
<p>Out-of-round $\text{X} - \text{Y}$ Taper $\text{A} - \text{B}$</p> 		

*: Total indicator reading

Available Main Bearing

NJEM0085

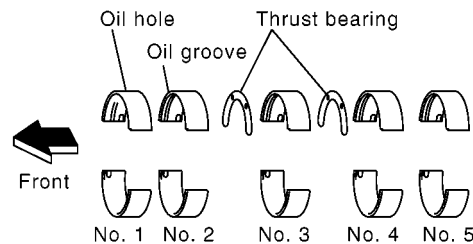

SEM255G

Grade number	Thickness "T" mm (in)	Width "W" mm (in)	Identification color
0	1.816 - 1.820 (0.0715 - 0.0717)	19.9 - 20.1 (0.783 - 0.791)	Black
1	1.820 - 1.824 (0.0717 - 0.0718)		Brown
2	1.824 - 1.828 (0.0718 - 0.0720)		Green
3	1.828 - 1.832 (0.0720 - 0.0721)		Yellow
4	1.832 - 1.836 (0.0721 - 0.0723)		Blue

UNDERSIZE

NJEM0085S01
Unit: mm (in)

	Thickness	Main journal diameter "Dm"
0.25 (0.0098)	1.949 - 1.953 (0.0767 - 0.0769)	Grind so that bearing clearance is the specified value.

Available Connecting Rod Bearing

NJEM0086

CONNECTING ROD BEARING

NJEM0086S01

Grade number	Thickness "T" mm (in)	Width "W" mm (in)	Identification color (mark)
0	1.492 - 1.496 (0.0587 - 0.0589)	22.9 - 23.1 (0.902 - 0.909)	Black
1	1.496 - 1.500 (0.0589 - 0.0591)		Brown
2	1.500 - 1.504 (0.0591 - 0.0592)		Green

SERVICE DATA AND SPECIFICATIONS (SDS)

YD

Available Connecting Rod Bearing (Cont'd)

UNDERSIZE

NJEM0086S02
Unit: mm (in)

	Thickness	Crank pin journal diameter "Dp"
0.08 (0.0031)	1.536 - 1.540 (0.0605 - 0.0606)	Grind so that bearing clearance is the specified value.
0.12 (0.0047)	1.556 - 1.560 (0.0613 - 0.0614)	
0.25 (0.0098)	1.621 - 1.625 (0.0638 - 0.0640)	

Miscellaneous Components

NJEM0087
Unit: mm (in)

Flywheel runout [TIR]*	Less than 0.15 (0.0059)
------------------------	-------------------------

*: Total indicator reading

BEARING CLEARANCE

NJEM0087S01
Unit: mm (in)

Main bearing clearance	Standard	0.039 - 0.066 (0.0015 - 0.0026)
	Limit	0.10 (0.0039)
Connecting rod bearing clearance	Standard	0.031 - 0.061 (0.0012 - 0.0024)
	Limit	0.09 (0.0035)